

Kikkerland FA08-WH

Kikkerland Handheld Small Personal Pocket Tornado Fan FA08-WH User Manual

Model: FA08-WH

1. INTRODUCTION

Thank you for purchasing the Kikkerland Handheld Small Personal Pocket Tornado Fan. This compact and portable fan is designed to provide personal cooling on the go. It features a slim profile, two wind speeds, and a rechargeable battery for convenient use.

Key Features:

- Ultra-portable and lightweight design
- USB rechargeable battery
- Two adjustable wind speeds
- Integrated power indicator light
- Includes a micro USB charging cable and wrist strap

2. SAFETY INFORMATION

Please read all safety instructions before using this product to ensure proper operation and to prevent damage or injury. Keep this manual for future reference.

- Do not immerse the fan in water or other liquids.
- Keep the fan away from open flames or high temperatures.
- Do not allow children to operate the fan without adult supervision.
- Do not insert fingers or foreign objects into the fan grille.
- Use only the provided micro USB cable for charging.
- Do not attempt to disassemble, repair, or modify the fan. Contact customer support if service is required.
- Store the fan in a cool, dry place when not in use.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Kikkerland Pocket Tornado Fan (FA08-WH)
- Micro USB Charging Cable
- Wrist Strap





Image: The Kikkerland Pocket Tornado Fan shown in its white retail box, indicating its compact size and USB rechargeable feature.

4. PRODUCT DIAGRAM

Familiarize yourself with the components of your Pocket Tornado Fan:



Image: A close-up view of the white Kikkerland Pocket Tornado Fan, highlighting the fan grille and the control button area.

1. **Fan Grille:** Protects the fan blades.
2. **Power Button / Speed Control:** Turns the fan on/off and adjusts speed.
3. **Charging Port (Micro USB):** For connecting the charging cable.
4. **Indicator Light:** Shows power and charging status.
5. **Wrist Strap Attachment Point:** For securing the included wrist strap.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the fan. Connect the micro USB charging cable to the fan's charging port and plug the other end into a standard USB power source (e.g., computer USB port, USB wall adapter). The indicator light will illuminate during charging and turn off or change color when fully charged. A full charge takes approximately 60 minutes.

5.2 Attaching the Wrist Strap

Thread the loop of the wrist strap through the attachment point on the fan. Pull the strap through the loop to secure it. This allows for convenient carrying and helps prevent accidental drops.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Speed Control

- 1. To turn the fan **ON** to Speed 1 (low), press the Power Button once.
- 2. To switch to Speed 2 (high), press the Power Button a second time.
- 3. To turn the fan **OFF**, press the Power Button a third time.

7. CHARGING INSTRUCTIONS

When the battery is low, the fan's performance may decrease, or the indicator light may signal a low battery. To recharge:

- 1. Connect the small end of the micro USB cable to the charging port on the fan.
- 2. Connect the standard USB end of the cable to a powered USB port (e.g., computer, wall adapter, power bank).
- 3. The indicator light will show the charging status. Refer to the product's specific light behavior for full charge indication.
- 4. Once fully charged, disconnect the charging cable. The fan provides approximately 100 minutes of operation on a full charge, depending on the speed setting.

8. MAINTENANCE

8.1 Cleaning

To maintain optimal performance and appearance:

- Ensure the fan is turned off and disconnected from any power source before cleaning.
- Wipe the exterior of the fan with a soft, dry cloth.
- Do not use liquid cleaners, aerosols, or abrasive materials, as these can damage the fan's finish or internal components.
- If dust accumulates on the fan grille, use a soft brush or compressed air to gently remove it.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the micro USB cable.
Fan does not charge.	Charging cable is faulty or not properly connected. USB power source is not active.	Ensure the micro USB cable is securely connected to both the fan and the power source. Try a different USB cable or power source.

Problem	Possible Cause	Solution
Weak airflow.	Low battery. Fan grille is obstructed.	Charge the fan. Ensure the fan grille is clear of any obstructions.

10. SPECIFICATIONS

Feature	Detail
Brand	Kikkerland
Model Number	KFA08WH
Color	White
Power Source	Battery Powered (USB Rechargeable)
Number of Speeds	2
Battery Life	Approximately 100 minutes (1 hour 40 minutes)
Charging Time	Approximately 60 minutes
Charging Port	Micro USB
Product Dimensions (D x W x H)	0.47" x 4.96" x 0.47"
Item Weight	0.1 Kilograms
Material	Acrylonitrile Butadiene Styrene (Plastic)
Voltage	5 Volts
Wattage	25 watts
Control Method	Button Control / Touch Sensor

11. WARRANTY AND SUPPORT

This product is covered by a limited manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or visit the official Kikkerland website. If you encounter any issues or require technical assistance, please contact Kikkerland customer support through their official channels.

Kikkerland Official Website: [kikkerland.com](https://www.kikkerland.com)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question