

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Amazon Basics](#) /

› [Amazon Basics D-Shaped Small Trash Can \(Model HD43010L\) - User Manual](#)

## Amazon Basics HD43010L

# Amazon Basics D-Shaped Small Trash Can (Model HD43010L) - User Manual

Model: HD43010L | Brand: Amazon Basics

## INTRODUCTION

This manual provides instructions for the Amazon Basics D-Shaped Small Trash Can with Soft-Close Step Pedal. This 10 liter / 2.6 gallon stainless steel trash can is designed for versatile use in various indoor environments such as kitchens, bathrooms, bedrooms, living rooms, or offices. Its features include a soft-close lid, a removable inner bucket, and a smudge-resistant exterior for easy maintenance and quiet operation.

## PRODUCT FEATURES

- **Convenient Size:** 10 liter / 2.6 gallon capacity, suitable for various rooms including bedrooms, offices, living rooms, and bathrooms.
- **Everyday Use:** Features a stay-open lid, removable inner bucket, and a carrying handle for easy trash disposal and cleaning.
- **Durable Construction:** Constructed with a smudge-resistant stainless steel exterior and a heavy-duty plastic inner bucket for lasting strength and reliability.
- **Quiet Operation:** Equipped with a manual foot lever and a soft-close lid, ensuring silent and smooth opening and closing to minimize noise.
- **Compact Dimensions:** Measures 11.4 x 11.8 x 20.7 inches (LxWxH), allowing it to fit easily into small spaces while providing ample storage.

# amazon basics



Removable heavy-duty plastic bucket with handle for waste disposal



Soft-close lid reduces noise from opening/closing



Works with a 2.6-gallon trash bag

**Brushed Stainless Steel**

**10 liter / 2.6 gallon**

Figure 1: Key features of the Amazon Basics D-Shaped Small Trash Can.

## SETUP

1. **Unpacking:** Carefully remove the trash can and all components from the packaging. Inspect for any damage.
2. **Insert Inner Bucket:** Place the black plastic inner bucket securely inside the stainless steel outer shell. Ensure it sits flush at the bottom.
3. **Attach Trash Bag:** Drape a 2.6-gallon (10 liter) trash bag over the rim of the inner bucket. Tuck the edges of the bag into the designated slots or under the rim to secure it and hide any excess.
4. **Positioning:** Place the trash can in your desired location. The D-shaped design allows it to sit flush against a wall or cabinet.





Figure 2: The Amazon Basics D-Shaped Small Trash Can ready for use.

## OPERATING INSTRUCTIONS

1. **Opening the Lid:** Gently press down on the foot pedal located at the base of the trash can. The lid will open smoothly.
2. **Disposing of Waste:** Place waste into the inner bucket.
3. **Closing the Lid:** Release the foot pedal. The soft-close mechanism will slowly and quietly lower the lid back into place. Avoid forcing the lid shut.
4. **Stay-Open Feature:** For extended use or when changing the trash bag, the lid can be manually lifted to a 90-degree angle where it will stay open. This provides convenient access to the inner bucket.



Figure 3: Operating the foot pedal for hands-free lid opening.

# Stay-Open & Soft-Close Lid



Figure 4: The stay-open and soft-close lid functionality.

## MAINTENANCE

- **Exterior Cleaning:** Wipe the stainless steel exterior with a soft, damp cloth and a mild, non-abrasive cleaner. Dry thoroughly to prevent water spots. The smudge-resistant finish helps maintain its appearance.
- **Inner Bucket Cleaning:** The removable inner bucket can be easily lifted out for cleaning. Wash with warm, soapy water and rinse thoroughly. Ensure it is completely dry before placing it back into the outer shell.
- **Odor Control:** To minimize odors, regularly empty the trash can and clean the inner bucket. Consider using odor-absorbing products if needed.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can damage the stainless steel finish and plastic components.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lid does not open when pedal is pressed.	Mechanism obstruction or damage.	Check for any debris obstructing the pedal mechanism. Ensure the inner bucket is correctly seated. If damaged, contact customer support.
Lid does not close softly or slams shut.	Soft-close mechanism issue or obstruction.	Ensure the lid is not bent or obstructed. The soft-close mechanism may require inspection if the issue persists.
Trash bag slips into the can.	Bag not properly secured.	Ensure the trash bag is fully draped over the inner bucket rim and tucked into any securing slots. Use the recommended 2.6-gallon size.
Unpleasant odors.	Infrequent emptying or cleaning.	Empty the trash can regularly. Clean the inner bucket thoroughly with soap and water. Consider using baking soda or activated charcoal for odor absorption.

## SPECIFICATIONS

Feature	Detail
Brand	Amazon Basics
Model Number	HD43010L
Capacity	10 Liters / 2.6 Gallons
Color	Silver
Material	Stainless Steel (Exterior), Heavy-Duty Plastic (Inner Bucket)
Opening Mechanism	Step-On Pedal
Special Features	Soft-Close Lid, Removable Inner Bucket, Carrying Handle, Smudge-Resistant
Shape	D-Shaped
Product Dimensions (LxWxH)	11.4 x 11.8 x 20.7 inches (approx. 29 x 30 x 52.6 cm)
Item Weight	3.86 Pounds (approx. 1.75 kg)
GTIN / UPC	192233059785



Figure 5: Product dimensions for optimal placement.

## WARRANTY AND SUPPORT

This Amazon Basics product is backed by a limited warranty. For specific warranty details, return policies, or technical support, please refer to the documentation included with your purchase or visit the official Amazon Basics support page on Amazon.com. Please have your model number (HD43010L) and purchase information ready when contacting support.