



Manuals.plus /

› AIDITIYMI /

› AIDITIYMI AKB69680428 Replacement Remote Control User Manual for LG LCD TV Models

AIDITIYMI AKB69680428

AIDITIYMI AKB69680428 Replacement Remote Control User Manual

For LG LCD TV Models: 32LH240H, 32LH250H, 37LH25R, 32LH255H, 37LH250H, 37LH255H, 37LH260H, 37LH265H, 42LH250H, 42LH255H, 42LH260H, 47LH250H, 32LH25R, 42LH25R, Sac34026004, 47ly3d

1. INTRODUCTION

This document provides detailed instructions for the AIDITIYMI AKB69680428 replacement remote control. This remote is designed to function as a direct replacement for the original remote controls of various LG LCD TV models. It requires no programming or pairing, offering immediate functionality upon battery installation.

2. PRODUCT OVERVIEW

The AIDITIYMI AKB69680428 remote control is an infrared (IR) device designed for ease of use. It features standard television control buttons, including power, input selection, channel navigation, volume adjustment, and menu access.



Figure 2.1: Front view of the AIDITIYMI AKB69680428 remote control, showing all buttons and layout.



Figure 2.2: Back view of the remote control with the battery compartment cover removed, illustrating where to insert batteries.

3. SETUP INSTRUCTIONS

The AIDITIYMI AKB69680428 remote control is designed for immediate use without any complex setup procedures. Follow these steps to begin operation:

1. **Open the Battery Compartment:** Locate the battery compartment on the back of the remote control. Slide the cover downwards or press the latch and lift to open it.
2. **Insert Batteries:** Insert two (2) new 1.5V AAA alkaline batteries into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries align correctly with the markings inside the compartment.
3. **Close the Battery Compartment:** Replace the battery compartment cover by sliding it back into place until it clicks securely.
4. **Test Functionality:** Point the remote control towards your LG LCD TV and press the **POWER** button. The TV should respond. No further programming or pairing is required.

Note: Batteries are not included with the remote control.

4. OPERATING INSTRUCTIONS

This remote control provides full functionality for compatible LG LCD TVs. Below is a general guide to its primary functions:

- **POWER Button:** Turns the TV on or off.
- **INPUT Button:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **Number Buttons (0-9):** Directly select TV channels.
- **VOL +/- Buttons:** Adjust the volume level.
- **CH +/- Buttons:** Change TV channels sequentially.
- **MUTE Button:** Mutes or unmutes the TV audio.
- **MENU Button:** Accesses the TV's main menu for settings and options.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Navigate through TV menus and confirm selections.
- **RETURN Button:** Returns to the previous menu or screen.
- **FLASHBK Button:** Recalls the previous channel.
- **RATIO Button:** Adjusts the screen aspect ratio.
- **CC Button:** Activates or deactivates Closed Captions.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain TV menus or applications, as indicated on the TV screen.

5. MAINTENANCE

To ensure optimal performance and longevity of your remote control, follow these maintenance guidelines:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Handling:** Avoid dropping the remote control or subjecting it to strong impacts, which can damage its internal circuitry.

6. TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new 1.5V AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective range and pointing the remote directly at the TV.
- **Specific Buttons Not Working:**
 - This could indicate a faulty button or low battery power. Try replacing the batteries first.
 - Clean the remote control, especially around the unresponsive buttons, to remove any debris.
- **TV Not Responding to Any Remote:**
 - Ensure the TV itself is powered on and functioning correctly.
 - Try unplugging the TV from the power outlet for a few minutes, then plug it back in. This can sometimes reset the TV's IR receiver.

7. SPECIFICATIONS

| | |
|---------------------------|---|
| Model Number | AKB69680428 |
| Brand | AIDITIYMI |
| Compatible Devices | LG LCD Televisions (Specific models listed in Introduction) |
| Power Source | 2 x 1.5V AAA Alkaline Batteries (not included) |
| Dimensions | 7 x 2 x 0.6 inches (approximately) |
| Item Weight | 2.39 ounces (approximately) |
| Color | Black |

8. WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided in the product details. For any support inquiries or issues not covered in this manual, please refer to the seller's contact information or the platform where the product was purchased.

