

Sony PlayStation 2 Slim

Sony PlayStation 2 Slim Console (Renewed) - Ceramic White User Manual

Model: PlayStation 2 Slim

INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Sony PlayStation 2 Slim Console, Ceramic White (Renewed). The PlayStation 2 Slim is designed for playing PlayStation 2 games and DVD video content, offering a compact and portable entertainment experience.

The console features a compact design, DVD playback capabilities, digital surround sound, two memory card slots, and an integrated Ethernet port for online play (where supported by games and services).

SETUP

Follow these steps to connect your PlayStation 2 Slim console:

- Connect the AC Adaptor:** Plug the AC adaptor cable into the DC IN 8.5V port on the back of the console. Connect the other end of the AC adaptor to a standard electrical outlet.
- Connect the AV Cable:** Insert the multi-out AV cable into the AV MULTI OUT port on the back of the console. Connect the yellow (video), white (left audio), and red (right audio) RCA connectors to the corresponding input jacks on your television or display. If your TV supports S-Video or Component Video, use the appropriate cables (sold separately) for improved picture quality.
- Connect Controllers:** Plug your PlayStation 2 controllers into the controller ports on the front of the console.
- Insert Memory Cards:** For saving game progress, insert PlayStation 2 memory cards into the memory card slots on the front of the console. Ensure they are inserted correctly.
- Optional - Ethernet Connection:** If you plan to use online features, connect an Ethernet cable from your router or modem to the NETWORK connector on the back of the console.



Image: The PlayStation 2 Slim Console in Ceramic White. This image displays the compact design of the console, highlighting its front and side profiles where controller and memory card ports are located, as well as the disc tray.

OPERATING INSTRUCTIONS

Powering On and Off

- To power on the console, press the **POWER** button located on the front. The indicator light will turn green.
- To power off, press the **POWER** button again. The indicator light will turn red.

Playing Games and DVDs

1. **Open the Disc Tray:** Press the **OPEN** button on the front of the console to open the disc tray cover.
2. **Insert Disc:** Place a PlayStation 2 game disc or a DVD video disc onto the disc tray spindle, label side up. Gently press down on the center of the disc until it clicks into place.
3. **Close the Disc Tray:** Close the disc tray cover until it clicks shut.
4. **Start Game/DVD:** If the console is already on, the game or DVD should start automatically. If not, navigate to the "Browser" or "System Configuration" menu using your controller and select the disc icon to start.

Using Memory Cards

Memory cards are essential for saving game progress. Ensure a memory card is inserted before starting a game that requires saving. Manage saved data through the "Browser" menu.

Online Play (Ethernet)

For games that support online multiplayer or features, connect an Ethernet cable to the console's NETWORK port. Configuration for online play is typically handled within the specific game's settings or through the PlayStation 2 Network Adaptor (if applicable for your model and region).

MAINTENANCE

Cleaning the Console

- Always power off and unplug the console before cleaning.
- Use a soft, dry cloth to wipe the exterior of the console. Do not use liquid cleaners, solvents, or abrasive materials.
- Keep ventilation openings clear of dust and debris to prevent overheating. Use a soft brush or compressed air to gently clear vents.

Disc Care

- Handle discs by their edges to avoid fingerprints and scratches.
- Store discs in their cases when not in use.
- To clean a disc, wipe gently from the center outwards with a soft, lint-free cloth. Do not use abrasive cleaners.

TROUBLESHOOTING

- **No Power:**
 - Ensure the AC adaptor is securely connected to both the console and a working electrical outlet.
 - Check if the power outlet is functional by plugging in another device.
- **No Video/Audio Output:**
 - Verify that the AV cable is correctly connected to both the console and the TV.
 - Ensure your TV is set to the correct input channel (e.g., AV1, Component, HDMI if using an adaptor).
 - Check TV volume and mute settings.
- **Disc Read Errors:**
 - Ensure the disc is clean and free of scratches.
 - Make sure the disc is inserted correctly, label side up, and the tray is fully closed.
 - Try a different game or DVD to determine if the issue is with the disc or the console.
 - For renewed consoles, disc reading issues can sometimes occur. If persistent, refer to warranty information.
- **Controller Not Responding:**
 - Ensure the controller is securely plugged into the controller port.
 - Try a different controller or a different port to isolate the issue.

SPECIFICATIONS

- **Model:** PlayStation 2 Slim (SCPH-7xxx series, specific model may vary for renewed units)
- **Color:** Ceramic White
- **Dimensions (Approx.):** 12.56 x 10.16 x 3.15 inches (31.9 x 25.8 x 8.0 cm)
- **Weight (Approx.):** 3.24 pounds (1.47 kg)
- **Features:**
 - DVD playback
 - Digital surround sound support
 - 2 memory card slots
 - Integrated Ethernet port for online play
 - Ultra-slim design, approximately 2.8 cm thick

WARRANTY AND SUPPORT

As this is a renewed product, warranty terms are typically provided by the seller or the Amazon Renewed program. Please refer to the specific warranty information provided at the time of purchase or contact the seller directly for support regarding defects or operational issues.

For general information about the PlayStation 2 system, you may visit the official Sony PlayStation support website, though support for legacy systems may be limited.

This manual is for informational purposes only. Specifications are subject to change without notice.