

VTech 80-600904

VTech 2-in-1 Touch-Laptop Instruction Manual

Model: 80-600904

INTRODUCTION

The VTech 2-in-1 Touch-Laptop is an interactive learning computer designed for children aged 3-6 years. This versatile device easily transforms between a traditional laptop with an ABC keyboard and a tablet with a touch screen, offering a dynamic learning experience. Guided by the friendly characters Violet and Scout, children can explore a variety of educational activities across five different game modes.

This manual provides essential information on setting up, operating, maintaining, and troubleshooting your 2-in-1 Touch-Laptop to ensure a fun and educational experience.



Figure 1: The VTech 2-in-1 Touch-Laptop in its primary laptop configuration, displaying its screen, keyboard, and colorful design.

SETUP

Battery Installation

The VTech 2-in-1 Touch-Laptop requires 2 Lithium Ion batteries (included). For optimal performance, ensure fresh batteries are installed correctly.

1. Locate the battery compartment on the underside of the device.
2. Using a screwdriver, open the child-safe battery compartment cover.
3. Insert 2 Lithium Ion batteries, ensuring correct polarity (+/-).
4. Replace the cover and tighten the screw securely.

Initial Power On

After installing batteries, turn on the device using the power switch. The laptop will initiate with its default settings. Please note that this version of the VTech 2-in-1 Touch-Laptop operates in **German language only**, as indicated in the product specifications.

OPERATING INSTRUCTIONS

Transforming Between Modes

The 2-in-1 Touch-Laptop can be easily converted:

- **Laptop Mode:** Keep the screen upright, revealing the full ABC keyboard.
- **Tablet Mode:** Fold the screen flat against the keyboard base to activate the touch screen functionality.



Figure 2: The device in laptop mode, ready for keyboard interaction.



Figure 3: The device in tablet mode, demonstrating touch screen interaction.

Game Modes and Activities

The laptop features 5 distinct game modes and 10 engaging activities:

- **Letters:** Learn letters and their corresponding sounds.
- **Animal ABC:** Each letter is associated with an animal. Pop letter bubbles to reinforce learning.
- **Numbers:** Explore numbers from 1 to 10.
- **Messages:** Receive and send funny messages with Scout and Violet. Practice texting or replying with emojis.
- **Games:** Discover interesting animal facts, complete image sections by pressing the correct letter key, and find hidden objects.
- **Music:** Enjoy 2 songs focused on letters and numbers, and listen to 13 different melodies.

Controls and Features

- **10 Number Keys & 26 Letter Keys:** For interactive learning and input.
- **Paw Button:** A special button for additional interactive fun.
- **Mode Switch:** To navigate between different game modes.
- **Fun Button:** Activates various entertaining responses.
- **LCD Screen:** Displays all activities and animations.
- **Volume Control:** Adjust the sound level to a comfortable setting.
- **Automatic Switch-Off:** The device will automatically turn off after a period of inactivity to conserve battery life.
- **Practical Carry Handle:** For easy portability.

Customization and Parent Control

The VTech 2-in-1 Touch-Laptop allows for a personalized learning experience. You can save your child's name within the parent control area. This section also provides options for managing settings and monitoring usage.



Figure 4: A child engaging with the VTech 2-in-1 Touch-Laptop, demonstrating its user-friendly design for young learners.



Figure 5: A child holding the VTech 2-in-1 Touch-Laptop, highlighting its portability and integrated carry handle.

Cleaning

To clean the device, wipe it with a slightly damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the device is dry before use.

Battery Care

If the device will not be used for an extended period, remove the batteries to prevent leakage and corrosion. Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Batteries are low or incorrectly installed.	Check battery polarity. Replace with fresh batteries.
Screen is blank or flickering.	Low battery power or temporary software glitch.	Replace batteries. Turn the device off and on again.
No sound or low sound.	Volume is set too low or muted.	Adjust the volume control.
Device is speaking in German.	This product version is designed for the German market.	The VTech 2-in-1 Touch-Laptop (Model 80-600904) operates exclusively in German. Language cannot be changed.

SPECIFICATIONS

Feature	Detail
Model Number	80-600904
Product Dimensions	2.05 x 10.08 x 6.1 inches
Item Weight	1.3 pounds
Batteries	2 Lithium Ion batteries (included)
Language	German
Recommended Age	3-6 years

WARRANTY AND SUPPORT

For information regarding warranty, product support, or to purchase replacement parts, please visit the official VTech website or contact VTech customer service. Contact details can typically be found on the VTech official website or on the product packaging.

VTech Official Website: www.vtechkids.com

