

## **Sanus ATVS1-B1**

# **Sanus Accents Universal TV Stand User Manual**

Model: ATVS1-B1 (008-00-0017)

## **INTRODUCTION**

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your Sanus Accents Universal TV Stand, model ATVS1-B1. Designed for TVs up to 60 inches, this stand offers a stable and versatile solution for your television display needs, featuring swivel capabilities and height adjustment.



Figure 1: Sanus Accents Universal TV Stand (ATVS1-B1)

This image displays the complete Sanus Accents Universal TV Stand. It features a wide, flat black base for stability, a central vertical support column, and a black VESA mounting plate with two vertical arms extending upwards, ready to attach to a television. The overall design is sleek and minimalist, in a matte black finish.

## SETUP AND ASSEMBLY

Before beginning assembly, ensure all components are present and undamaged. Refer to the included hardware pack for specific fasteners. A Phillips head screwdriver and possibly a wrench may be required (not included).

### Component Checklist:

- Base Plate

- Support Column
- TV Mounting Plate
- Vertical TV Brackets (2)
- Hardware Pack (screws, washers, spacers, nuts)

## Assembly Steps:

1. **Attach Support Column to Base:** Secure the main support column to the base plate using the designated screws from the hardware pack. Ensure it is firmly tightened to prevent wobbling.
2. **Assemble TV Mounting Plate:** Connect the TV mounting plate to the top of the support column. This connection typically involves bolts and nuts, allowing for the swivel mechanism.
3. **Attach Vertical TV Brackets to TV:** Carefully place your television face down on a soft, clean surface. Attach the two vertical TV brackets to the VESA mounting holes on the back of your TV using the appropriate screws, washers, and spacers from the hardware pack. Ensure the brackets are level and securely fastened.
4. **Mount TV to Stand:** With assistance, carefully lift the television and hook the attached vertical brackets onto the TV mounting plate on the stand. Secure the TV in place using the provided locking mechanisms or screws to prevent accidental dislodgement.
5. **Cable Management:** Utilize any integrated cable management features within the support column to route and conceal TV and component cables for a tidy appearance.

**Important: Always ensure the TV stand is placed on a stable, level surface. Do not exceed the maximum weight capacity of the stand (refer to specifications).**

## OPERATING INSTRUCTIONS

The Sanus Accents Universal TV Stand offers convenient features for optimal viewing.

### Swivel Function:

The stand allows for a swivel range of up to 74 degrees (37 degrees left and 37 degrees right) without the need for tools. To adjust the viewing angle, gently grasp the sides of your television and rotate it to the desired position. Ensure no cables are snagged or pulled during rotation.

### Height Adjustment:

The TV height can be adjusted up to 4.7 inches to accommodate soundbars, sound bases, or other components placed below the TV. This adjustment is typically performed during the initial setup by selecting different mounting points on the vertical TV brackets or the main support column. Refer to the assembly instructions for specific height adjustment mechanisms.

## MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your TV stand.

- **Cleaning:** Use a soft, dry cloth to wipe down the stand. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by drying thoroughly. Avoid abrasive cleaners or solvents, as they may damage the finish.
- **Hardware Check:** Periodically check all screws and bolts to ensure they remain tight. Loose connections can affect stability and safety.
- **Swivel Mechanism:** The swivel mechanism is designed for smooth operation. Avoid forcing the TV if it feels stiff; check for obstructions. No lubrication is typically required.

## TROUBLESHOOTING

If you encounter issues with your Sanus Accents Universal TV Stand, refer to the following common solutions:

Problem	Possible Cause	Solution
Stand feels unstable or wobbly.	Loose connections; uneven surface; TV too heavy.	Ensure all screws and bolts are tightened. Place stand on a level surface. Verify TV weight is within stand's capacity.
TV does not swivel smoothly.	Obstruction; excessive weight; mechanism issue.	Check for cables or objects obstructing movement. Ensure TV weight is appropriate. Contact support if issue persists.
Cables are visible and messy.	Cable management not utilized.	Route cables through the integrated cable management channels in the support column. Use cable ties if necessary.

If the problem persists after attempting these solutions, please contact Sanus customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Sanus
Model Number	ATVS1-B1 (008-00-0017)
Compatible TV Size	Up to 60 Inches
Item Weight	15.82 pounds
Product Dimensions (L x W x H)	12.2 x 27.7 x 3 inches (packaged)
Color	Black
Material	Metal
Mounting Type	Tabletop Mount
Movement Type	Swivel
Maximum Swivel Angle	74 Degrees (37 degrees left/right)
Height Adjustment	Up to 4.7 inches
UPC	793795531070

## WARRANTY AND SUPPORT

Sanus products are designed and manufactured to the highest quality standards. For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official Sanus website.

For technical assistance, missing parts, or any questions not covered in this manual, please contact Sanus Customer Support:

**Website:** [www.sanus.com](http://www.sanus.com)

**Phone:** Refer to the Sanus website for regional contact numbers.

Please have your model number (ATVS1-B1) and purchase date available when contacting support.

© 2025 Sanus. All rights reserved. Information subject to change without notice.