

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Formuler](#) /

› [Formuler Z7+ Dreamlink T1 Plus T2 Smart Programmable Learning Remote User Manual](#)

## Formuler Z7+

# Formuler Z7+ Dreamlink T1 Plus T2 Smart Programmable Learning Remote User Manual

Model: Z7+

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Formuler Z7+ Dreamlink T1 Plus T2 Smart Programmable Learning Remote. This remote control is designed for use with various Formuler and Dreamlink set-top boxes, offering an ergonomic design and infrared connectivity. It features a learning function to control your television's basic functions.

## SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, high temperatures, or high humidity.
- Avoid dropping or subjecting the remote to strong impacts.
- Do not attempt to disassemble or modify the remote control. This will void any warranty.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations. Do not mix old and new batteries, or different types of batteries.

## PACKAGE CONTENTS

Ensure the following items are present in your package:

- Formuler Z7+ Dreamlink T1 Plus T2 Smart Programmable Learning Remote
- *Note: Batteries are not included and must be purchased separately.*

## SETUP

### 1. Inserting Batteries

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the indicators inside the compartment.
4. Close the battery compartment cover securely.

## 2. Learning Function (TV Control)

The remote control features a learning function, allowing it to control basic functions of your television, such as Power, Volume Up, Volume Down, and Input Source. This eliminates the need for your TV's original remote for these common actions.



Image: The Formuler Z7+ remote control, emphasizing its smart learning capabilities for TV functions.

1. Press and hold the **TV** button on the Formuler remote for approximately 3-5 seconds until the **TV** LED indicator lights up and stays solid. This indicates the remote is in learning mode.
2. Place the Formuler remote and your TV's original remote control head-to-head, approximately 1-3 cm apart.
3. On the Formuler remote, press the button you wish to program (e.g., **TV Power**). The **TV** LED will start blinking slowly.
4. On your TV's original remote, press and hold the corresponding button (e.g., **Power**).
5. The **TV** LED on the Formuler remote will blink rapidly three times and then stay solid, indicating successful learning.
6. Repeat steps 3-5 for other TV functions you wish to program (e.g., **VOL+**, **VOL-**, **SOURCE**).
7. After programming all desired buttons, press the **TV** button on the Formuler remote once to exit learning mode. The **TV** LED will turn off.

Test the programmed buttons to ensure they control your TV correctly.

## OPERATING THE REMOTE

The Formuler Z7+ remote is designed for intuitive control of your compatible set-top box and learned TV functions. Below is an overview of the remote's layout and key functions.





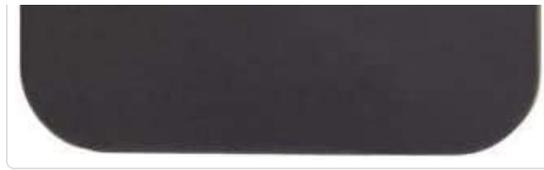


Image: Detailed view of the Formuler Z7+ remote control button layout.

## Mode Selection

- **TV Button:** Switches the remote to TV control mode for learned functions.
- **STB Button:** Switches the remote to Set-Top Box control mode (default).

## Basic Navigation and Control

- **Power (STB):** Turns the set-top box on or off.
- **Number Pad (0-9):** Used for direct channel input or numerical selections.
- **Directional Pad (Up, Down, Left, Right):** Navigates menus and lists.
- **OK Button:** Confirms selections or opens information.
- **BACK Button:** Returns to the previous screen or menu.
- **EXIT Button:** Exits the current menu or application.
- **VOL+ / VOL-:** Adjusts the volume.
- **CH+ / CH-:** Changes channels.

## Special Function Buttons

- **INFO:** Displays program information.
- **MENU:** Opens the main menu of the set-top box.
- **EPG:** Accesses the Electronic Program Guide.
- **FAVORITE:** Accesses favorite channel lists.
- **GROUP:** Manages channel groups.
- **Color Buttons (Red, Green, Yellow, Blue):** Perform context-sensitive functions as indicated on-screen.
- **Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Control media playback.

## MAINTENANCE

---

### Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Do not use abrasive cleaners, alcohol, or solvents, as these can damage the surface.

### Battery Replacement

When the remote control's response becomes sluggish or inconsistent, it is time to replace the batteries. Follow the 'Inserting Batteries' steps in the Setup section. Always replace both batteries at the same time with new ones of the same type (AAA).

### Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

## TROUBLESHOOTING

- **Remote not responding:**
  - Check if the batteries are inserted correctly and are not depleted. Replace if necessary.
  - Ensure there are no obstructions between the remote and the device (STB or TV).
  - Confirm the remote is in the correct mode (STB for set-top box, TV for television).
- **Learning function not working:**
  - Ensure the original TV remote has fresh batteries and is functioning correctly.
  - Verify the distance and alignment between the two remotes during the learning process (1-3 cm, head-to-head).
  - Repeat the learning steps carefully. Sometimes ambient light or interference can affect the process.
- **Limited range:**
  - Replace batteries with new ones.
  - Ensure the infrared sensor on the device is not obstructed.

## SPECIFICATIONS



Image: Top and side profile of the Formuler Z7+ remote control, showcasing its ergonomic form factor.

Feature	Detail
Model Number	Z7+
Compatibility	Formuler Z Alpha, Z8, Z7+, Z7 5G, Dlite +, T2, T2 Prime, T3; Dreamlink T1 Plus, T2
Connectivity Technology	Infrared (IR)
Special Feature	Smart Programmable Learning Function (for TV control), Ergonomic Design
Power Source	2 x AAA Batteries (not included)
Package Dimensions	8.5 x 3.86 x 2.13 inches
Item Weight	14.1 ounces

## WARRANTY

For warranty information, please refer to the documentation provided with your purchase or contact your

retailer. Keep your proof of purchase for any warranty claims.

## SUPPORT

---

If you encounter issues not covered in this manual or require further assistance, please contact the manufacturer (Formuler) or your product retailer for support.

---