

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Calvas](#) /

› [Calvas RC3 Air Conditioner Remote Control User Manual](#)

## Calvas RC3

# Calvas RC3 Air Conditioner Remote Control User Manual

## INTRODUCTION

This manual provides instructions for the Calvas RC3 Air Conditioner Remote Control, designed for use with various Electra, Airwell, Emailair, and Elco air conditioning units. Please read this manual carefully before use to ensure proper operation and longevity of your remote control.

## PRODUCT OVERVIEW

The Calvas RC3 remote control offers essential functions for your air conditioner, including temperature adjustment, mode selection, and a timer function. It features an "ifeel" option for enhanced comfort by sensing the ambient temperature at the remote's location.

**Compatible Models:** This remote is compatible with RC3, RC4, RC5, and RC7 series remotes from Electra, Airwell, Emailair, and Elco, as well as other models like WMZ 12ST, RC-41-1, RC-5I-1, RC-7 19in1, and RC-4I-1.



This image shows the front of the Calvas RC3 remote control, highlighting its digital display with temperature, mode, and timer indicators, along with the 'ifeel' function. The main control buttons for power, mode, and temperature adjustment are visible below the display.

## SETUP

### Battery Installation

The remote control requires two AAA batteries (not included).

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.



This image displays the Calvas RC3 remote control alongside two AAA batteries and its battery compartment cover, illustrating the components involved in battery installation.

## OPERATING INSTRUCTIONS

### Basic Functions

- **Power Button:** Press the orange power button to turn the air conditioner ON or OFF.
- **MODE Button:** Press the MODE button to cycle through available operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **TEMP +/- Buttons:** Use the '+' and '-' buttons to adjust the desired temperature setting.
- **iFeel Function:** The 'ifeel' option allows the remote to sense the temperature at its location, providing more precise comfort control.
- **Timer Function:** The remote features a timer that can be set to automatically turn the air conditioner ON or OFF at specified times. Refer to your air conditioner's manual for detailed timer programming.

### **Remote Control Coding (for compatibility)**

If the remote does not immediately control your air conditioner, it may require coding to match your specific unit. Follow these steps:

1. Press and hold the **SET** and **MODE** buttons simultaneously until a two-digit remote code flashes on the display.
2. Use the +/- buttons to cycle through the available codes until your air conditioner responds.
3. Once the correct code is found and the air conditioner responds, press the **SET** button to confirm and save the code.

## ELECTRA - AIRWELL (23IN1)

To coding the remote press the SET + MODE buttons together until the remote code ( 2 digits ) flashes.

To change the code press +/- and finally press SET.

Universal Spare Parts By  ELECTRA



This image presents a chart of different Electra and Airwell remote control models (RC-3, RC-7, RC-71-1, etc.) and provides instructions for coding the universal remote. It details the process of pressing SET + MODE, then using +/- to select the code, and finally pressing SET to confirm.

## MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

- **Battery Replacement:** Replace batteries when the remote's range decreases or the display becomes dim. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Check battery polarity and ensure batteries are fresh.
  - Ensure there are no obstructions between the remote and the air conditioner's receiver.
  - Verify the remote is correctly coded for your air conditioner (refer to "Remote Control Coding" section).
- **Display is dim or blank:**
  - Replace the batteries.

## SPECIFICATIONS

---

- **Model Number:** RC3
- **Compatible Brands:** Electra, Airwell, Emailair, Elco
- **Power Source:** 2 x AAA batteries (not included)
- **Item Weight:** 2.82 ounces
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1
- **Compatible Devices:** Air Conditioner

## WARRANTY AND SUPPORT

---

This product comes with a standard manufacturer's warranty. For specific warranty details or technical support, please refer to the documentation provided with your purchase or contact the retailer directly.