

[manuals.plus](#) /› [Bissell](#) /› [Bissell SmartClean Bagless Canister Vacuum Cleaner 2274N User Manual](#)**Bissell 2274N**

# Bissell SmartClean Bagless Canister Vacuum Cleaner 2274N User Manual

Model: 2274N | Brand: Bissell

## 1. INTRODUCTION

The Bissell SmartClean 2274N is a bagless canister vacuum cleaner designed for effective cleaning across various floor types. It features a multi-surface nozzle with edge cleaning brushes, an integrated dusting brush, and a hygienic dustbin emptying system. This manual provides instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal performance of your appliance.





Figure 1: Overview of the Bissell SmartClean 2274N vacuum cleaner.

## 2. SAFETY INSTRUCTIONS

Please read all safety instructions before using your appliance to reduce the risk of fire, electric shock, or injury.

- Always connect to a properly grounded outlet.
- Unplug from outlet when not in use and before servicing.
- Do not use with damaged cord or plug.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).

- Do not use in an enclosed space where vapors are present from oil base paint, paint thinner, some mothproofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without filters in place.
- Always turn off this appliance before connecting or disconnecting hose.
- Store appliance indoors.

## 3. PACKAGE CONTENTS

---

Verify that all components are present in the packaging:

- Bissell SmartClean Vacuum Appliance
- Dusting Brush
- Crevice Tool
- User Guide

## 4. ASSEMBLY

---

Follow these steps to assemble your Bissell SmartClean vacuum cleaner:

1. **Attach the Hose:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
2. **Connect the Extension Wand:** Attach the metal extension wand to the end of the flexible hose.
3. **Attach the Floor Nozzle:** Connect the multi-surface floor nozzle to the end of the extension wand. Ensure it is firmly attached.
4. **Accessory Storage:** The dusting brush and crevice tool can be stored on the appliance or kept nearby for easy access.

## 5. OPERATION

---

The Bissell SmartClean is designed for versatile cleaning on various surfaces.

### 5.1 Powering On and Off

- Plug the power cord into a suitable electrical outlet.
- Press the power button located on the main unit to turn the vacuum on or off.

### 5.2 Adjusting Suction Power

The vacuum features digital suction controls with three speed settings, allowing for customized cleaning:

- **Low:** Suitable for delicate surfaces or light dusting.
- **Medium:** Ideal for bare floors and general cleaning.
- **High:** Provides strong suction for carpets and heavily soiled areas.

### 5.3 Using the Multi-Surface Nozzle

The multi-surface nozzle with edge cleaning brushes is optimized for effective cleaning on all floor types, including carpets and hard floors. The edge brushes assist in removing debris from baseboards and corners.



Birden fazla yüzey için  
uygun, kenar **fırçalı başlık**

Figure 2: Multi-surface nozzle with edge cleaning brushes in use on a rug.

#### 5.4 Cleaning Hard-to-Reach Areas

For cleaning under furniture or in tight spaces, the slim design of the nozzle and the flexible hose provide extended reach.



## Ulaşılmazı zor yerlerde kusursuz temizlik

Figure 3: Cleaning under furniture with the vacuum's flexible hose and nozzle.

### 5.5 Using Integrated Tools

The ergonomic handle incorporates an integrated dusting brush, making it convenient to clean furniture and above-floor surfaces without changing attachments.



## Entegre toz alma başlığı

Figure 4: Utilizing the integrated dusting brush for cleaning upholstery.

### 5.6 Operating Radius

With a 12-meter operating radius, the SmartClean allows for extensive cleaning without frequently changing power outlets.



## 12 m temizlik yarıçapı

Figure 5: The vacuum's 12-meter operating radius facilitates cleaning large areas.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

### 6.1 Emptying the Dustbin

The patented multi-cyclonic system includes a hygienic emptying system for easy disposal of dirt without direct contact with debris.

1. Ensure the vacuum is unplugged.
2. Press the dustbin release button and carefully lift the dustbin from the main unit.
3. Position the dustbin over a trash receptacle.
4. Press the dustbin bottom release button to open the lid and empty the contents.
5. Close the bottom lid securely and reattach the dustbin to the vacuum.



## Hijyenik hazne boşaltma sistemi

Figure 6: Hygienic emptying of the dustbin into a trash can.

### 6.2 Cleaning Filters

The cartridge filter should be regularly cleaned to maintain suction power. Refer to the user guide for specific instructions on filter removal and cleaning frequency. Filters are washable and should be thoroughly air-dried before reinstallation.

### 6.3 Nozzle and Hose Inspection

Periodically check the floor nozzle and hose for any blockages or tangled debris. Remove any obstructions to ensure unrestricted airflow.

## 7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply.	Check if the plug is securely inserted into the outlet. Verify the power outlet is functional.
Reduced suction power.	Dustbin full, clogged filter, or blockage in hose/nozzle.	Empty the dustbin. Clean or replace filters. Check hose and nozzle for obstructions.
Unusual noise during operation.	Blockage in the air path or foreign object in the brush roll.	Turn off and unplug the vacuum. Inspect the hose, nozzle, and dustbin for blockages. Remove any foreign objects.

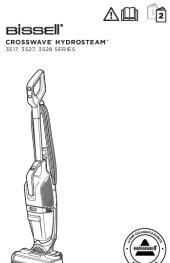
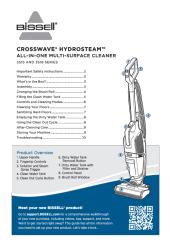
If the problem persists after attempting these solutions, please contact customer support.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Bissell
Model Number	2274N
Dimensions (L x W x H)	41.1 x 31.1 x 57 cm
Capacity	3 Liters
Material	Other (as per manufacturer)
Operating Radius	12 Meters
Noise Level	79 Decibels
Special Features	Bagless
Item Weight	9.7 Kilograms
Filter Type	Cartridge
Power Source	Corded Electric
Power	720 Watts

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Bissell website. Keep your purchase receipt as proof of purchase for any warranty claims.

 <p><b>BISSELL CrossWave All-in-One Multi-Surface Cleaner User Manual</b></p> <p>User guide for the BISSELL CrossWave All-in-One Multi-Surface Cleaner (Models 1785, 2210, 3238, 3395). Learn how to assemble, operate, clean, and maintain your appliance for optimal performance.</p>	
 <p><b>BISSELL CrossWave HydroSteam Series 3517, 3527, 3528: User Guide &amp; Instructions</b></p> <p>Comprehensive guide for the BISSELL CrossWave HydroSteam Series (models 3517, 3527, 3528). Learn assembly, operation, maintenance, and cleaning solution usage for effective floor cleaning.</p>	
 <p><b>BISSELL CrossWave HydroSteam All-in-One Multi-Surface Cleaner User Manual</b></p> <p>Comprehensive user manual for the BISSELL CrossWave HydroSteam All-in-One Multi-Surface Cleaner (models 3515 and 3518 series), covering safety instructions, assembly, operation, maintenance, and troubleshooting.</p>	
 <p><b>BISSELL CrossWave 17132 User Manual: Safety, Operation, and Maintenance</b></p> <p>Comprehensive user manual for the BISSELL CrossWave 17132 multi-surface cleaner. Includes detailed safety instructions, assembly steps, operation guides for hard floors and carpets, maintenance procedures for tanks and brush rolls, troubleshooting tips, and warranty information.</p>	
 <p><b>BISSELL CrossWave 1713 Series Multi-Surface Cleaner User Guide</b></p> <p>Official user guide for the BISSELL CrossWave 1713 Series Multi-Surface Cleaner. Find instructions on safe operation, assembly, cleaning hard floors and area rugs, maintenance, and troubleshooting.</p>	
 <p><b>BISSELL CrossWave X7 Cordless Vacuum Cleaner User Guide and Manual</b></p> <p>Comprehensive user guide for the BISSELL CrossWave X7 Cordless multi-surface cleaner (Model 2832F), covering setup, operation, maintenance, troubleshooting, and warranty information.</p>	

