

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Power Zone](#) /

› [Powerzone FES50-T2 High Velocity Floor Fan Instruction Manual](#)

Power Zone FES50-T2

Powerzone FES50-T2 High Velocity Floor Fan

Model: FES50-T2

Brand: Power Zone

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, setup, maintenance, and troubleshooting of your Powerzone FES50-T2 High Velocity Floor Fan. Please read all instructions carefully before use and retain this manual for future reference.



An image showing the complete Powerzone FES50-T2 High Velocity Floor Fan, featuring a black drum-style fan head mounted on an adjustable black and silver stand with a round black base.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Do not operate any fan with a damaged cord or plug.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.

- Always unplug the fan before moving, cleaning, or servicing.
- Do not insert fingers or foreign objects into any ventilation or exhaust opening.
- Do not use outdoors or on wet surfaces.
- This fan is intended for indoor use only.

SETUP

Unpacking

Carefully remove the fan and all components from the packaging. Inspect for any damage that may have occurred during shipping. Retain packaging for storage or return if necessary.

Assembly

The Powerzone FES50-T2 fan typically comes with the fan head pre-assembled to the drum frame. Assembly primarily involves attaching the drum/stand assembly to the base and adjusting the height.

1. Attach the main stand pole to the round base, ensuring it is securely fastened.
2. Insert the adjustable chrome pole into the main stand pole.
3. Secure the fan drum assembly to the top of the adjustable pole using the provided hardware. Ensure the fan head is stable and can pivot freely within its frame.
4. Adjust the height of the fan by loosening the height adjustment knob on the stand, extending or retracting the chrome pole, and then tightening the knob firmly.

Placement

Place the fan on a firm, level surface. Ensure there is adequate clearance around the fan for optimal airflow and to prevent obstruction of the air intake or exhaust. Do not place the fan near curtains or other objects that may be drawn into the fan blades.

OPERATING INSTRUCTIONS

Power Connection

Plug the fan's power cord into a standard 120V AC electrical outlet. Ensure the outlet is in good condition and not overloaded.

Speed Control

The Powerzone FES50-T2 features a 3-speed control. The control method is typically a push button or rotary switch located on the fan motor housing or the back of the fan head.

- **OFF:** Fan is off.
- **LOW:** Provides a gentle airflow.
- **MEDIUM:** Provides moderate airflow.
- **HIGH:** Provides maximum high-velocity airflow.

To change speeds, press the button or rotate the switch to the desired setting.

Adjusting Fan Angle

The fan head can be tilted to direct airflow upwards or downwards. Loosen the adjustment knobs on either side of the fan

drum, tilt the fan head to the desired angle, and then firmly tighten the knobs to secure it in place.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your fan. Always unplug the fan from the power outlet before performing any cleaning or maintenance.

Cleaning

- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- To clean the fan blades and grilles, you may need to remove the front grille. Refer to the specific assembly instructions for your model if grille removal is required. Use a vacuum cleaner with a brush attachment or a soft cloth to remove dust and debris from the blades and grilles.
- Ensure all parts are completely dry before plugging the fan back in.

Storage

When not in use, store the fan in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not operate.	No power to the unit. Fan switch is off.	Check if the power cord is securely plugged into a working outlet. Ensure the fan's speed control is set to LOW, MEDIUM, or HIGH.
Reduced airflow.	Dust buildup on blades or grilles. Fan is not on highest setting.	Unplug the fan and clean the blades and grilles as per maintenance instructions. Adjust the speed setting to HIGH.
Unusual noise or rattling.	Loose parts or foreign object. Fan not on a level surface.	Unplug the fan and inspect for any loose screws or foreign objects. Remove any obstructions. Place the fan on a stable, level surface.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Model Name	FES50-T2
Brand	Power Zone
Electric Fan Design	Floor Fan
Color	Black
Power Source	Corded Electric
Number of Power Levels	3

Wattage	150 watts
Voltage	120 Volts
Noise Level	5E+1 dB
Item Weight	30.8 Pounds
Indoor/Outdoor Usage	Indoor
Included Components	Cord
UPC	045734636385

WARRANTY AND SUPPORT

Warranty Information

Specific warranty details for the Powerzone FES50-T2 fan are typically provided with your purchase documentation or can be obtained directly from the manufacturer, Power Zone. Please retain your proof of purchase for warranty claims. Extended protection plans may be available for purchase separately. Refer to your retailer for details on available protection plans.

Customer Support

For technical assistance, parts replacement, or any questions regarding your Powerzone FES50-T2 fan, please contact Power Zone customer support. Contact information can usually be found on the product packaging, the manufacturer's official website, or your purchase receipt.

When contacting support, please have your model number (FES50-T2) and purchase date ready.



© 2024 Power Zone. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.