

Manuals.plus /

› THOMAS & FRIENDS /

› THOMAS & FRIENDS Trackmaster Thomas Motorized Train Engine (Model GLL15) Instruction Manual

## THOMAS & FRIENDS GLL15

# THOMAS & FRIENDS Trackmaster Thomas Motorized Train Engine Instruction Manual

**Model:** GLL15

**Brand:** THOMAS & FRIENDS

## 1. PRODUCT OVERVIEW

The Thomas & Friends Trackmaster Thomas Motorized Train Engine is a battery-powered toy train designed for preschoolers aged 3 years and older. This engine, along with its attachable tender, is compatible with all TrackMaster tracks (track sets sold separately), allowing children to recreate their favorite moments from the Thomas & Friends TV show.

### Key Features:

- Create exciting Thomas & Friends adventures with this battery-powered, motorized train engine with attachable tender.
- Push the switch on top of the train engine to send Thomas racing along on an exciting journey.
- This motorized engine is compatible with all TrackMaster tracks (Track sets sold separately).
- Requires 2 AA batteries.
- For preschool children ages 3 years and older.



Figure 1.1: Thomas the Tank Engine with its red tender, viewed from the side. The engine is blue with the number '1' on its side, and the tender is red.



Figure 1.2: An angled view of Thomas the Tank Engine and its red tender, showcasing the details of the motorized engine.

## 2. SETUP

---

### 2.1 Battery Installation

The Thomas Motorized Train Engine requires 2 AA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the underside of the engine.
2. Using a Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 2 new AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

**WARNING: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.**

### 2.2 Track Compatibility

This motorized engine is designed to run on all Thomas & Friends TrackMaster tracks. Track sets are sold separately. Ensure tracks are properly connected and laid on a flat, stable surface for optimal performance.

## 3. OPERATING INSTRUCTIONS

---

To operate your Thomas Motorized Train Engine:

1. Place the engine and its attached tender onto a compatible TrackMaster track.
2. Locate the ON/OFF switch on the top of the engine.
3. Push the switch to the 'ON' position to start the engine. Thomas will begin to move along the track.
4. To stop the engine, push the switch to the 'OFF' position.

Your browser does not support the video tag.

Video 3.1: Product Overview Video. This video demonstrates the Thomas Motorized Train Engine in operation, showcasing its movement on a track and its features.

## 4. MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your Thomas train engine:

- **Cleaning:** Wipe the engine and tender with a clean, damp cloth. Do not immerse in water. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly.
- **Wheel Maintenance:** Regularly check the wheels for any hair, dust, or debris that may accumulate and hinder movement. Carefully remove any obstructions.

## 5. TROUBLESHOOTING

---

If your Thomas Motorized Train Engine is not functioning as expected, consider the following:

- **Engine Not Moving:**
  - Ensure the ON/OFF switch is in the 'ON' position.
  - Check if the batteries are correctly installed and not depleted. Replace with fresh AA batteries if necessary.
  - Inspect the wheels for any obstructions (e.g., hair, lint) and remove them.
- **Slow Movement:**
  - Batteries may be low. Replace with fresh AA batteries.
  - Ensure the track surface is clean and free of debris.
- **Derailment:**
  - Verify that all track pieces are securely connected and laid flat.
  - Ensure the engine is placed correctly on the track rails.

## 6. SPECIFICATIONS

---

Feature	Detail
Product Dimensions	1.85 x 10.25 x 5.5 inches
Item Weight	3.84 ounces
Item Model Number	GLL15
Manufacturer Recommended Age	36 months - 7 years
Batteries Required	2 AA batteries
Release Date	June 1, 2019
Manufacturer	Fisher-Price

## 7. WARRANTY AND SUPPORT

---

For warranty information or product support, please refer to the packaging or contact Fisher-Price customer service directly. Contact details can typically be found on the product packaging or the official Fisher-Price website.