

BOMAZ 32MV304X/F7, 40MV324XF7, 40MV336XF7, 50MV336X/F7, 55MV314X

BOMAZ Remote Control User Manual

Brand: BOMAZ

Compatible Models: Magnavox 32MV304X/F7, 40MV324XF7, 40MV336XF7, 50MV336X/F7, 55MV314X LED LCD TVs

1. INTRODUCTION

This manual provides comprehensive instructions for the BOMAZ replacement remote control, designed for seamless operation with various Magnavox LED LCD TV models. This remote control requires no programming and is ready for use immediately after battery installation. It features an ergonomic design and operates effectively at distances of more than 8 meters.

2. SETUP

2.1 Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image 1: BOMAZ replacement remote control. This image displays the front of the remote control, illustrating the layout of its various buttons, including power, source, numeric keypad, volume, channel, and dedicated app buttons.

3. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your BOMAZ remote control.

Button	Function
Power ()	Turns the TV on or off.
SOURCE	Selects the input source (e.g., HDMI 1, AV, TV).
PIC/SOUND MODE	Adjusts picture or sound modes.
INFO	Displays program information.
SLEEP	Sets the TV to turn off automatically after a specified time.
PICTURE SIZE	Adjusts the aspect ratio or picture size.
OPTIONS	Accesses additional options or settings.
Media Controls (, ◀, ▶,)	Rewind, Play/Pause, Fast Forward, Stop.
Numeric Keypad (0-9)	Direct channel selection or numerical input.
PREV.CH	Returns to the previously viewed channel.
VOL (+/-)	Increases or decreases the volume level.
Mute ()	Mutes or unmutes the TV audio.
CH (+/-)	Changes the TV channel up or down.
Colored Buttons (Red, Green, Yellow, Blue)	Functionality varies by TV menu or application.
BACK	Returns to the previous menu or screen.
Home (△)	Accesses the TV's main home screen or smart TV interface.
Navigation Arrows (▲, ▼, ◀, ▶)	Navigates through menus and options.
OK	Confirms selections or enters menus.
NETFLIX	Direct access to the Netflix application.
YouTube	Direct access to the YouTube application.
Vudu	Direct access to the Vudu application.

4. TROUBLESHOOTING

- **Remote Not Responding:** Ensure the batteries are correctly inserted with the proper polarity. Replace old batteries with new AAA batteries. Verify there is a clear line of sight between the remote control and the TV's infrared sensor.

- **Specific Functions Not Working:** Confirm that the TV is set to the correct input source for the desired operation. Some advanced TV features may require the original TV remote or specific TV settings.
- **No Programming Required:** This remote control is designed to work out-of-the-box with compatible Magnavox TV models without any setup or programming.
- **Contact Support:** If you encounter persistent issues or if the remote control you received has a defect, please contact the seller for assistance.

5. SPECIFICATIONS

- **Brand:** BOMAZ
- **Compatible Devices:** Magnavox LED LCD Televisions
- **Connectivity Technology:** Infrared (IR)
- **Max Number of Supported Devices:** 1
- **Power Source:** 2 x AAA Batteries (not included)
- **Operable Distance:** More than 8 meters
- **Material:** ABS Material
- **Special Feature:** Ergonomic Design
- **Item Weight:** 3.2 ounces
- **Package Dimensions:** 3.9 x 1.9 x 1.5 inches

6. WARRANTY AND SUPPORT

This BOMAZ remote control comes with a 30-day warranty from the date of purchase. For warranty claims, technical support, or any product-related inquiries, please contact the seller directly through your purchase platform. Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question