

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Link2Home](#) /

› [Link2Home Outdoor Weatherproof Wireless Remote Control Double Outlets User Manual](#)

Link2Home EM-OR7000B

Link2Home Outdoor Weatherproof Wireless Remote Control Double Outlets User Manual

MODEL: EM-OR7000B

This manual provides detailed instructions for the safe and efficient use of your Link2Home Outdoor Wireless Remote Control Double Outlets.

1. INTRODUCTION

Thank you for choosing the Link2Home Outdoor Weatherproof Wireless Remote Control Double Outlets. This device is designed to provide convenient and automated control over your outdoor lighting and appliances. Featuring multiple timer functions, including Dusk to Dawn and countdown options, along with a wireless remote control, it enhances the functionality and energy efficiency of your outdoor electrical setups.

Please read this manual thoroughly before installation and operation to ensure proper use and to prevent damage to the product or injury.

2. SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these basic safety precautions:

- Read all instructions before using this product.
- Do not immerse the unit in water or other liquids.
- Ensure the product is connected to a grounded outdoor receptacle.
- Do not exceed the maximum electrical rating of 1875 Watts (15 Amps).
- Keep the protective covers on the outlets closed when not in use.
- Do not use with extension cords that are not rated for outdoor use.
- Always position the unit with the outlets facing downwards to prevent water entry.
- Disconnect power before performing any maintenance or cleaning.
- This product is intended for outdoor use.

3. PACKAGE CONTENTS

- 1 x Link2Home Outdoor Wireless Remote Control Outlet (Model EM-OR7000B)
- 1 x Wireless Remote Control (with 1 CR2032 battery included)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Link2Home outdoor timer and remote control.



Image: The Link2Home outdoor timer unit with its power cord and two grounded outlets, shown alongside its wireless remote control.

Link2Home

Wireless Remote Control Outlets + Photocell & Countdown Timer



Image: A detailed view of the timer unit highlighting its two grounded outlets, the learning code button, and the integrated countdown and photocell sensor. The remote control is also visible.

Timer Unit Features:

- **Power Cord:** Connects to a standard grounded outdoor outlet.
- **Grounded Outlets (x2):** For connecting your outdoor devices.
- **Timer Dial:** Selects operating mode (OFF, ON, 2H, 4H, 6H, 8H, DUSK TO DAWN).
- **Photocell Sensor:** Detects ambient light levels for Dusk to Dawn and countdown functions.
- **Learning Code Button:** Used for pairing or re-pairing the remote control.
- **Power Indicator Light:** Shows the power status of the unit.

Remote Control Features:

- **ON Button:** Manually turns connected devices on.
- **OFF Button:** Manually turns connected devices off.



Remote Control



7 Timer Functions

Always ON/OFF
Dusk To Dawn
2H/4H/6H/8H

2 Grounded Outlets With Remote Control



Image: A close-up view of the timer unit's dial, showing the various timer settings, and the remote control with its ON and OFF buttons.

5. SETUP

5.1 Installation

1. Select a suitable outdoor location for the timer unit, ensuring it is near a grounded outdoor receptacle and protected from direct heavy rain or standing water.
2. Plug the timer unit's power cord into the grounded outdoor receptacle.
3. Ensure the unit is positioned vertically with the outlets facing downwards to prevent water from entering the receptacles.
4. Plug your outdoor lights or appliances into the two grounded outlets on the timer unit.

The Link2Home logo is positioned in the top left corner of the image. It features the brand name 'Link2Home' in a white sans-serif font, with a stylized orange house icon containing the number '2' between the words 'Link' and 'Home'. The background of the entire image is a composite: the left side shows a blurred night scene of warm-toned string lights and colorful triangular bunting flags under a rain shower; the right side shows a close-up of the black Link2Home outdoor timer unit, also covered in rain, with its control dial and power indicator visible.

Waterproof Idea for outdoor use

Image: The Link2Home outdoor timer unit installed outdoors, with rain falling, demonstrating its weatherproof design while connected to outdoor string lights.

5.2 Remote Pairing

The timer unit and remote control are typically pre-programmed for immediate use. If the remote does not control the unit, or if you are pairing a new remote, follow these steps:

1. Ensure the timer unit is plugged into a power source.
2. Locate the small 'Learning Code' button on the timer unit (often near the power indicator light).
3. Press and hold the 'Learning Code' button until the power indicator light begins to flash.
4. While the indicator light is flashing, press the **OFF** button on your wireless remote control.
5. The indicator light on the timer unit will stop flashing, confirming that the remote control has been successfully paired.

Note: Some manuals may incorrectly state to press the 'ON' button for pairing. For this model, press the 'OFF' button on the remote during the pairing process.



Image: A person holding both the Link2Home outdoor timer unit and its remote control, illustrating the compact size of both components.

6. OPERATING INSTRUCTIONS

6.1 Timer Dial Functions

Rotate the timer dial on the unit to select your desired operating mode:

- **OFF:** The power to the connected devices is continuously off.
- **ON:** The power to the connected devices is continuously on.
- **2H / 4H / 6H / 8H (Countdown Timer):** The unit will automatically turn on at dusk (detected by the photocell sensor) and remain on for the selected duration (2, 4, 6, or 8 hours), then turn off.
- **DUSK TO DAWN:** The unit will automatically turn on when it detects dusk and remain on until it detects dawn, then turn off.

The Link2Home logo is positioned in the top left corner of the image. It features the brand name in a white, sans-serif font, with a stylized orange square containing a white number '2' between the words 'Link' and 'Home'.

Photocell Sensor

Turn on at dusk and turn off at dawn automatically




Image: An outdoor patio scene at dusk, illuminated by string lights connected to the timer unit, demonstrating the automatic activation by the photocell sensor.

6.2 Remote Control Operation

The wireless remote control allows for manual override of the timer settings and convenient control from a distance of up to 100 feet (line of sight).


- Press the **ON** button on the remote to manually turn on the connected devices.
- Press the **OFF** button on the remote to manually turn off the connected devices.

The remote control can be used to control multiple Link2Home outdoor timer units simultaneously if they are paired to the same remote.

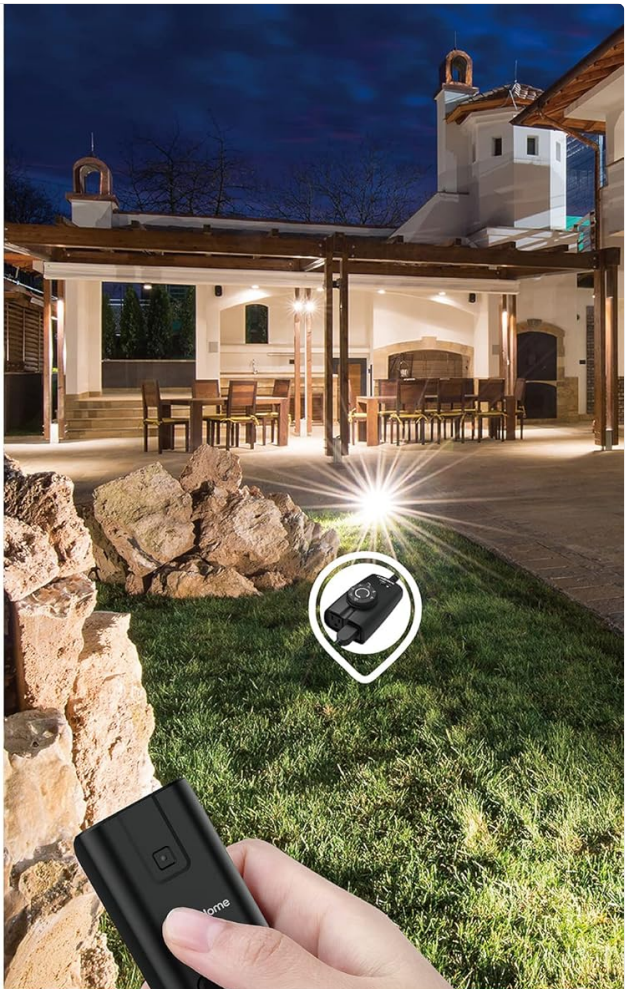

Control both devices simultaneously

Image: A single remote control being used to operate both holiday lights on a front door and landscape lighting in a garden, illustrating simultaneous control.

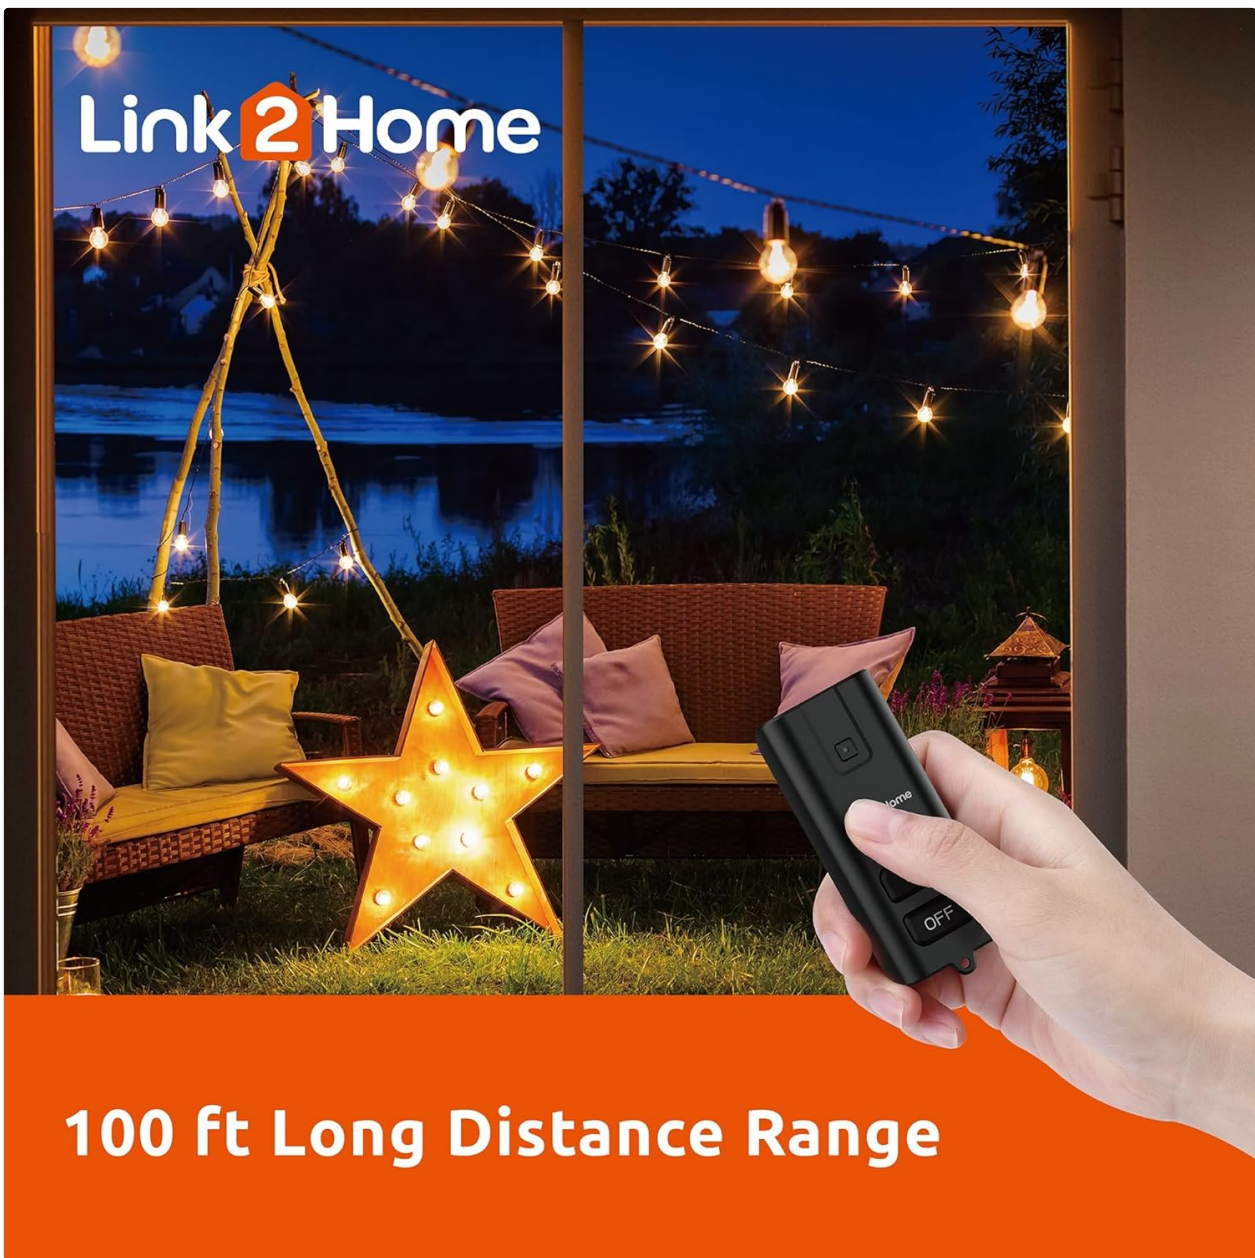

100 ft Long Distance Range

Image: A hand holding the remote control inside a house, with outdoor string lights visible through a window, demonstrating the 100-foot long-distance range of the remote.

7. MAINTENANCE

- **Cleaning:** Periodically wipe the unit and photocell sensor with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the unit is unplugged before cleaning.
- **Photocell Sensor:** Keep the photocell sensor free from dirt, debris, or obstructions (e.g., leaves, snow, direct light from other sources) to ensure accurate dusk/dawn detection.
- **Battery Replacement:** The remote control uses one CR2032 lithium manganese dioxide battery. If the remote's range or responsiveness decreases, replace the battery. Refer to the remote's casing for instructions on opening the battery compartment.
- **Inspection:** Regularly inspect the power cord, plug, and unit housing for any signs of damage, wear, or corrosion. Discontinue use if damage is found.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Devices not turning on/off.	<ul style="list-style-type: none"> Unit not plugged in or no power. Timer dial set incorrectly. Connected devices are off or faulty. Exceeded maximum wattage. 	<ul style="list-style-type: none"> Check power connection and wall outlet. Verify the timer dial is set to the desired function (ON, 2H/4H/6H/8H, DUSK TO DAWN). Ensure connected devices are switched on and functional. Reduce the total load to below 1875W.
Remote control not working.	<ul style="list-style-type: none"> Remote battery is dead or low. Remote is not paired with the unit. Out of range or signal obstruction. 	<ul style="list-style-type: none"> Replace the CR2032 battery in the remote. Re-pair the remote control following the instructions in Section 5.2. Move closer to the unit (within 100 ft line of sight) and remove any major obstructions.
Dusk to Dawn function not accurate.	<ul style="list-style-type: none"> Photocell sensor is obstructed or dirty. Sensor is exposed to artificial light at night. 	<ul style="list-style-type: none"> Clean the photocell sensor. Ensure the sensor is not blocked by objects or exposed to light from streetlights, porch lights, etc., which can prevent it from detecting true darkness.

9. SPECIFICATIONS

Feature	Detail
Model Number	EM-OR7000B
Voltage	125V
Wattage	1875 Watts
Item Weight	10.4 ounces
Product Dimensions	2.5 x 3 x 6 inches
Remote Battery Type	1 x CR2032 Lithium Manganese Dioxide (included)
Mounting Type	Plug-In Mount
Certifications	ETL, FCC
Remote Range	Up to 100 ft (line of sight)

10. WARRANTY

This Link2Home product is covered by a **1 Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, abuse, accidents, unauthorized repairs, or modifications.

Please retain your proof of purchase for warranty claims.

11. SUPPORT

For technical assistance, warranty claims, or further information regarding your Link2Home product, please visit the official Link2Home website or contact customer service through the provided channels on their website.

Web: www.link2home.com