

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bissell](#) /

› [BISSELL ProHeat 2X Revolution Cleanshot 2066E – Upright Carpet Cleaner User Manual](#)

Bissell 2066E

BISSELL ProHeat 2X Revolution Cleanshot 2066E

Upright Carpet Cleaner User Manual

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your BISSELL ProHeat 2X Revolution Cleanshot carpet cleaner. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always connect to a properly grounded outlet.
- Unplug from outlet when not in use and before cleaning or servicing.
- Do not immerse. Use only on surfaces moistened by the cleaning process.
- Use only BISSELL cleaning products intended for use with this appliance.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.

2. PRODUCT OVERVIEW AND PACKAGE CONTENTS

Your BISSELL ProHeat 2X Revolution Cleanshot is designed for effective deep cleaning of carpets and upholstery. Ensure all items are present before assembly.



Image: The BISSELL ProHeat 2X Revolution Cleanshot carpet cleaner shown with its included accessories: two bottles of cleaning solution, a 3-in-1 stair tool, a tough stain tool, and a hose.

Package Contents:

- BISSELL ProHeat 2X Revolution Cleanshot Carpet Cleaner Unit
- Clean Tank (attached to unit)
- Dirty Water Tank (attached to unit)
- Hose
- Tough Stain Tool
- 3-in-1 Stair Tool
- Sliding Crevice Tool
- Trial Size Cleaning Formulas

3. ASSEMBLY AND SETUP

Follow these steps to assemble your carpet cleaner and prepare it for use.

1. **Attach Handle:** Slide the upper handle assembly onto the main body of the cleaner until it clicks securely into place.
2. **Fill Clean Water Tank:** Remove the clean water tank from the back of the machine. Unscrew the cap and fill with hot tap water (not boiling) to the 'Water Fill Line'. Add BISSELL cleaning formula to the 'Formula Fill Line'. Replace the cap and return the tank to the machine.
3. **Attach Tools (if needed):** For spot cleaning or upholstery, attach the desired tool to the end of the hose. Ensure a secure connection.



Image: A close-up front view of the BISSELL ProHeat 2X Revolution Cleanshot, highlighting the transparent brush roll housing and the Dual DirtLifter PowerBrushes.

4. OPERATING INSTRUCTIONS

Learn how to effectively clean your carpets and upholstery with your new machine.

Pre-Cleaning Steps:

- Vacuum the area thoroughly before deep cleaning to remove loose dirt and debris.
- Test a small, inconspicuous area for colorfastness before cleaning the entire carpet or upholstery.

Cleaning Modes:

- **Max Clean Mode:** Provides a powerful deep clean for heavily soiled areas, utilizing 12 rows of rotating Dual DirtLifter PowerBrushes to remove embedded stains, dirt, and odors.
- **Express Clean Mode:** Ideal for quick cleans, delivering dry carpets in approximately 30 minutes. This mode is perfect for refreshing carpets.



Image: A person's hand touching a clean, dry carpet, illustrating the effectiveness of the Express Clean Mode which dries carpets in about 30 minutes.

Using CleanShot Pretreater:

The CleanShot pretreater delivers a concentrated stream of cleaning solution directly onto tough spots and stains. Activate it by pressing the CleanShot button on the foot of the machine.

HeatWave Technology:

This technology helps maintain the water temperature of the water you put into the clean tank, ensuring consistent cleaning performance for the toughest stains and odors.



HeatWave™ Technology

Maintains steady water temperature for effective cleaning. Our most powerful system removes even tough stains and odors.

Image: The BISSELL ProHeat 2X Revolution Cleanshot in operation on a carpet, visually representing the HeatWave Technology that maintains water temperature for effective cleaning.

Two-Tank Technology:

The innovative two-tank system keeps clean water and formula separate from dirty water, ensuring you always

clean with fresh solution.



Two-Tank Technology

The two tank system allows to clean with clean water while the dirt and grime are stored in a different tank.

Image: A clear depiction of the BISSELL ProHeat 2X Revolution Cleanshot, highlighting its two distinct tanks for clean and dirty water, a key feature for hygienic cleaning.

Using Attachments:

The machine includes versatile tools for various cleaning needs:

- **Tough Stain Tool:** Designed for concentrated cleaning on stubborn spots and spills.
- **3-in-1 Stair Tool:** Perfect for cleaning corners, edges, and the treads of stairs.
- **Sliding Crevice Tool:** Reaches into tight spaces like couch crevices or along carpet edges.



Tough Stain & 3-In-1 Tools

For tough stains, corners, edges, stairs & tight spaces

Image: Two panels showing the versatility of the tools: one demonstrating the Tough Stain Tool being used on a sofa, and the other showing the 3-in-1 Stair Tool cleaning carpeted stairs.



Image: A person actively using the 3-in-1 Stair Tool to clean carpeted stairs, demonstrating its ergonomic design for effective stair cleaning.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your carpet cleaner.

- **Empty and Rinse Tanks:** After each use, empty the dirty water tank and rinse both the clean and dirty water tanks thoroughly with warm water.
- **Clean Brush Roll and Nozzle:** Remove any hair or debris from the brush roll and clean the nozzle area to prevent clogs and maintain suction.
- **Store Properly:** Store the cleaner in a dry, protected area. Do not store with solution in the clean tank.

6. TROUBLESHOOTING

If you encounter issues with your cleaner, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
No spray or reduced spray	Clean tank empty or not seated correctly; clogged nozzle.	Refill clean tank and ensure it's seated; clean nozzle.
Machine not picking up solution	Dirty water tank full or not seated correctly; dirty tank filter clogged.	Empty dirty water tank and ensure it's seated; clean dirty tank filter.
Brush roll not turning	Brush belt broken or dislodged; debris wrapped around brush.	Check/replace brush belt; remove debris from brush.

Problem	Possible Cause	Solution
Machine not turning on	Power cord not securely plugged in; tripped circuit breaker.	Check power connection; reset circuit breaker.

7. SPECIFICATIONS

Detailed technical specifications for your BISSELL ProHeat 2X Revolution Cleanshot.

Brand: Bissell

Model Number: 2066E (Manufacturer Model: 2724675195837)

Color: Black

Product Dimensions: 44.2 x 68.8 x 44.6 cm

Item Weight: 10.1 Kilograms

Capacity: 3.7 Liters (Clean Water Tank)

Power / Wattage: 800 watts

Voltage: 220 Volts

Special Features: Corded, HeatWave Technology, Two-Tank System, CleanShot Pretreater

8. WARRANTY AND SUPPORT

Your BISSELL ProHeat 2X Revolution Cleanshot is backed by a manufacturer's warranty and dedicated customer support.



Image: A graphic indicating a 2-Year Warranty provided by BISSELL.

Warranty Information:

This product comes with a **2-Year BISSELL Warranty**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal household use.

Customer Support:

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact BISSELL

customer support. Refer to the contact information provided in your product packaging or visit the official BISSELL website for regional support details.