

[Manuals.plus](#) /

› [M SANMERSEN](#) /

› M SANMERSEN Piano Mat, Music Dance Mat, Keyboard Play Mat for Kids, Model 1593 User Manual

M SANMERSEN 1593

M SANMERSEN Piano Mat, Music Dance Mat, Keyboard Play Mat for Kids, Model 1593 User Manual

Model: 1593 | Brand: M SANMERSEN

INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your M SANMERSEN Piano Mat, Model 1593. This musical play mat is designed to offer an engaging and interactive experience for infants and young children, promoting early musical development and physical activity.



A child enjoying the M SANMERSEN Piano Mat. This mat provides a large, interactive surface for musical play.

PRODUCT FEATURES

- **Large Play Area:** The mat measures 53 x 23 inches, providing ample space for children to move and play.
- **Educational & Interactive:** Features 24 pre-loaded sounds and vibrant animal graphics. Children can discover tempo and rhythm by stepping on the keys, fostering creative development.
- **Multiple Modes:** Easily switch between music, animal sounds, and demo modes.
- **Record & Playback Function:** Allows children to record their own melodies and play them back.
- **Adjustable Volume:** Volume can be adjusted to suit various environments.
- **Safe & Durable Material:** Made from non-toxic, soft non-woven fabric with an anti-slip design.
- **Portable Design:** The mat can be folded to a compact size (13.4 x 10.6 inches) for easy storage and transport.

Product Feature



Detailed diagram illustrating the various features of the piano mat, including volume controls, power switch, animal sound buttons, and piano keys.

Can be Played by Hands or Feet



This image demonstrates how the mat can be played with both hands and feet, promoting the development of hearing, aesthetic sense, creativity, brain power, and hand-foot coordination.

SETUP

1. **Unpack the Mat:** Carefully remove the piano mat from its packaging.
2. **Insert Batteries:** Locate the battery compartment on the control unit. The mat requires 3 x 1.5V AA batteries (not included). Ensure batteries are inserted with correct polarity.
3. **Placement:** Lay the mat flat on a clean, dry, and level surface. Ensure there are no obstructions around the mat.
4. **Power On:** Slide the ON/OFF switch to the 'ON' position.



A close-up view of the mat's control unit, detailing the battery compartment, integrated speaker, and the ON/OFF switch for easy setup.

OPERATING INSTRUCTIONS

The M SANMERSEN Piano Mat offers various interactive functions:

- **Piano Mode:** Step or press on the numbered piano keys to play musical notes.
- **Animal Sounds Mode:** Press the animal icons (cow, chicken, dog, frog, rabbit, sheep, cat, horse) to hear their respective sounds.
- **Demo Mode:** Press the 'DEMO' button to play pre-recorded melodies.
- **Record Function:** Press the 'RECORD' button to begin recording your own sequence of notes or sounds.
- **Playback Function:** After recording, press the 'PLAYBACK' button to listen to your recorded melody.
- **Volume Control:** Use the '+' and '-' volume buttons to adjust the sound level.
- **Instrument Selection:** Some models may feature buttons to change the instrument sound (e.g., piano, violin, trumpet). Refer to your specific mat's icons.

Large Touch Play Button For Better Playing Together



Two children engaging with the large touch-sensitive play buttons, demonstrating collaborative play on the mat.

Official Product Videos

Your browser does not support the video tag.

Video demonstrating the M SANMERSEN Piano Mat, showcasing its interactive features and how children can play with it.

Your browser does not support the video tag.

Video illustrating the 2-in-1 play modes of the Skirfy Piano Mat, including keyboard and drum functions, and its foldable design.

Your browser does not support the video tag.

Video showcasing the dance mat features of the M SANMERSEN Piano Mat, highlighting its use for active play.

Your browser does not support the video tag.

Video highlighting the M SANMERSEN Piano Mat as an educational toy and ideal gift for various occasions like birthdays and Christmas.

MAINTENANCE

- **Cleaning:** Wipe the mat surface with a soft, damp cloth. Do not immerse the control unit in water. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, fold the mat compactly and store it in a dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the mat will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or low volume	Batteries are low or incorrectly inserted; Volume is too low.	Replace batteries with new ones, ensuring correct polarity. Increase volume using the '+' button.
Mat not responding to touch	Mat is not powered on; Connection issue.	Ensure the ON/OFF switch is in the 'ON' position. Check battery connection.
Distorted sound	Low batteries; Interference.	Replace batteries. Move the mat away from other electronic devices.

SPECIFICATIONS

- **Product Model Number:** 1593
- **Brand:** M SANMERSEN
- **Product Dimensions:** 2.54 x 2.54 x 2.54 cm (folded); 53 x 23 inches (unfolded)
- **Product Weight:** 450 g
- **Main Material:** Non-woven fabric
- **Target Gender:** Unisex
- **Manufacturer Recommended Age:** 36 months to 10 years
- **Battery Requirement:** 3 x 1.5V AA batteries (not included)
- **ASIN:** B07PBQG4YZ

SAFETY INFORMATION

- Always supervise children during play.
- Keep the mat away from water and moisture to prevent electrical hazards.
- Do not use rechargeable batteries.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly.
- Ensure the mat is placed on a flat, stable surface to prevent tripping hazards.
- Do not modify or disassemble the product.

Safe & Ideal Educational Gifts



An adult and baby interacting with the mat, highlighting its safety features and suitability as an educational gift.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact M SANMERSEN customer service directly. Keep your purchase receipt for any warranty claims.