



Manuals.plus /

› **Huaker** /

› Huaker Kids Walkie Talkies (Model 6910088168285) Instruction Manual

Huaker 6910088168285

Huaker Kids Walkie Talkies Instruction Manual

Model: 6910088168285

Brand: Huaker

1. INTRODUCTION

Thank you for choosing Huaker Kids Walkie Talkies. This manual provides essential information for the safe and effective use of your new 3-pack 22-channel two-way radios. Please read these instructions carefully before operation and retain for future reference.

2. PRODUCT OVERVIEW

The Huaker Kids Walkie Talkies are designed for children aged 3-12, offering a fun and reliable communication tool for various activities. Key features include:

- **22 Channels:** Provides multiple options for clear communication.
- **99 Sub-channels:** Enhances privacy and reduces interference.
- **3KM Range:** Offers communication up to 3 kilometers in open areas.
- **Built-in Flashlight:** Useful for low-light conditions or nighttime adventures.
- **VOX Function:** Hands-free operation for convenience.
- **LCD Screen:** Backlit display for easy viewing of channel, volume, and battery status.
- **Keypad Lock:** Prevents accidental changes to settings.
- **Durable Design:** Crafted from kid-safe ABS plastic, meeting ASTM F963 safety standards.



Image 2.1: The three walkie talkies included in the pack, showcasing their camouflage designs.



Press the lock on the top of the clip



Lift the clip up



Release the battery cover



Power with 4AAA Batteries
(Not Included)

Image 2.2: Labeled diagram of the walkie talkie's components and controls.

3. SETUP

3.1 Battery Installation

Each walkie talkie requires 4 AAA batteries (not included). Follow these steps to install batteries:

1. Locate the belt clip on the back of the walkie talkie.
2. Press the lock tab on the top of the clip and slide the clip upwards to remove it.
3. Gently pry open the battery compartment cover.
4. Insert 4 AAA batteries, ensuring correct polarity (+/-).
5. Replace the battery compartment cover and reattach the belt clip.

22 Channels

Each channel has 99 password (Tone Group) which greatly enhances the call of privacy



Flashlight



Noise Reduction



Drop Resistant



3KM



99 Subchannels



Super Clear

Image 3.1: Steps for battery installation.

3.2 Power On/Off

To power on, press and hold the **MENU/POWER** button until the LCD screen lights up. To power off, press and hold the same button until the screen turns off.

4. OPERATING INSTRUCTIONS

4.1 Channel Selection

Your walkie talkies have 22 available channels. To change channels:

1. Press the **MENU/POWER** button once. The channel number on the LCD will flash.
2. Use the **UP (▲)** or **DOWN (▼)** buttons to select your desired channel (1-22).
3. Press the **MENU/POWER** button again to confirm, or wait a few seconds for it to set automatically.

4.2 Sub-Channel (Privacy Codes)

To ensure private communication and reduce interference, you can set sub-channels:

1. Press the **MENU/POWER** button twice. The sub-channel number will flash.

2. Use the **UP (▲)** or **DOWN (▼)** buttons to select your desired sub-channel (0-99).
3. Press the **MENU/POWER** button again to confirm, or wait a few seconds for it to set automatically.

Note: All walkie talkies must be on the same channel and sub-channel to communicate.

4.3 VOX Function (Hands-Free)

The VOX function allows you to transmit by speaking into the microphone without pressing the PTT button. To activate/deactivate VOX:

1. Press the **MENU/POWER** button three times. "VOX" will appear on the screen.
2. Use the **UP (▲)** or **DOWN (▼)** buttons to select the VOX sensitivity level (1-3, with 3 being most sensitive) or "OF" to turn it off.
3. Press the **MENU/POWER** button again to confirm.

4.4 Call Tone

You can choose from 10 different call tones:

1. Press the **MENU/POWER** button four times. "CA" will appear on the screen.
2. Use the **UP (▲)** or **DOWN (▼)** buttons to cycle through the 10 call tones.
3. Press the **MENU/POWER** button again to confirm.

4.5 Keypad Lock

To prevent accidental button presses, you can lock the keypad:

- Press and hold the **CALL/LOCK** button for a few seconds until a lock icon appears on the LCD.
- To unlock, press and hold the **CALL/LOCK** button again until the lock icon disappears.

4.6 Flashlight

Each walkie talkie includes a built-in flashlight:

- Press the **LAMP** button once to turn the flashlight on.
- Press the **LAMP** button again to turn the flashlight off.

4.7 Talking (PTT Button)

To transmit your voice:

- Press and hold the **PTT (Push-To-Talk)** button located on the side of the walkie talkie.
- Speak clearly into the microphone.
- Release the **PTT** button to listen for a response.

Your browser does not support the video tag.

Video 4.1: An official Huaker video demonstrating the basic functions and features of the walkie talkies, including power on/off, channel selection, and flashlight operation.

5. MAINTENANCE

5.1 Battery Replacement

When the battery indicator on the LCD screen shows low power, replace all 4 AAA batteries in the unit. Always replace all batteries at the same time and use new, good quality batteries for optimal performance.

5.2 Cleaning

To clean your walkie talkies, use a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the unit. Keep the devices dry.

5.3 Storage

When not in use for extended periods, remove the batteries to prevent leakage and damage. Store the walkie talkies in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **No Power:** Ensure batteries are correctly installed and are not depleted. Replace with new batteries if necessary.
- **Cannot Communicate:** Verify that all walkie talkies are on the same channel and sub-channel. Check battery levels. Ensure no obstructions are blocking the signal.
- **Interference/Static:** Change to a different channel and sub-channel. Move to an area with fewer obstructions or electronic devices.
- **Short Range:** Range can be affected by terrain, weather, and obstructions. For optimal range, use in open outdoor areas.
- **Keypad Unresponsive:** Check if the keypad lock function is activated (lock icon on LCD). Press and hold the CALL/LOCK button to unlock.

7. SPECIFICATIONS

Feature	Detail
Brand	Huaker
Model Number	6910088168285
Number of Channels	22
Talking Range Maximum	3 Kilometers
Frequency Range	462.5625 MHz
Batteries Required	4 AAA batteries per unit (not included)
Voltage	1.5 Volts
Product Dimensions	0.9"D x 2.1"W x 5.5"H
Item Weight	9.1 ounces
Recommended Age	36 months - 12 years
Water Resistance Level	Not Water Resistant
Special Features	Broadcast to multiple units, Built-in flashlight, Different channels, Ergonomic design, VOX function

8. SAFETY INFORMATION

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the device is not used for a long period.
- This product is not water resistant. Avoid exposure to water or moisture.
- Adult supervision is recommended for young children during use.

9. WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your Huaker Kids Walkie Talkies, please refer to the seller's contact information on your purchase platform. Keep your purchase receipt for warranty claims, if applicable.