

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Sharp SPC1225A

Sharp LED Digital Alarm Clock User Manual

Model: SPC1225A

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your Sharp LED Digital Alarm Clock. Designed for simplicity and ease of use, this clock features a large, easy-to-read LED display, a built-in night light, and intuitive front-panel controls. Please read this manual thoroughly before using the product to ensure proper function and longevity.

SAFETY INFORMATION

- Ensure the clock is placed on a stable, flat surface to prevent falling.
- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- Keep the clock away from water or other liquids. Do not immerse in water.
- Use only the specified power source (corded electric).
- For battery backup, use one 9V battery (not included). Do not mix old and new batteries or different types of batteries.
- Do not attempt to disassemble or repair the clock yourself. Refer all servicing to qualified personnel.
- Keep out of reach of small children to prevent accidental ingestion of small parts or batteries.

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Sharp LED Digital Alarm Clock.



Front view of the Sharp LED Digital Alarm Clock, showcasing its large, bright red LED display and front-facing controls.

SHARP®



Detailed view of the clock's front panel controls, including buttons for time setting, alarm setting, snooze, and night light activation. Labels indicate the function of each button and indicator.

SHARP®



An infographic illustrating the main features: 1.8-inch LED display, integrated nightlight, user-friendly keyboard-style controls, and the option for 9V battery backup.

SHARP®



A perspective view showing both the front of the clock with its display and controls, and the back where the nightlight panel is located.

SHARP



JUMBO TRUE NIGHTLIGHT

A top-down view emphasizing the wide, illuminated nightlight panel on the top of the clock, measuring 5.8 inches.

SHARP



PRODUCT DIMENSIONS

A side profile of the alarm clock with its dimensions clearly marked: 7 inches in width, 3.5 inches in height, and 2.25 inches in depth.

SETUP

- Power Connection:** Plug the power cord into a standard electrical outlet. The LED display will illuminate.
- Battery Backup (Optional):** For power outage protection, insert one 9V battery (not included) into the battery compartment located on the bottom of the clock. This will retain time and alarm settings during a power interruption, though the display will go blank.

OPERATING INSTRUCTIONS

Setting the Time

1. Press and hold the **TIME** button located on the front panel. The hour digits will begin to flash.
2. While holding the **TIME** button, press the **HOUR** button repeatedly to advance the hour. Observe the PM indicator to ensure correct AM/PM setting.
3. Continue holding the **TIME** button and press the **MINUTE** button repeatedly to advance the minute.
4. Release the **TIME** button to set the current time.

Setting the Alarm

1. Press and hold the **ALARM** button located on the front panel. The alarm hour digits will begin to flash.
2. While holding the **ALARM** button, press the **HOUR** button repeatedly to set the alarm hour. Observe the PM indicator for correct AM/PM setting.
3. Continue holding the **ALARM** button and press the **MINUTE** button repeatedly to set the alarm minute.
4. Release the **ALARM** button to set the alarm time.

Activating/Deactivating the Alarm

- To turn the alarm **ON**, slide the **ALARM ON/OFF** switch to the "ON" position. An alarm indicator light will appear on the display.
- To turn the alarm **OFF**, slide the **ALARM ON/OFF** switch to the "OFF" position. The alarm indicator light will disappear.

Using the Snooze Function

- When the alarm sounds, press the large **SNOOZE** bar on the front of the clock. The alarm will temporarily stop and sound again after approximately 9 minutes.
- The snooze function can be pressed repeatedly until the alarm is manually switched off.

Using the Night Light

- To turn the night light **ON**, slide the **NIGHTLIGHT ON/OFF** switch to the "ON" position. The top panel of the clock will illuminate.
- To turn the night light **OFF**, slide the **NIGHTLIGHT ON/OFF** switch to the "OFF" position.

MAINTENANCE

- **Cleaning:** To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- **Battery Replacement:** If using battery backup, replace the 9V battery annually or when the clock fails to retain settings during a power outage. Ensure proper polarity when inserting the new battery.
- **Storage:** If storing the clock for an extended period, disconnect it from the power outlet and remove the battery. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank.	No power or power outage.	Ensure the power cord is securely plugged into a working outlet. If there was a power outage, the display will return when power is restored (if battery backup is not used).

Problem	Possible Cause	Solution
Alarm does not sound.	Alarm is not set or alarm switch is OFF.	Verify the alarm time is set correctly. Ensure the ALARM ON/OFF switch is in the "ON" position.
Time/Alarm settings are lost after power interruption.	No 9V battery installed or battery is dead.	Install a fresh 9V battery for battery backup. Replace the battery if it is old or depleted.
Night light does not turn on.	Night light switch is OFF.	Ensure the NIGHTLIGHT ON/OFF switch is in the "ON" position.

SPECIFICATIONS

Brand: Sharp

Model: SPC1225A

Display Type: Digital LED

Display Size: 1.8 inches (digits)

Color: Black - Red LED

Power Source: Corded Electric

Battery Backup: 1 x 9V battery (not included)

Product Dimensions: 7"W x 3.5"H x 2.25"D

Item Weight: 14 ounces

Special Features: Alarm, Snooze, Built-in Night Light, Front-panel controls

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Sharp website. Keep your purchase receipt as proof of purchase for warranty claims. For additional assistance, you may contact the manufacturer directly via their official support channels. Please have your model number (SPC1225A) and purchase date ready when contacting support.

