

## Sony SRS-XB32

# Sony SRS-XB32 Portable Bluetooth Speaker Instruction Manual

MODEL: SRS-XB32

## 1. PRODUCT OVERVIEW

---

The Sony SRS-XB32 is a portable Bluetooth speaker designed to deliver powerful sound with enhanced bass. It features multicolor lights and a flashing strobe to create a dynamic atmosphere. Built for durability, it is waterproof, dustproof, and shockproof, making it suitable for various environments. The speaker offers extended battery life and supports wireless party chain functionality for connecting multiple units.

### Key Features:

- **Extra Bass:** Enhanced low-end tones for a powerful audio experience.
- **Live Sound Mode:** Creates a three-dimensional sound experience.
- **Multicolor Lights & Strobe:** Customizable lighting that syncs with the music.
- **Party Booster Mode:** Tap the speaker in different places to create sound effects.
- **Wireless Connectivity:** Bluetooth and Near Field Communication (NFC) for seamless pairing.
- **App Control:** Customize settings and playlists using Fiestable and Sony Music Center apps.
- **Durable Design:** Waterproof, dustproof, and shockproof for outdoor and active use.
- **Long Battery Life:** Up to 24 hours of music playback, or 14 hours with Extra Bass activated.



Figure 1: Front view of the Sony SRS-XB32 Portable Bluetooth Speaker.

## 2. SETUP

---

### 2.1 Charging the Speaker

Before initial use, fully charge the speaker using the supplied USB cable. The charging port is located under a protective flap on the rear of the speaker. A full charge provides up to 24 hours of playback (14 hours with Extra Bass).



Figure 2: Rear view of the speaker with the protective flap covering the ports.

Video 1: A user demonstrates the charging port and battery indicator on the Sony SRS-XB32 speaker.

## 2.2 Bluetooth Pairing

1. Turn on the speaker by pressing the power button.
2. The Bluetooth indicator will flash rapidly, indicating it's in pairing mode.
3. On your smartphone or audio device, enable Bluetooth and search for available devices.
4. Select "SRS-XB32" from the list. Once connected, the Bluetooth indicator will stop flashing and remain lit.
5. For NFC-compatible devices, simply touch the device to the N-Mark on the speaker to establish a connection.

## 3. OPERATION

---

### 3.1 Power On/Off

Press the **Power** button located on the top panel to turn the speaker on or off.

### 3.2 Adjusting Volume

Use the **Volume +** and **Volume -** buttons on the speaker or your connected device to adjust the audio level.

### 3.3 Audio Modes (Extra Bass, Live Sound)

- **Extra Bass:** Press the **EXTRA BASS** button to activate or deactivate the enhanced bass feature.
- **Live Sound:** Press the **LIVE** button to switch to Live Sound mode for a wider, three-dimensional audio experience.

### 3.4 Lighting Features

The speaker features multicolor line lights and a flashing strobe that synchronize with the music. These can be customized or turned off using the Sony Music Center or Fiestable apps.



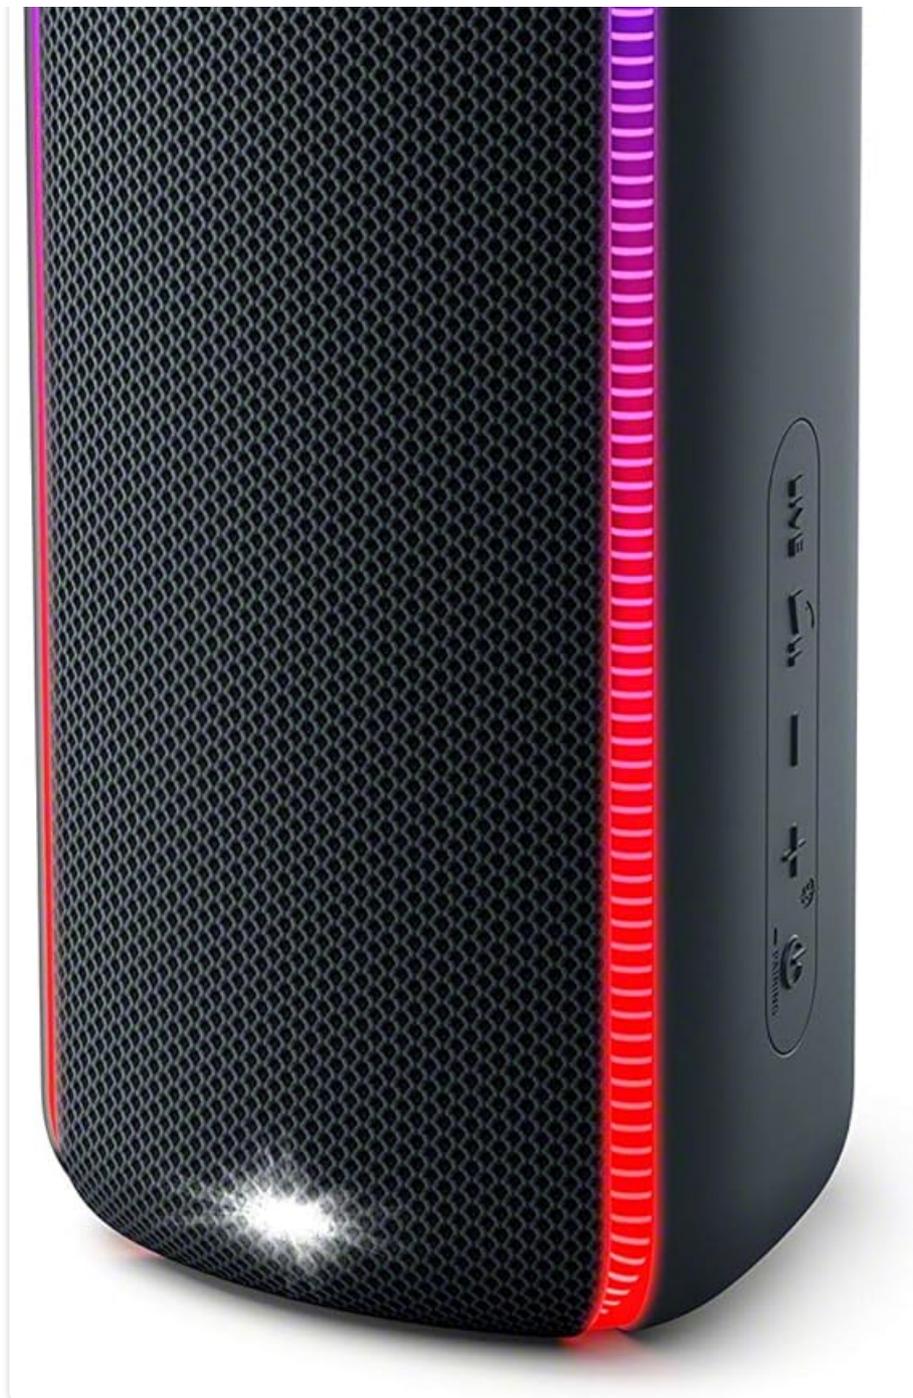


Figure 3: The SRS-XB32 speaker displaying its dynamic multicolor lighting.

Video 2: An official product video showcasing the Sony SRS-XB32's Extra Bass and lighting features.

### 3.5 Party Booster Mode

Activate Party Booster mode to turn your speaker into an instrument. Tap different parts of the speaker to produce various sound effects like a scratch, snare, kick drum, or cowbell. The volume of these effects can be controlled by how hard you tap.

### 3.6 App Control

Download the **Sony Music Center** app to control music playback, sound modes, and lighting effects. For more advanced party features, including DJ effects and lighting customization, use the **Fiestable** app.

## 4. MAINTENANCE

---

## 4.1 Water, Dust, and Shock Resistance

The SRS-XB32 is designed with an IP67 rating, meaning it is waterproof and dustproof. It can be submerged in water up to 1 meter for 30 minutes. The speaker is also shockproof, built to withstand impacts from drops. Ensure the port cover is securely closed to maintain water and dust resistance.



Figure 4: The SRS-XB32 speaker demonstrating its outdoor durability on a beach.

## 4.2 Cleaning

To clean the speaker, wipe it with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water. Avoid using abrasive cleaners, alcohol, or solvents, as these can damage the surface.

## 5. TROUBLESHOOTING

---

- **No Power:** Ensure the speaker is charged. Connect it to a power source using the USB cable.
- **No Sound:** Check the volume levels on both the speaker and your connected device. Ensure the Bluetooth connection is active and stable.
- **Cannot Pair Bluetooth:** Make sure the speaker is in pairing mode (Bluetooth indicator flashing). Turn off and on Bluetooth on your device, and try pairing again. If issues persist, reset the speaker (refer to the full user manual for reset instructions).
- **Lights Not Working:** Check the settings in the Sony Music Center or Fiestable apps. Ensure the light feature is enabled.

## 6. SPECIFICATIONS

---

Feature	Detail
Brand	Sony
Model Name	SRSXB32/B
Material	Plastic
Speaker Type	Loudest Portable Bluetooth Performance Speaker
Special Feature	Portable
Connectivity Technology	Bluetooth, NFC, Wireless
Wireless Communication Technology	NFC, Bluetooth, Wireless
Control Method	App
Power Source	Battery Powered
Battery Capacity	14000 Milliamp Hours
Is Waterproof	TRUE
Water Resistance Level	Waterproof
Item Weight	1.98 Pounds
Product Dimensions	10.63 x 4.49 x 5.55 inches
Included Components	USB Cable, Warranty Card

## 7. WARRANTY AND SUPPORT

---

The Sony SRS-XB32 Portable Bluetooth Speaker comes with a **Limited Warranty**. For detailed warranty information, please refer to the Warranty Card included in the box.

For further support, product registration, or to access the full user manual, please visit the official Sony Store or their support website:

[Visit the Sony Store on Amazon](#)