

Amazon Basics GF43050L

Amazon Basics Smudge Resistant Rectangular Trash Can

User Manual for Model GF43050L

1. INTRODUCTION

Thank you for choosing the Amazon Basics Smudge Resistant Rectangular Trash Can. This manual provides important information regarding the setup, operation, maintenance, and troubleshooting of your new trash can. Please read this manual thoroughly before use and retain it for future reference.





Image: The Amazon Basics 50 Liter / 13.2 Gallon Rectangular Trash Can in Satin Nickel finish, with its lid open, revealing the black removable inner bucket. The foot pedal is visible at the base.

2. PRODUCT FEATURES

This trash can is designed for convenience and durability, offering several key features:

- **Convenient Size:** 50 liter / 13.2 gallon capacity, suitable for home or office use.
- **Everyday Use:** Features a stay-open lid, a removable inner bucket, and a carry handle for easy and convenient trash disposal.
- **Durable Construction:** Made with a smudge-resistant stainless steel exterior and a heavy-duty plastic inner bucket for reliable strength and longevity.
- **Quiet Operation:** Equipped with a manual foot lever and a soft-close lid mechanism, ensuring ultra-quiet opening and closing.



Removable heavy-duty plastic bucket with handle for waste disposal



Soft-close lid reduces noise from opening/closing



Works with a 1.3-gallon trash bag

Stainless Steel

50 liter / 13.2 gallon

Image: A graphic illustrating the key features of the Amazon Basics trash can, including the removable heavy-duty plastic bucket with handle, the soft-close lid for noise reduction, and compatibility with 13.2-gallon trash bags. The trash can itself is shown on the left.

3. SETUP

Setting up your Amazon Basics trash can is straightforward:

1. **Unpack:** Carefully remove the trash can and all packaging materials from the box.
2. **Position:** Place the trash can on a flat, stable surface in your desired location.
3. **Insert Liner:** Lift the removable inner bucket out of the main body. Place a 13.2-gallon (50 liter) trash bag into the inner bucket, ensuring the edges of the bag are folded over the rim of the bucket.
4. **Replace Bucket:** Carefully lower the inner bucket with the trash bag back into the main body of the trash can. Ensure it sits securely.

4. OPERATING INSTRUCTIONS

Using your trash can is simple and efficient:

- **Opening the Lid (Foot Pedal):** Gently press down on the foot pedal located at the base of the trash

can. The lid will open smoothly. Release the pedal to allow the lid to close softly and quietly.

- **Stay-Open Lid Feature:** For extended use or when changing trash bags, you can manually lift the lid to a 90-degree angle. The lid is designed to stay open at this position, providing easy access to the inner bucket. To close, gently push the lid down until the soft-close mechanism engages.
- **Removing Trash:** When the trash bag is full, use the stay-open lid feature. Lift the inner bucket using its integrated handle. Remove the full trash bag and dispose of it properly.
- **Replacing Trash Bag:** Follow step 3 and 4 from the "Setup" section to insert a new trash bag and replace the inner bucket.



Image: A person's feet are shown pressing the foot pedal of the Amazon Basics rectangular trash can, demonstrating its hands-free operation.

Stay-Open & Soft-Close Lid

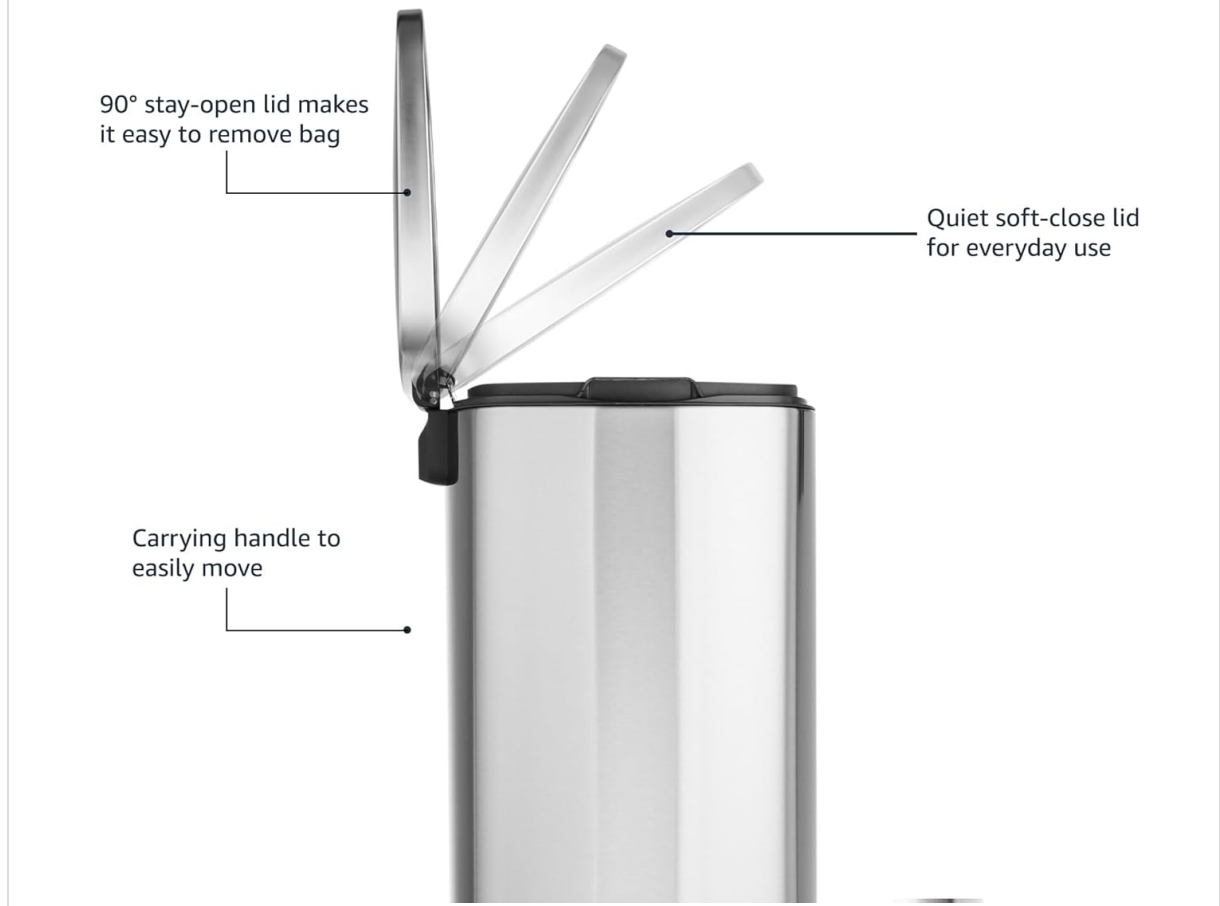


Image: A diagram illustrating the lid's functionality, highlighting the 90-degree stay-open position for easy bag removal and the quiet soft-close mechanism. A carrying handle on the side of the trash can is also indicated.

5. CARE AND MAINTENANCE

To keep your trash can in optimal condition, follow these cleaning guidelines:

- **Exterior Cleaning:** Wipe the stainless steel exterior with a soft, damp cloth and a mild detergent. For best results and to maintain the smudge-resistant finish, dry immediately with a clean, soft cloth. Avoid abrasive cleaners or scouring pads, as these can damage the finish.
- **Inner Bucket Cleaning:** The removable inner bucket can be washed with soap and water. Rinse thoroughly and allow it to dry completely before placing it back into the trash can.
- **Odor Control:** To prevent odors, regularly clean the inner bucket and consider using odor-absorbing products inside the trash can.

6. TROUBLESHOOTING

If you encounter any issues with your trash can, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lid does not close softly.	Mechanism obstructed or dirty.	Check for any debris or objects obstructing the soft-close mechanism. Clean the hinge area if necessary.
Foot pedal is stiff or unresponsive.	Mechanism dirty or misaligned.	Inspect the pedal mechanism for any foreign objects. Ensure the trash can is on a level surface.
Inner bucket is difficult to remove or insert.	Trash bag is overfilled or misaligned.	Do not overfill the trash bag. Ensure the trash bag is properly seated within the inner bucket and not catching on the sides of the main body.

If the problem persists after attempting these solutions, please contact Amazon Basics customer support for further assistance.

7. SPECIFICATIONS

Attribute	Detail
Product Dimensions (L x W x H)	16.73 x 14.65 x 25.87 inches (42.49 x 37.21 x 65.71 cm)
Weight	13.21 Pounds (5.99 kg)
Capacity	50 Liter / 13.2 Gallons
Model Number	GF43050L
Material	Stainless Steel (exterior), Heavy-duty Plastic (inner bucket)
Finish Type	Brushed Satin Nickel
Opening Mechanism	Open-Top, Step-On Foot Pedal
Special Feature	Quiet Close, Smudge Resistant






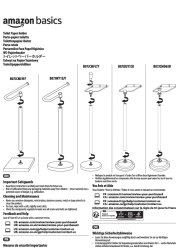 
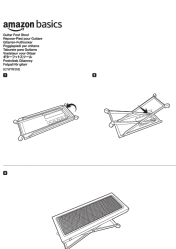 
Image: A diagram illustrating the precise dimensions of the Amazon Basics 50 Liter trash can: 16.73 inches (42.49 cm) length, 14.65 inches (37.21 cm) width, and 25.87 inches (65.71 cm) height.

8. WARRANTY AND SUPPORT

This Amazon Basics product is backed by Amazon's standard return and warranty policies. For specific details regarding your purchase, please refer to your order details on Amazon.com or visit the Amazon Basics store page.

For customer support, troubleshooting assistance, or to inquire about replacement parts, please contact Amazon Customer Service through your Amazon account or visit the [Amazon Basics Store](#).

Please have your product model number (GF43050L) and purchase information ready when contacting support.

 <p>Amazon Basics Automatic Stainless Steel Trash Can Set - Rectangular, 50 Liter, 12 Liter Ensemble de Poubelles Automatiques en Acier Inoxydable - Rectangulaire, 50 Litres, 12 Litres AmazonBasics Automatic Set 50L Automatic Function - Rectangular, 50 Liter, 12 Liter Set Contiene: Poubella Automática en Acero Inoxidable, 50 Litros, 12 Litros B07MFCG7W</p>	<p>AmazonBasics Automatic Stainless Steel Trash Can Set - User Manual & Guide</p> <p>Detailed user manual for the AmazonBasics Automatic Stainless Steel Trash Can Set (50L & 12L). Learn about setup, operation, safety, cleaning, troubleshooting, and disposal.</p>
 <p>Amazon Basics Narrow Kitchen Plastic Trash Can with Steel Pedal Poubelle de Cuisine Étroite en Plastique avec Pédales en Acier Reservoir de Déchets de Plastique pour Cuisines avec Pédales en Acier B07J2C3M95</p>	<p>Amazon Basics Narrow Kitchen Trash Can User Manual</p> <p>User manual for the Amazon Basics Narrow Kitchen Plastic Trash Can with Steel Pedal, Black, 40-Liter. Includes setup, usage, and cleaning instructions.</p>
 <p>Amazon Basics Automatic Stainless Steel Trash Can - Rectangular, 50 Liter Poubelle Automatique en Acier Inoxydable - Rectangulaire, 50 Litres AmazonBasics Automatic 50L Automatic Function - Rectangular, 50 Liter Set Contiene: Poubella Automática en Acero Inoxidable - Rectangular, 50 Litros B07MFCG7W</p>	<p>AmazonBasics Automatic Stainless Steel Trash Can - 50-Liter User Manual</p> <p>User manual and guide for the AmazonBasics Automatic Stainless Steel Trash Can, Rectangular, 50-Liter. Features hands-free motion sensor operation, battery installation, cleaning, troubleshooting, and disposal information.</p>
 <p>Amazon Basics Electronic Keypad Entry Lever Door Lock Verrou de Porte à Levier pour Porte d'Intérieur avec Clavier Électronique Cerradura de Puerta con Manija y Teclado Electrónico de Acero B07JAN5PFL</p>	<p>Amazon Basics Electronic Keypad Entry Lever Door Lock: Safety and Use Manual</p> <p>Comprehensive safety and use manual for the Amazon Basics Electronic Keypad Entry Lever Door Lock, covering installation, operation, programming, troubleshooting, and specifications.</p>
 <p>Amazon Basics Toilet Paper Holder Supporte de Papier Toilette B07JCMFJ97, B07JW71SJY, B07JCMFLTT, B07JB5Y1CK, B07JCMD65D</p>	<p>Amazon Basics Toilet Paper Holder - Product Information and Safety Guidelines</p> <p>Discover the Amazon Basics range of toilet paper holders, including models B07JCMFJ97, B07JW71SJY, B07JCMFLTT, B07JB5Y1CK, and B07JCMD65D. This guide provides essential safety, cleaning, and maintenance information.</p>
 <p>Amazon Basics Guitar Foot Stool Tabouret pour Pied de Guitare B07WTRFSMB</p>	<p>Amazon Basics Guitar Foot Stool - User Manual, Safety & Specifications (B07WTRFSMB)</p> <p>Comprehensive user manual for the Amazon Basics Guitar Foot Stool (Model B07WTRFSMB). Includes important safety warnings, cleaning instructions, product specifications, and assembly guidance.</p>