

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fisher-Price](#) /

› [Fisher-Price Little People Toddler Playhouse Big Helpers Home Playset Instruction Manual](#)

Fisher-Price GLK19

Fisher-Price Little People Toddler Playhouse Big Helpers Home Playset Instruction Manual

Model: GLK19

INTRODUCTION

The Fisher-Price Little People Big Helpers Home playset offers an interactive play experience for toddlers. This playset features multiple rooms with realistic elements, designed to encourage imaginative play and teach helpful habits through songs, sounds, and phrases. Engaging with the figures and accessories supports the development of fine motor skills.

WHAT'S INCLUDED

The package contains the following items:

- 1 x Fisher-Price Little People Big Helpers Home Playset
- 2 x Little People character figures
- 1 x Dog figure
- 3 x Play accessories (e.g., chairs, bed, food bowl)
- 2 x AA batteries (pre-installed or included for initial use)



Image: The playset unfolded, showing the main house structure, two Little People figures, a dog figure, two yellow chairs, and an orange dog bed/food bowl accessory.



Image: The playset displayed in its retail packaging, showing the product name, brand, and age recommendation.

SETUP

1. **Unboxing:** Carefully remove all components from the packaging. Adult assembly is required, but no tools are needed for this process.
2. **Battery Installation:** The playset requires 2 AA batteries. Locate the battery compartment, typically on the underside or back of the main unit. Use a Phillips head screwdriver to open the compartment, insert new batteries observing polarity (+/-), and secure the cover. *(Note: Batteries may be included for demonstration purposes.)*
3. **Unfolding the Playset:** The playset is designed to open for 360-degree play. Gently unfold the side sections of the house to reveal all play areas.



Interactive playset with
songs about helping others

AGES
1-5Y

Image: A child interacting with the playset, which is fully unfolded to allow access to all rooms and features for 360-degree play.

OPERATING INSTRUCTIONS

The Big Helpers Home playset offers various interactive features:

- **Discovery Buttons:** Press the designated "Discovery Buttons" located throughout the playset to activate songs, sounds, phrases, and lights. These interactive elements are designed to encourage children to engage in helpful activities around the house.
- **Role-Playing:** Use the included Little People figures and accessories to simulate daily routines. Children can pretend to feed the dog, make the bed, or put away toys, fostering imaginative play and teaching responsibility.
- **Interactive Learning:** The playset's audio cues and phrases introduce concepts of helping others and healthy habits in an engaging way.



Open the sides for 360° of play

Image: A close-up view of a hand pressing one of the red Discovery Buttons on the playset, which illuminates a yellow light fixture, indicating an activated feature.



Image: The playset with two Little People figures and a dog figure, highlighting its interactive nature with text indicating "Interactive playset with songs about helping others" and an age range of 1-5 years.

MAINTENANCE

- **Cleaning:** Wipe the playset and figures with a damp cloth and mild soap. Do not immerse electronic parts in water. Ensure all parts are dry before storage or further use.
- **Storage:** When not in use, the playset can be folded for compact storage. Store in a cool, dry place away from direct sunlight.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or lights	Dead or incorrectly installed batteries.	Check battery polarity. Replace with fresh AA batteries.
Intermittent sound/lights	Low batteries or loose connection.	Replace batteries. Ensure battery compartment is securely closed.
Playset does not fold/unfold smoothly	Obstruction or misalignment.	Check for any small objects or parts blocking the hinges. Gently adjust the sections.

SPECIFICATIONS

Product Dimensions: 28 x 6 x 15.98 inches

Item Weight: 2.2 pounds

Model Number: GLK19

Manufacturer Recommended Age: 12 months - 5 years

Batteries: 2 AA batteries required (included)

Manufacturer: Fisher-Price

Release Date: July 31, 2018

WARRANTY AND SUPPORT

This product is covered by the standard Fisher-Price warranty. For detailed warranty information, product support, or to inquire about replacement parts, please visit the official Fisher-Price website or contact their customer service department. Keep your proof of purchase for warranty claims.

Online Support: www.fisher-price.com