

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CRAFTSMAN](#) /

› [CRAFTSMAN CMXGZBF7124441 42-Inch Snow Blade Instruction Manual](#)

CRAFTSMAN CMXGZBF7124441

CRAFTSMAN 42-Inch Snow Blade

MODEL: CMXGZBF7124441 - INSTRUCTION MANUAL

Introduction

This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your CRAFTSMAN CMXGZBF7124441 42-Inch Snow Blade. Please read all instructions carefully before use to ensure proper function and longevity of your product.

The CRAFTSMAN 42-Inch Snow Blade is designed for efficient snow removal, particularly for snowfalls of 8 inches or less. Its robust construction and user-friendly features make clearing sidewalks, paths, and driveways convenient.

Key Features:

- **42-inch Wide Blade:** Angles left, center, or right for versatile snow removal.
- **Tractor Seat Control:** Blade can be lifted and lowered directly from the tractor seat.
- **Adjustable Trip Spring:** Features a single adjustable trip spring on the rear of the blade head for easy riding over obstacles.
- **Replaceable Scraper Blade:** Ensures extended product life and easy maintenance.
- **Heavy-Duty Construction:** Constructed of heavy-duty 13 gauge steel for durability and longevity.

Safety Information

WARNING: Always wear appropriate protective gear, including gloves and eye protection, when using this snow blade. Be cautious of sharp edges and avoid contact with underground utilities. Always lift with your legs, not your back, to prevent injury.

Familiarize yourself with all safety decals on the product and in your tractor's owner's manual. Ensure all guards and safety devices are in place and functioning correctly before operation.

Never allow children or untrained individuals to operate the snow blade. Keep bystanders, especially small children and pets, away from the operating area.

Components Overview

The CRAFTSMAN 42-Inch Snow Blade consists of several key components designed for efficient snow removal and attachment to compatible garden tractors.



Image Description: An overhead view of the Craftsman 42-Inch Snow Blade attached to a red garden tractor. Key features are highlighted with dashed lines and text labels: "HEIGHT ADJUSTMENT HANDLE RAISE/LOWER FROM TRACTOR SEAT", "BLADE PIVOT FEATURE PROVIDES IMPROVED SNOW REMOVAL", "UNIVERSAL FIT BRACKETS ATTACH TO A VARIETY OF GARDEN TRACTORS", and "REMOVABLE WEAR PLATE INCREASED PRODUCT LIFE". A "PROUDLY MADE IN THE USA WITH GLOBAL MATERIALS" logo is also visible.

- **Snow Blade:** The primary component for pushing snow.
- **Wear Plate/Scraper Blade:** A replaceable strip at the bottom of the blade that contacts the ground.
- **Blade Pivot Mechanism:** Allows the blade to angle left, right, or center.
- **Height Adjustment Handle:** Used to raise and lower the blade from the tractor seat.
- **Universal Fit Brackets:** Designed for attachment to various garden tractors.
- **Trip Spring:** Allows the blade to trip forward when encountering obstacles, preventing damage.

Setup and Assembly

Assembly of the CRAFTSMAN 42-Inch Snow Blade typically involves attaching the blade to the mounting frame and then securing the entire assembly to your garden tractor using the universal fit brackets. Refer

to the detailed assembly instructions provided in the packaging for step-by-step guidance.

Key Assembly Steps:

- 1. Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list.
- 2. Assemble Blade to Frame:** Attach the snow blade to its pivot frame using the provided hardware. Ensure all bolts are tightened securely.
- 3. Install Universal Brackets:** Mount the universal fit brackets to your garden tractor's frame according to your tractor's specifications.
- 4. Attach Blade Assembly to Tractor:** Connect the snow blade assembly to the installed universal brackets.
- 5. Connect Control Linkages:** Attach the height adjustment handle and blade pivot linkages, ensuring they operate smoothly.
- 6. Adjust Wear Plate:** Set the height of the replaceable scraper blade to the desired ground clearance.



UNIVERSAL FIT BRACKET ATTACH TO A VARIETY OF GARDEN TRACTORS

Image Description: A close-up view of the universal fit brackets attached to the underside of a red garden tractor, near the front wheels. The brackets are black metal, designed to securely hold the snow blade attachment.

Operating Instructions

Before operating, ensure your garden tractor is in good working condition and suitable for snow removal

tasks. Always wear appropriate safety gear.

Pre-Operation Checklist:

- Verify all fasteners are tight.
- Check tire pressure on your tractor.
- Ensure the area to be cleared is free of hidden obstacles.
- Adjust the blade height and angle as needed for current snow conditions.

Snow Removal Procedure:

1. **Start Tractor:** Start your garden tractor and allow it to warm up.
2. **Lower Blade:** Use the height adjustment handle to lower the snow blade to the desired working position.
3. **Adjust Blade Angle:** If necessary, adjust the blade to angle left, right, or straight ahead to direct snow.
4. **Begin Plowing:** Drive the tractor forward at a slow, steady pace. Avoid high speeds, especially on rough or uneven terrain.
5. **Clear in Sections:** For heavy snow, clear in smaller sections or make multiple passes.
6. **Maneuvering:** The blade's pivot feature allows it to ride over minor obstacles, reducing impact.



**HEIGHT ADJUSTMENT HANDLE
RAISE/LOWER FROM TRACTOR SEAT**

Image Description: A person wearing a plaid shirt and work gloves is seated on a red garden tractor, operating the height

adjustment handle for the attached black snow blade. The blade is positioned to clear snow from a driveway.



BLADE PIVOT FEATURE PROVIDES IMPROVED SNOW REMOVAL

Image Description: A red garden tractor is actively clearing snow from a paved area using the attached black snow blade. The blade is angled to the side, demonstrating its pivot feature for improved snow removal. The ground is covered in a layer of snow.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your snow blade. Perform checks before and after each use, and conduct seasonal maintenance as required.

Routine Maintenance:

- Inspect Wear Plate:** Check the replaceable scraper blade for wear. Replace if excessively worn to prevent damage to the main blade.
- Lubrication:** Lubricate all pivot points and moving parts with a suitable grease or oil to ensure smooth operation.
- Fastener Check:** Periodically check and tighten all nuts, bolts, and pins.
- Cleaning:** After each use, clean snow and debris from the blade and frame. Dry thoroughly to prevent rust.
- Rust Prevention:** Touch up any scratches or bare metal spots with rust-inhibiting paint.



REMOVABLE WEAR PLATE INCREASED PRODUCT LIFE

Image Description: A close-up view of the bottom edge of a black snow blade, highlighting the removable red wear plate. The wear plate is secured with multiple bolts, emphasizing its replaceable design for increased product life.

Troubleshooting

This section addresses common issues you might encounter with your snow blade. For problems not listed here, please contact customer support.

Common Issues and Solutions:

- Blade Not Lifting/Lowering Smoothly:** Check control cables for kinks or damage. Lubricate pivot points. Ensure no debris is obstructing the mechanism.
- Blade Not Angling Correctly:** Inspect the pivot mechanism for damage or obstructions. Ensure the angle lock is disengaging properly.
- Excessive Wear on Scraper Blade:** This is normal wear. Replace the scraper blade as needed. Ensure the blade shoes are correctly adjusted to prevent excessive wear on the scraper blade.
- Poor Snow Clearing Performance:** Check blade angle and height. Ensure the wear plate is not excessively worn. Verify tractor tire traction (chains or weights may be needed in icy conditions).

Specifications

Model Number	CMXGZBF7124441
Brand	CRAFTSMAN
Material	Alloy Steel
Color	Black
Blade Length	42 Inches
Item Dimensions (L x W x H)	48 x 42 x 14 inches
Item Weight	79 Pounds
Manufacturer	Agri-Fab
UPC	052613105627

Warranty and Support

For warranty information, replacement parts, or additional support, please refer to the documentation included with your product or visit the official CRAFTSMAN website. Ensure you have your model number (CMXGZBF7124441) and proof of purchase available when contacting support.