

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Rodzon](#) /
- › [Rodzon External USB 3.0 CD/DVD Burner Drive User Manual BT638](#)

## Rodzon BT638

# Rodzon External USB 3.0 CD/DVD Burner Drive User Manual

Model: BT638

## 1. INTRODUCTION

Thank you for choosing the Rodzon External USB 3.0 CD/DVD Burner Drive. This portable device allows you to read and write CDs and DVDs on your computer, providing a convenient solution for systems without an internal optical drive. It features high-speed data transfer via USB 3.0 and broad compatibility with various operating systems.



Figure 1: Rodzon External USB 3.0 CD/DVD Burner Drive

This image displays the sleek, black Rodzon external CD/DVD drive with its integrated USB cable. The drive has a brushed metal texture on its top surface and the "Rodzon" logo is visible in the upper left corner.

## 2. SAFETY INFORMATION

- Do not expose the device to water or excessive humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel.
- Ensure the device is placed on a stable, flat surface during operation.



disc tray in case of power failure or malfunction.

- **Integrated USB 3.0 Cable:** Connects the drive to your computer for power and data transfer.
- **Anti-Slip Pads:** Located on the bottom of the drive to prevent movement during operation.

## 5. SETUP

The Rodzon external drive is designed for plug-and-play operation, requiring no driver installation for most operating systems.

1. **Connect the Drive:** Plug the integrated USB 3.0 cable into an available USB port on your computer (laptop, PC, or desktop). For optimal performance, use a USB 3.0 port if available.
2. **Power On:** The drive will draw power directly from the USB port. The indicator light will illuminate, signifying that the drive is powered on and ready for use.
3. **System Recognition:** Your operating system should automatically detect and configure the drive. It will appear as a removable storage device in "My Computer" (Windows) or "Finder" (Mac OS).



Figure 3: Simple Plug and Play Connection

This image illustrates the ease of setup, showing the USB cable being plugged into a laptop. The text "Enchufar y Usar No Se Necesita Conductor" (Plug and Use, No Driver Needed) emphasizes the plug-and-play functionality.

## 6. OPERATING INSTRUCTIONS

### 6.1 Reading Discs (CD/DVD)

1. Ensure the drive is connected to your computer.
2. Press the Eject Button to open the disc tray.

3. Carefully place a CD or DVD onto the tray, ensuring it is centered on the spindle.
4. Gently push the disc tray back into the drive until it clicks shut.
5. Your computer's operating system will typically prompt you to choose an action for the disc (e.g., play movie, open folder, install software). If not, navigate to "My Computer" or "Finder" and double-click the drive icon to access the disc content.

## 6.2 Writing Discs (CD-R/CD-RW)

To write data to a blank CD-R or CD-RW, you will need third-party burning software (e.g., Nero, Roxio, or built-in OS utilities).

1. Ensure the drive is connected to your computer.
2. Press the Eject Button to open the disc tray.
3. Place a blank CD-R or CD-RW disc onto the tray.
4. Gently push the disc tray back into the drive.
5. Launch your preferred burning software and follow its instructions to select files, configure burning settings, and start the writing process.
6. Do not disconnect the drive or interrupt the burning process until it is complete.

### Supported Formats and Speeds:

- **Supported Formats:** DVD+R, DVD-R, CD-ROM, DVD-ROM, CD-R, CD-RW
- **Maximum Read Speed:** DVD 8X, CD 24X
- **Maximum Write Speed:** CD 8X

# Alta Calidad y Garantizada Eficaz



Figure 4: Versatile Applications of the Drive

This image illustrates various uses for the external drive, including installing software, listening to music, creating backups, and watching movies. It highlights the drive's utility for common optical media tasks.

## 7. COMPATIBILITY

The Rodzon External USB 3.0 CD/DVD Burner Drive offers broad compatibility:

- **Operating Systems:** Windows 2000/XP/2003/Vista/7/8/10, Linux, and all versions of Mac OS.
- **Devices:** Laptops, MacBooks, PCs, desktop computers.
- **Not Compatible With:** Car systems, televisions, or Blu-ray discs.

## 8. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the drive. Do not use liquid cleaners or abrasive materials.
- **Disc Tray:** Keep the disc tray free from dust and debris. Avoid touching the lens inside the drive.
- **Storage:** When not in use, store the drive in a clean, dry place, away from extreme temperatures. The integrated cable can be neatly tucked into the designated slot on the underside of the drive for

portability.

## 9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drive not recognized by computer.	Loose USB connection, insufficient power, faulty USB port.	<ul style="list-style-type: none"><li>◦ Ensure the USB cable is securely plugged into both the drive and the computer.</li><li>◦ Try a different USB port on your computer.</li><li>◦ Restart your computer.</li></ul>
Disc not reading or playing.	Dirty or scratched disc, incorrect disc format, drive malfunction.	<ul style="list-style-type: none"><li>◦ Clean the disc with a soft, lint-free cloth.</li><li>◦ Try a different disc to rule out disc issues.</li><li>◦ Ensure the disc format is supported by the drive and your operating system.</li></ul>
Disc not writing (burning) correctly.	Low quality blank disc, incorrect burning software settings, interrupted process.	<ul style="list-style-type: none"><li>◦ Use high-quality blank CD-R/CD-RW discs.</li><li>◦ Verify settings in your burning software (e.g., burning speed).</li><li>◦ Ensure no other applications are running that might interfere with the burning process.</li></ul>
Disc tray stuck.	Mechanical jam, power issue.	<ul style="list-style-type: none"><li>◦ Gently press the Eject Button again.</li><li>◦ If still stuck, use a straightened paperclip to insert into the Forced Ejection Hole (refer to Figure 2) to manually open the tray.</li></ul>

## 10. SPECIFICATIONS

Feature	Detail
Brand	Rodzon
Model Number	BT638
Interface	USB 3.0 (backward compatible with USB 2.0)
Supported Disc Formats	DVD+R, DVD-R, CD-ROM, DVD-ROM, CD-R, CD-RW
Max DVD Read Speed	8X
Max CD Read Speed	24X
Max CD Write Speed	8X
Operating System Compatibility	Windows 2000/XP/2003/Vista/7/8/10, Linux, Mac OS (all versions)

Feature	Detail
Dimensions (L x W x H)	14.7 x 14.5 x 1.6 cm (5.78 x 5.7 x 0.63 inches)
Weight	330 grams
Power Supply	USB Powered (no external adapter needed)

## Compacto & Portátil Diseño



Figure 5: Physical Dimensions of the Drive

This image provides a visual representation of the drive's compact dimensions, showing its length (14.7 cm / 5.78 inches), width (14.5 cm / 5.7 inches), and height (1.6 cm / 0.63 inches).

## 10 Múltiples Velocidad de transferencia más que Usb 2.0

USB3.0 **VS** USB2.0

Múltiples Maxima de Usb 3.0

	Leer	Quemar
CD	24X	24X
DVD	8X	8X



Figure 6: USB 3.0 vs. USB 2.0 Speed Comparison

This image highlights the speed advantages of USB 3.0 over USB 2.0, indicating maximum read/write speeds for CD (24X) and DVD (8X) when using a USB 3.0 connection.

## 11. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the Rodzon official website or contact your retailer. Keep your purchase receipt as proof of purchase.