

[manuals.plus](#) /› [Canon](#) /› [Canon EOS Rebel T100 / 4000D DSLR Camera with 18-55mm III Lens User Manual](#)**Canon T100 / 4000D**

# Canon EOS Rebel T100 / 4000D DSLR Camera with 18-55mm III Lens User Manual

Model: EOS Rebel T100 / EOS 4000D

## INTRODUCTION

This manual provides essential instructions for the Canon EOS Rebel T100 (also known as EOS 4000D) DSLR camera, equipped with an 18-55mm III lens. Designed for beginners, this camera allows you to capture high-quality photos and Full HD videos. It features an 18 Megapixel APS-C sensor for excellent low-light performance and creative background blur. The camera offers both automatic and manual control options, along with built-in Wi-Fi for easy sharing.

## WHAT'S IN THE Box

Verify that all the following items are included in your camera package:

- Canon EOS Rebel T100 / 4000D Camera Body
- EF-S 18-55mm f/3.5-5.6 III Lens
- Battery Pack (LP-E10)
- Battery Charger (LC-E10/LC-E10E)
- Wide Strap (EW-400D)
- Eyecup Ef
- Interface Cable
- User Manual Kit

## SETUP GUIDE

### 1. Attaching the Lens

Align the red dot on the lens with the red dot on the camera body. Turn the lens clockwise until it clicks into place. To detach, press the lens release button and turn the lens counter-clockwise.



*Image: Front view of the Canon EOS Rebel T100 / 4000D camera with the 18-55mm lens attached.*

## **2. Inserting the Battery and Memory Card**

Open the battery compartment cover on the bottom of the camera. Insert the battery pack with the electrical contacts facing inward until it locks. Close the cover. Open the memory card slot cover on the side of the camera. Insert an SD card with the label facing the back of the camera until it clicks. Close the cover.



Image: Rear view of the Canon EOS Rebel T100 / 4000D, displaying the LCD screen and various control buttons.

### 3. Charging the Battery

Insert the battery into the provided charger. Plug the charger into a power outlet. The charging indicator light will show the charging status (e.g., orange for charging, green for fully charged).

### 4. Initial Settings

Turn on the camera using the power switch. Follow the on-screen prompts to set the language, date, time, and time zone. These settings are crucial for proper image file management.

## OPERATING THE CAMERA

### 1. Basic Shooting Modes

Rotate the mode dial to select your desired shooting mode:

- **Scene Intelligent Auto (A+)**: The camera automatically analyzes the scene and selects optimal settings. Ideal for beginners.
- **Creative Auto (CA)**: Offers more control over background blur and mood settings while still being largely automatic.
- **Program AE (P)**: Camera sets aperture and shutter speed, but you can adjust other settings.

- **Shutter-priority AE (Tv):** You set the shutter speed, camera sets aperture.
- **Aperture-priority AE (Av):** You set the aperture, camera sets shutter speed.
- **Manual (M):** You control both aperture and shutter speed.
- **Movie Mode:** For recording Full HD videos.

## 2. Focusing and Shooting

Look through the viewfinder or use the Live View on the LCD screen. Press the shutter button halfway down to activate autofocus. Once focus is achieved (indicated by a beep and focus points lighting up), press the shutter button fully to take the picture.

## 3. Adjusting ISO Sensitivity

Press the **ISO** button on the camera's rear. Use the directional keys to select the desired ISO sensitivity. Higher ISO values are suitable for low-light conditions but may introduce more noise.

## 4. Wi-Fi Connectivity

To connect your camera to a smartphone or tablet, enable Wi-Fi in the camera's menu. Download the Canon Camera Connect app on your mobile device. Follow the app's instructions to pair with your camera for remote shooting and image transfer.

---

## MAINTENANCE

---

### 1. Cleaning the Camera and Lens

- Use a blower brush to remove dust from the lens surface and camera body.
- For smudges on the lens, use a specialized lens cleaning cloth and lens cleaning fluid. Apply fluid to the cloth, not directly to the lens.
- Wipe the camera body with a soft, dry cloth. Avoid using organic solvents.

### 2. Battery Care

- Store batteries in a cool, dry place.
- Avoid fully discharging batteries frequently to prolong their lifespan.
- Remove the battery from the camera if not using it for an extended period.

### 3. Storage

When storing the camera for long periods, remove the battery and memory card. Store the camera in a dry, well-ventilated area, preferably in a camera bag with desiccant to prevent mold and mildew.

---

## TROUBLESHOOTING

---

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Camera does not power on.	Ensure the battery is fully charged and correctly inserted. Check if the battery contacts are clean.
Images are blurry.	Check if the lens is properly attached and clean. Ensure the camera is focusing correctly (press shutter halfway). Use a faster shutter speed or higher ISO in low light to prevent camera shake.
Memory card error / Cannot save images.	Ensure the memory card is inserted correctly and not full. Check if the memory card's write-protect switch is in the unlocked position. Try formatting the memory card ( <i>Note: This will erase all data. Back up important files first.</i> ). If the issue persists, the card may be corrupted or faulty; try a different card.
Wi-Fi connection issues.	Ensure Wi-Fi is enabled on both the camera and your mobile device. Restart both devices. Ensure the Canon Camera Connect app is up to date.

## SPECIFICATIONS

<b>Model Name</b>	Canon EOS Rebel T100 / 4000D
<b>Image Sensor</b>	18 Megapixel APS-C CMOS
<b>Effective Still Resolution</b>	18 MP
<b>Lens Mount</b>	Canon EF-S
<b>Included Lens</b>	EF-S 18-55mm f/3.5-5.6 III
<b>ISO Sensitivity</b>	100-6400 (Expandable to 12800)
<b>Shutter Speed</b>	30 sec. to 1/4000 sec.
<b>Video Resolution</b>	Full HD (1080p)
<b>Display</b>	2.7-inch LCD (230,000 dots)
<b>Connectivity</b>	Wi-Fi
<b>Storage Media</b>	SD, SDHC, SDXC cards
<b>Dimensions (Approx.)</b>	129.0 x 101.6 x 77.1 mm (5.08 x 4.00 x 3.04 in.)
<b>Weight (Approx.)</b>	436 g (15.38 oz) (Body only)

## WARRANTY AND SUPPORT

Your Canon EOS Rebel T100 / 4000D camera is covered by a manufacturer's warranty. Please refer to the warranty card included in your product package for specific terms and conditions, including warranty period and coverage details.

For technical support, service, or additional information, please visit the official Canon support website or contact Canon customer service in your region. You can often find drivers, software, and FAQs on their website.

**Official Canon Support:** <https://www.usa.canon.com/support>

© 2026 Canon Inc. All rights reserved. Information in this manual is subject to change without notice.