

[Manuals.plus](#) /

› [VINGLI](#) /

› VINGLI Portable Collapsible Utility Wagon Instruction Manual

VINGLI wagoncart030601

VINGLI Portable Collapsible Utility Wagon Instruction Manual

Model: wagoncart030601

Brand: VINGLI

1. INTRODUCTION

Thank you for choosing the VINGLI Portable Collapsible Utility Wagon. This manual provides essential information for the safe and efficient setup, operation, and maintenance of your new utility wagon. Please read these instructions carefully before use and retain them for future reference.



Figure 1: Fully assembled VINGLI Portable Collapsible Utility Wagon.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the product:

- Do not exceed the maximum weight capacity of 150 lbs (68 kg).
- Ensure all wheels are securely attached and brakes are engaged when stationary.
- Do not allow children to play in or around the wagon unsupervised.
- Avoid sharp objects that could puncture or tear the fabric.
- Distribute weight evenly within the wagon to maintain stability.
- Regularly check all screws and connections for tightness.

3. SETUP INSTRUCTIONS

3.1. Unfolding the Wagon

1. Remove the wagon from its packaging. It will arrive in a compact, folded state.
2. Gently pull the sides of the wagon outwards until the frame extends fully.
3. Press down firmly on the center base of the wagon until it locks into place, creating a flat bottom.



Figure 2: Step-by-step visual guide for unfolding the wagon.

3.2. Attaching the Wheels

The wheels are designed for easy, tool-free attachment:

1. Locate the four wheels and the corresponding slots on the wagon's frame.
2. Align each wheel with its slot and push firmly until it clicks securely into place.
3. Ensure all wheels are properly seated and can rotate freely.



Figure 3: Components of the VINGLI wagon, including the wheels and handle.

3.3. Attaching the Handle

1. Insert the handle into the designated receiver on the front of the wagon frame.
2. Push down until it locks into place.

4. OPERATING INSTRUCTIONS

4.1. Adjusting the Handle

The pulling handle is telescopic and adjustable to suit your preferred height. To adjust, locate the adjustment mechanism on the handle shaft, press the button or lever, and extend or retract the handle to the desired length (20" to 30"). Release the mechanism to lock it in place.



Figure 4: Adjustable handle bar for comfortable pulling.

4.2. Using the Wheels and Brakes

The wagon features heavy-duty rubber wheels that rotate 360 degrees for easy maneuvering. The front wheels are equipped with brakes. To engage a brake, press down on the 'LOCK' lever located near the wheel. To disengage, press the 'UNLOCK' lever.



Figure 5: Detail of the wheel and brake mechanism.

4.3. Loading the Wagon

The heavy-duty frame supports loads up to 150 lbs. Distribute items evenly to maintain balance and prevent tipping. The spacious interior is suitable for various items.



Figure 6: Examples of wagon usage for various activities.

4.4. Folding for Storage

To fold the wagon for compact storage, pull up on the fabric tab located in the center of the wagon's base. The sides will collapse inwards. Secure the folded wagon with the integrated carry straps if available.

ADJUSTABLE HANDLE BAR



Figure 7: Wagon dimensions in both open and folded configurations.

5. PRODUCT FEATURES

- **Adjustable Handle:** Telescopic handle with adjustable length from 20" to 30" for comfortable pulling.
- **360-Degree Wheels:** Heavy-duty, durable rubber wheels rotate 360 degrees for easy maneuvering.
- **Compact Storage:** Folds to approximately 29.5" x 19" x 8" for convenient storage in small spaces.
- **Easy Transport:** Designed for quick setup and folding, ideal for various outdoor and household tasks.
- **Durable Construction:** Features a heavy-duty alloy steel frame and durable 600D polyester fabric.
- **High Capacity:** Supports loads up to 150 lbs.
- **Mesh Pockets:** Includes mesh pockets for additional storage of smaller items.

6. MAINTENANCE

6.1. Cleaning

The durable canvas fabric on the wagon can be removed for cleaning. Hand wash with mild soap and water, then air dry. Do not use harsh chemicals or abrasive cleaners.

6.2. General Care

Regularly check the wagon's frame and wheel connections. Screws may loosen over time and need to be tightened to ensure continued stability and safe operation.

7. TROUBLESHOOTING

- **Wagon not unfolding/folding smoothly:** Ensure the center base is fully pushed down/pulled up. Check for any obstructions in the folding mechanism.
- **Wheels not turning freely:** Check for debris caught in the wheel axles. Ensure wheels are securely attached and not bent.
- **Wagon unstable:** Verify that the load is evenly distributed and does not exceed the maximum weight capacity. Check all frame connections for tightness.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions (Unfolded)	35.4"D x 19"W x 37.8"H
Folded Size (Approx.)	29.5" x 19" x 8"
Brand	VINGLI
Material	Alloy Steel, Rubber (Wheels), 600D Polyester Fabric
Color	Blue
Special Features	Adjustable Handle, Portable, Sturdy
Recommended Uses	Outdoor, Shopping, Garden, Beach, Camping
Weight Capacity Maximum	150 Pounds
Number of Wheels	4
Item Weight	24 Pounds
Assembly Required	No (Minor wheel/handle attachment)

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact VINGLI customer service directly. Keep your purchase receipt as proof of purchase.

© 2023 VINGLI. All rights reserved.