

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [YING RAY](#) /

› [YING RAY Replacement Remote Control User Manual for Electra Airwell Air Conditioner RC-4 Series \(Celsius Display\)](#)

YING RAY RC-4 Series

YING RAY Replacement Remote Control User Manual

For Electra Airwell Air Conditioner RC-4 Series (Celsius Display)

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your YING RAY replacement remote control. This remote is designed to be compatible with various Electra and Airwell air conditioner models, including the RC-4 series, and displays temperature in Celsius.



Figure 1: YING RAY Replacement Remote Control. This image displays the remote control, highlighting its design and the Celsius temperature display on its screen.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Close the battery compartment cover securely.

2. Initial Use

This replacement remote control is pre-programmed for compatibility with the specified Electra and Airwell air conditioner models. No additional programming or pairing is typically required. Simply install batteries and point the remote towards your air conditioner.



Figure 2: Protective Film. Before first use, gently peel off any protective film from the remote control's LCD screen to ensure clear visibility.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. A close-up view of the buttons is provided below.



Figure 3: Remote Control Buttons. This image provides a detailed view of the remote control's buttons, including Power, Mode, Temperature, Fan, Timer, and other function keys.

- **Power Button (Orange):** Press to turn the air conditioner ON or OFF.
- **MODE Button:** Press repeatedly to cycle through operating modes: Auto, Cool, Dry, Fan, Heat (if supported by your AC unit).
- **TEMP + / - Buttons:** Adjust the desired temperature setting. The display shows temperature in Celsius.
- **FAN Button:** Select the fan speed (Auto, Low, Medium, High).
- **SWING Button:** Activates or deactivates the automatic louver swing function.
- **TIMER Button:** Set the ON or OFF timer for the air conditioner. Use the HOUR + / - buttons to adjust the time.
- **SLEEP Button:** Activates Sleep mode, which adjusts temperature gradually for comfortable sleep and energy saving.
- **I FEEL Button:** Activates the 'I Feel' function, where the remote control's built-in sensor measures the ambient temperature and sends it to the air conditioner for more precise temperature control around the

remote.

- **ROOM Button:** Displays the current room temperature.
- **SET / CLEAR Buttons:** Used in conjunction with the TIMER function to confirm or cancel settings.

MAINTENANCE

Battery Replacement

When the remote control's display becomes dim or its operating range decreases, it is time to replace the batteries. Always replace both batteries with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical sprays, as these can damage the remote's surface or internal components.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly installed and have sufficient power. Replace if necessary.
 - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
 - Make sure you are within the effective operating range (typically 8 meters or 26 feet) and pointing the remote directly at the air conditioner.
- **Display is dim or blank:**
 - Replace the batteries.
- **Air conditioner responds intermittently:**
 - This could indicate low battery power or interference. Try replacing batteries and ensuring a clear line of sight.

SPECIFICATIONS

Feature	Description
Brand	YING RAY
Compatibility	Electra Airwell Air Conditioner RC-4 Series (RC-4, RC-4(RC), RC-4(RCL), RC-4(RCLD), RC-4(STL), P/N-436670, P/N-436673, P/N-436609, P/N-97467007)
Temperature Display	Celsius

Power Source	2 x AAA Batteries (not included)
Max Number of Supported Devices	1

SUPPORT

For further assistance or inquiries regarding your YING RAY replacement remote control, please contact the seller through the platform where the purchase was made.