

[Manuals.plus](#) /

> [Midea](#) /

> Midea MAW08R1BWT EasyCool 8,000 BTU Window Air Conditioner User Manual

Midea MAW08R1BWT

Midea MAW08R1BWT EasyCool 8,000 BTU Window Air Conditioner User Manual

Model: MAW08R1BWT | Brand: Midea

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Midea MAW08R1BWT EasyCool 8,000 BTU Window Air Conditioner. Please read this manual thoroughly before using the appliance and retain it for future reference. This unit is designed to cool, dehumidify, and circulate air in spaces up to 350 square feet, offering a comfortable environment with its intuitive controls and energy-efficient features.

SAFETY INFORMATION

WARNING: Risk of fire or explosion due to flammable refrigerant used. Follow handling instructions carefully in compliance with U.S. Government regulations.

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

- Always ensure the unit is properly grounded.
- Do not operate the unit with a damaged power cord or plug.
- Do not insert fingers or objects into the air inlet/outlet.
- Keep flammable materials away from the unit.
- Unplug the unit before cleaning or servicing.
- Ensure proper ventilation during operation.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Midea MAW08R1BWT Window Air Conditioner Unit
- Remote Control (batteries included)
- Window Mounting Kit (Window Bracket and other accessories)
- User Manual (this document)

SETUP AND INSTALLATION

The Midea EasyCool Window Air Conditioner is designed for easy installation in standard window frames. A screwdriver is

required for installation (not included).

Window Requirements

Ensure your window frame meets the following dimensions:

- **Window Width:** 23 inches to 36 inches
- **Window Height:** Minimum 14 inches



Figure 1: Easy Installation - This image shows a person installing the Midea window air conditioner. The diagram indicates that the unit fits window widths between 23 and 36 inches and requires a minimum window height of 14 inches. All necessary mounting accessories are included for a straightforward setup.

Cooling Capacity Guide

Select the appropriate BTU capacity for your room size to ensure optimal cooling performance.



Figure 2: Area vs. Capacity (BTU) Guide - This table helps determine the correct cooling capacity for your room based on its square footage. For example, a room of 300-350 sq. ft. requires an 8,000 BTU unit.

Find the correct cooling capacity for your room

Find the corresponding cooling capacity that matches your desired area (square footage). Cooling capacity shown in British thermal units (BTU) per hour.

Area to be cooled (SQ. FT.)	Capacity Needed (BTU)
150 SQ. FT.	5,000
UP TO 250 SQ. FT.	6,000
UP TO 300 SQ. FT.	7,000
UP TO 350 SQ. FT.	8,000
UP TO 400 SQ. FT.	9,000
UP TO 450 SQ. FT.	10,000
UP TO 550 SQ. FT.	12,000
UP TO 700 SQ. FT.	14,000
UP TO 1000 SQ. FT.	18,000
UP TO 1200 SQ. FT.	21,000
UP TO 1400 SQ. FT.	23,000
UP TO 1500 SQ. FT.	24,000

Adjustment as necessary

Make any adjustments for the following circumstance:

- i. If the room is heavily shaded, reduce capacity by 10 percent.
- ii. If the room is very sunny, increase capacity by 10 percent.
- iii. If more than two people regularly occupy the room, add 600 BTUs for each additional person.
- iv. If the unit is used in a kitchen, increase capacity by 4,000 BTUs.

Figure 3: Detailed Cooling Capacity Adjustment - This guide provides adjustments to the required BTU capacity based on specific room circumstances. For instance, if the room is heavily shaded, reduce capacity by 10%; if very sunny, increase by 10%. Add 600 BTUs per additional person if more than two people regularly occupy the room, and add 4,000 BTUs if the unit is used in a kitchen.

For some window frames, pilot holes are recommended before installing screws. Follow the detailed instructions provided in the included installation guide for a secure setup.

OPERATING INSTRUCTIONS

Your Midea EasyCool Window Air Conditioner offers multiple modes for optimal comfort.

Control Panel and Remote



Figure 4: Unit Control Panel and Remote Control - The main image displays the air conditioner's intuitive LED display and control buttons, along with the included remote control for convenient operation from a distance.

Intuitive Operation



Figure 5: Intuitive Operation - This image shows a hand interacting with the control panel, demonstrating the ease of setting the time, temperature, and mode directly on the unit or via the remote control.

Operating Modes

The unit features three primary operating modes:

- **Cool Mode:** Provides powerful cooling for spaces up to 350 sq. ft.
- **Fan Mode:** Circulates air with a 3-speed fan (Low, Medium, High) without cooling.
- **Dehumidifier Mode:** Reduces humidity in the room.

3-in-1 Comfort

Cools, Circulates, Dehumidifies



Figure 6: 3-in-1 Comfort - This image shows the Midea EasyCool Window AC unit installed, highlighting its versatility to cool, circulate air, and dehumidify, providing comprehensive comfort for your living space.

Special Features

- **Eco Mode:** Optimizes energy consumption by cycling the compressor and fan to maintain the set temperature efficiently.
- **SleepWell Mode:** Adjusts temperature gradually during sleep for enhanced comfort and energy saving.
- **EasyTimer:** Program your temperature preferences for up to 24 hours.
- **Auto Restart:** In the event of a power loss, the AC automatically restarts with the latest temperature settings.
- **Quiet Operation:** This unit operates quieter than a typical household refrigerator, ensuring minimal disturbance.

Quiet and Energy Efficient



Figure 7: Quiet and Energy Efficient - This image depicts a person sleeping comfortably, illustrating how the unit's quiet operation and energy-saving features contribute to a peaceful environment.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your air conditioner.

Reusable Filter Cleaning

The unit features a removable and reusable air filter that protects your family and living space from dust and pet hairs. The "Clean Filter" warning light will illuminate when the filter needs maintenance.

1. Carefully remove the air filter from the unit.
2. Wash the filter under running water (warm, soapy water if heavily soiled).
3. Allow the filter to air dry completely before reinserting it into the unit.
4. Do not operate the unit without the filter in place.



Reusable Filter

Figure 8: Reusable Filter Cleaning - This image demonstrates the process of washing the removable and reusable air filter under running water, emphasizing the ease of maintenance to preserve air quality.

TROUBLESHOOTING

If you encounter issues with your air conditioner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on	No power, circuit breaker tripped, power cord damaged.	Check power connection, reset circuit breaker, inspect power cord.
Insufficient cooling	Dirty air filter, blocked air intake/outlet, room too large, windows/doors open.	Clean filter, clear obstructions, ensure room size matches BTU, close windows/doors.
Unit is noisy	Loose parts, unit not level, fan obstruction.	Check for loose parts, ensure unit is level, remove any fan obstructions.

Problem	Possible Cause	Solution
Water dripping from unit	Improper installation angle, drain plug blocked.	Ensure unit is tilted slightly outwards for drainage, check and clear drain plug.
Remote control not working	Dead batteries, obstruction between remote and unit.	Replace batteries, remove obstructions, ensure direct line of sight.

If the problem persists after attempting these solutions, please contact Midea customer support.

SPECIFICATIONS



Figure 9: Product Dimensions - This diagram provides the exact measurements of the Midea MAW08R1BWT unit: Depth 18.98 inches, Width 21.89 inches, and Height 14.65 inches.

Feature	Detail
Brand	Midea
Model Number	MAW08R1BWT
Cooling Power	8,000 BTU
Coverage Area	Up to 350 sq. ft.
Item Weight	52.3 pounds

Feature	Detail
Product Dimensions (D x W x H)	18.98 x 21.89 x 14.65 inches (approx. 23 x 36 x 14 inches for installation)
Color	White
Material	Plastic
Power Source	Corded Electric
Voltage	110V
Wattage	667W
Sound Level	55 dB
Special Features	Remote control, EcoSave Mode, SleepWell Mode, EasyTimer, Auto Restart
Included Components	Window Bracket, Remote Control
Filter Type	Reusable, Washable
Seasonal Energy Efficiency Ratio (SEER)	12

WARRANTY AND SUPPORT

Midea stands by the quality of its products. Your Midea MAW08R1BWT EasyCool Window Air Conditioner comes with a:

- **One (1) Year Limited Parts and Labor Warranty** from the original purchase date.

For warranty claims, technical support, or any inquiries, please contact Midea customer service. Refer to the contact information provided on the Midea official website or in your product registration materials.

You can also find additional support and information by visiting the [Midea Store on Amazon](#).

© 2024 Midea. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07PDXKSGJ>

More documents and user manuals: <https://manuals.plus/>