

[Manuals.plus](#) /

› [Silva Schneider](#) /

› Silva Schneider UR 1190 FM Radio Alarm Clock User Manual

Silva Schneider UR 1190 (241006)

Silva Schneider UR 1190 FM Radio Alarm Clock User Manual

Model: UR 1190 (241006)

INTRODUCTION

Thank you for purchasing the Silva Schneider UR 1190 FM Radio Alarm Clock. This manual provides important information regarding the setup, operation, and maintenance of your device. Please read it thoroughly before use and retain it for future reference.



Figure 1: Front view of the Silva Schneider UR 1190 FM Radio Alarm Clock. The device features a black and white casing with a prominent red digital display showing the time 12:38. Control buttons are visible on the top surface.

SAFETY INSTRUCTIONS

- Read all instructions carefully before operating the device.
- Keep the device away from water or moisture.
- Do not expose the device to extreme temperatures or direct sunlight.
- Ensure proper ventilation; do not cover ventilation openings.
- Use only the specified power source.
- Do not attempt to repair the device yourself. Refer all servicing to qualified personnel.
- Dispose of batteries responsibly according to local regulations.

PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Silva Schneider UR 1190 FM Radio Alarm Clock
- 1 x User Manual
- 1 x Power Adapter (if applicable, otherwise specify battery operation)

Note: Batteries (2 x AAA) are not included and must be purchased separately.

SETUP

1. Power Connection

1. Insert 2 AAA batteries (not included) into the battery compartment located on the bottom of the unit. Ensure correct polarity (+/-). These batteries provide backup power for time and alarm settings during power outages.
2. Connect the power adapter (if applicable) to the DC input jack on the back of the alarm clock.
3. Plug the power adapter into a standard wall outlet. The display will light up.

2. Initial Time Setting

Upon first power-up or after a prolonged power disconnection, the time display may flash or show a default time.

- Press and hold the **TIME SET** button (location may vary, refer to diagram).
- While holding **TIME SET**, use the **HOUR** and **MINUTE** buttons to adjust the time.
- Release the **TIME SET** button to confirm.

OPERATING INSTRUCTIONS

1. Radio Operation

1. Press the **RADIO ON/OFF** button to turn on the FM radio.
2. Use the **TUNING** buttons (often labeled **+** and **-** or arrows) to manually tune to your desired FM station.
3. Press and hold the **TUNING** buttons for automatic scanning to the next available station.
4. Adjust the volume using the **VOLUME** control.
5. To turn off the radio, press the **RADIO ON/OFF** button again.

2. Alarm Setting

1. Press and hold the **ALARM SET** button.
2. While holding **ALARM SET**, use the **HOUR** and **MINUTE** buttons to set the desired alarm time.
3. Release the **ALARM SET** button.

4. Press the **ALARM ON/OFF** button to activate the alarm. An alarm indicator (e.g., a bell icon) will appear on the display.
5. To choose between buzzer or radio alarm, press the **ALARM MODE** button (if available).

3. Snooze Function

When the alarm sounds, press the large **SNOOZE** button (usually located on top) to temporarily silence the alarm for approximately 9 minutes. The alarm will sound again after this period.



Figure 2: Top view of the alarm clock, highlighting the prominent 'SNOOZE' button and other control buttons for tuning and settings.

4. Sleep Timer Function

The sleep timer allows the radio to play for a set duration before automatically turning off.

- While the radio is playing, press the **SLEEP** button repeatedly to cycle through available sleep times (e.g., 10, 30, 60, 90 minutes, or OFF).
- The radio will automatically turn off after the selected time.

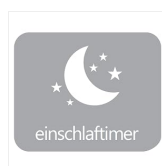


Figure 3: A graphical icon symbolizing the sleep timer function, featuring a crescent moon and stars.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** If the backup batteries are low, the time display may become erratic or settings may be lost during a power outage. Replace the 2 AAA batteries as needed.
- **Storage:** If storing the device for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power/Display off	Power adapter not connected or faulty; power outage.	Check power connection. Ensure outlet is working. If power outage, backup batteries should maintain settings.
Radio static/Poor reception	Antenna not extended; weak signal; interference.	Extend the FM antenna fully. Reposition the unit for better reception. Avoid placing near other electronic devices.
Alarm does not sound	Alarm not activated; alarm volume too low; incorrect alarm time set.	Ensure alarm indicator is visible. Increase volume. Verify alarm time is correctly set.
Time/Settings lost after power outage	Backup batteries are dead or not installed.	Install or replace 2 AAA backup batteries.

SPECIFICATIONS

Feature	Detail
Brand	Silva Schneider
Model Number	UR 1190 (241006)
Color	Silver/Black
Dimensions (L x W x H)	10 x 15.2 x 7.2 cm
Weight	300 grams
Material	Plastic
Display Type	Digital
Special Feature	FM Radio
Power Source	Manual operation (implies mains power with battery backup)
Batteries Required	2 x AAA (not included)

WARRANTY AND SUPPORT

Silva Schneider products are manufactured to high-quality standards. For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Silva Schneider website. Please retain your proof of purchase for any warranty claims.



Figure 4: The official logo for Silva Schneider, the manufacturer of this FM radio alarm clock.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question