

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Geepas](#) /
- › [Geepas GMO1895 Digital Microwave Oven User Manual](#)

Geepas GMO1895

Geepas GMO1895 Digital Microwave Oven User Manual

Model: **GMO1895** | Brand: **Geepas**

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Geepas GMO1895 Digital Microwave Oven. This appliance is designed for convenient and efficient cooking, reheating, and defrosting of various food items. Please read this manual thoroughly before operating your new microwave oven to ensure safe and optimal performance. Keep this manual for future reference.



Image 1.1: Front view of the Geepas GMO1895 Digital Microwave Oven. This image displays the sleek white exterior, digital control panel, and the microwave door.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not operate the oven when empty.
- Do not attempt to tamper with, or make any adjustments or repairs to the door, control panel, safety interlock switches, or any other part of the oven.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Always ensure proper ventilation around the microwave.
- Metallic items, such as aluminum foil or metal utensils, should not be used in the microwave oven unless specifically designed for microwave use.
- Close supervision is necessary when the appliance is used by or near children.

3. PRODUCT FEATURES

The Geepas GMO1895 Digital Microwave Oven is equipped with several features designed for user convenience and efficient cooking:

- **Operating Frequency:** 2450 MHz for efficient microwave energy.
- **Design:** Tabletop style, suitable for various kitchen layouts.
- **Functionality:** Microwave-only operation.
- **Capacity:** 20 Liters oven capacity.
- **Cooking Power:** Up to 700 Watts for quick heating.
- **Defrost Function:** Yes, for thawing frozen foods.
- **Digital Display:** Yes, for clear time and setting indications.
- **Door Release:** Convenient push-button mechanism.
- **Material:** Durable stainless steel construction.
- **Control Type:** User-friendly buttons.
- **Number of Programs:** 6 pre-set cooking programs.
- **Timer Function:** Available for precise cooking times.
- **Child Safety Lock:** Ensures safe operation around children.

4. SETUP INSTRUCTIONS

Follow these steps to set up your microwave oven:

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check for any damage such as dents or a broken door. Do not operate the oven if it is damaged.
2. **Placement:** Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure there is adequate ventilation space: at least 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side.
3. **Turntable Installation:** Place the roller ring in the center of the oven cavity. Then, place the glass turntable on top of the roller ring, ensuring it sits securely.
4. **Power Connection:** Plug the power cord into a standard grounded electrical outlet. Ensure the voltage and frequency match the specifications of your microwave oven.



Image 4.1: The interior of the microwave oven with the door open, showing the glass turntable and roller ring correctly installed.

5. OPERATING INSTRUCTIONS

This section details how to use your Geepas GMO1895 microwave oven for various cooking tasks.

5.1 Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Press the 'Power Level' button to select the desired power level (e.g., 100% for high, 50% for medium).
4. Use the number pads to enter the desired cooking time.
5. Press the 'Start' button to begin cooking. The digital display will count down the time.

5.2 Defrost Function

The defrost function allows you to thaw frozen food quickly and efficiently.

1. Place the frozen food on the turntable.
2. Press the 'Defrost' button.
3. Enter the weight of the food using the number pads. The oven will automatically calculate the defrosting time.
4. Press 'Start'. The oven may pause during defrosting to prompt you to turn the food for even thawing.

5.3 Pre-set Programs

Your microwave oven comes with 6 pre-set cooking programs for common food items. Refer to the label inside the door or the control panel for specific program details.

1. Place the food in the oven.
2. Press the 'Menu/Program' button repeatedly until the desired program number appears.
3. Enter the quantity or weight if prompted.
4. Press 'Start'.

5.4 Child Safety Lock

To activate the child safety lock, press and hold the 'Stop/Cancel' button for 3 seconds. The lock indicator will appear on the display. To deactivate, repeat the process.



Image 5.1: A user carefully placing a glass bowl containing food into the microwave oven for heating.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Interior Cleaning:** After each use, wipe the interior with a damp cloth and mild detergent. For stubborn stains, place a bowl of water with lemon slices inside and microwave for 2-3 minutes, then wipe clean.
- **Exterior Cleaning:** Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Door and Seal:** Keep the door and door seal clean to ensure proper closure.
- **Turntable and Roller Ring:** The glass turntable and roller ring can be removed and washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Odor Removal:** To remove odors, combine a cup of water with several tablespoons of lemon juice in a microwave-safe bowl. Microwave on high for 5-7 minutes.

7. TROUBLESHOOTING

If you encounter any issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is securely in outlet; Close door firmly; Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time or power level set; Microwave-safe dish not used.	Adjust cooking time/power; Use only microwave-safe cookware.

Problem	Possible Cause	Solution
Unusual noise during operation	Turntable not correctly seated; Food container touching oven walls.	Re-seat turntable and roller ring; Ensure food container is centered and not touching sides.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Geepas GMO1895 Digital Microwave Oven:

Specification	Value
Brand	Geepas
Model Number	GMO1895
Capacity	20 Liters
Cooking Power Output	700 Watts
Power Consumption	1200 Watts
Operating Frequency	2450 MHz
Installation Type	Countertop
Material	Stainless Steel
Interior Material	Stainless Steel
Control Type	Buttons
Number of Programs	6
Defrost Function	Yes
Digital Display	Yes
Timer Function	Yes
Included Components	Turntable
Item Weight	22.84 Pounds

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Geepas website. Keep your purchase receipt as proof of purchase for any warranty claims.

