

[Manuals.plus](#) /

> [WHIRLPOOL](#) /

> Whirlpool Best ZEN 8 Washing Machine User Manual

WHIRLPOOL BEST ZEN 8

Whirlpool Best ZEN 8 Washing Machine User Manual

Model: BEST ZEN 8

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your new Whirlpool Best ZEN 8 washing machine. Please read this manual carefully before using the appliance for the first time and keep it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your washing machine.



Image 1.1: Front view of the Whirlpool Best ZEN 8 washing machine, showcasing its white finish and central loading door.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the washing machine if it is damaged or malfunctioning.
- Keep children and pets away from the appliance during operation.

- Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances.
- Unplug the appliance from the power supply before performing any maintenance or cleaning.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage during transit. Remove all transport bolts from the rear of the machine before use. Failure to do so can cause severe vibration and damage.

3.2 Positioning and Leveling

Place the washing machine on a firm, level floor. Adjust the leveling feet to ensure the appliance is stable and does not wobble. Proper leveling reduces noise and vibration during operation.



Image 3.1: The Whirlpool washing machine positioned in a room, illustrating typical placement.

3.3 Water and Power Connection

Connect the water inlet hose to a cold water tap. Ensure all connections are tight to prevent leaks. Connect the drain hose to a suitable drain pipe or sink. Plug the power cord into a grounded electrical outlet. Do not use extension cords.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel features a program selector knob, touch buttons for various options, and a digital display for time and status.



Image 4.1: Detailed view of the control panel, showing the program selection dial and digital display.

4.2 Loading Laundry

Open the loading door and place laundry loosely into the drum. Do not overload the machine; refer to the maximum load capacity of 8 kg. Ensure no items are caught in the door seal before closing.



4.3 Adding Detergent

Add the appropriate amount of detergent and fabric softener to the dispenser drawer. Consult your detergent packaging for recommended dosages.

4.4 Selecting a Program

Turn the program selector knob to choose the desired wash program. Common programs include Cotton, Synthetics, Delicates, Wool, and Quick Wash (e.g., 'Rapido 30' for 30-minute quick wash). The display will show the estimated cycle time.

4.5 Starting a Cycle

Press the Start/Pause button to begin the selected wash cycle. The door will lock, and the machine will start filling with water.

4.6 End of Cycle

Once the cycle is complete, the machine will signal with an audible alert or a message on the display. The door will unlock after a short delay, allowing you to remove your laundry.

5. MAINTENANCE

5.1 Cleaning the Exterior

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.2 Cleaning the Detergent Dispenser

Regularly remove and clean the detergent dispenser drawer to prevent residue buildup. Rinse it under running water and dry thoroughly before reinserting.

5.3 Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) periodically to clean the drum and remove any odors or residue.

5.4 Filter Cleaning

Locate and clean the drain pump filter regularly (typically every few months) to prevent blockages and ensure proper drainage. Refer to the diagram in the full manual for exact location and procedure.

6. TROUBLESHOOTING

If you encounter issues with your washing machine, consult the following table for common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed properly; Program not selected.	Check power supply; Ensure door is latched; Select a program and press Start.

Problem	Possible Cause	Solution
Excessive vibration	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust leveling feet; Redistribute laundry.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Check and clear drain hose; Clean drain pump filter.
Water leaks	Hose connections loose; Detergent dispenser overflowing.	Tighten hose connections; Do not overfill detergent dispenser.

7. SPECIFICATIONS

Detailed technical specifications for the Whirlpool Best ZEN 8 washing machine:

Feature	Specification
Brand	Whirlpool
Model Number	BEST ZEN 8
Capacity	8 Kilogram
Access Location	Front-loader
Color	White
Product Dimensions (W x D x H)	59.5 x 61 x 85 cm
Item Weight	94.57 Kilogram
Control Type	Touch
Operating Mode	Fully automatic
Voltage	230 Volt
First Available Date	September 19, 2020



Image 7.1: Energy efficiency label for the Whirlpool Best ZEN 8, indicating its energy consumption and performance ratings.

8. WARRANTY AND SUPPORT

Your Whirlpool Best ZEN 8 washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, service requests, or to order spare parts, please contact Whirlpool customer service or visit the official Whirlpool website. Ensure you have your model number and serial number ready when contacting support.

