

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [BGJOY](#) /

> Retro Music Speaker User Manual

BGJOY Retro Music Speaker (B07PFCB2ZP)

BGJOY Retro Music Speaker User Manual

Your guide to setting up, operating, and maintaining your vintage-style wireless portable speaker.

1. PRODUCT OVERVIEW

The BGJOY Retro Music Speaker combines vintage aesthetics with modern functionality, offering a portable audio solution for various settings. It supports multiple playback methods and includes a built-in microphone for hands-free communication.

Key Features

- **Retro Design:** Vintage aesthetic suitable for home, office, or party decor.
- **Wireless Portability:** Compact size for easy transport, instant wireless connection up to 33 feet.
- **Clear Stereo Sound:** Quality speaker providing crisp sound, ideal for parties.
- **Multiple Playback Methods:** Supports Bluetooth, 3.5mm AUX input, USB, and TF card (card not included).
- **Hands-free Calling:** Built-in microphone for smooth, clear call conversations.
- **Easy Operation:** Features a retro toggle switch and knob for simple controls.
- **Long Battery Life:** Rechargeable battery offers up to 6 hours of playtime.

Package Contents

- 1 x Music Speaker
- 1 x Micro USB Charging Cable
- 1 x Audio Cable
- 1 x User Manual
- 1 x Retail Box

Product Images



Figure 1: Front view of the BGJOY Retro Music Speaker, showcasing its unique gramophone-style horn and wood finish.

Great Desktop Music Speaker



Play Time: 4-6 Hours


Figure 2: The speaker in a home office setting, demonstrating its use as a desktop music speaker.





Crisp Sound Music for Parties


Figure 3: The speaker providing crisp sound for a party, highlighting its suitability for social gatherings.





- 

Pause/play, mode switch,
hands-free call
- 

Rotate to start/off,
adjust the volume
- 

Adjustable metal
hose
- 

Last song
- 

Next song
- 

Power, audio, U disk i
nterface, TF card socket

Figure 4: The portable speaker being used by a family in an outdoor setting, emphasizing its wireless and outdoor capabilities.



Figure 5: Rear view of the speaker, illustrating the various input ports including USB and AUX.

Portable Wireless Speaker



Figure 6: A detailed diagram showing the control panel, buttons, and adjustable horn of the speaker.

2. SETUP

2.1 Charging the Speaker

Before first use, fully charge the speaker. Use the provided Micro USB charging cable to connect the speaker to a USB power source (e.g., computer, wall adapter). The charging indicator light will illuminate during charging and turn off when fully charged.

- Charging Time: Approximately 2 hours.
- Battery Life: Up to 6 hours of playtime on a full charge.

2.2 Power On/Off

To power on the speaker, rotate the main knob clockwise. You will hear an audible prompt indicating the speaker is on. To power off, rotate the knob counter-clockwise until it clicks off.

3. OPERATING INSTRUCTIONS

3.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue light).
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Retro Music Speaker" from the list of devices.
4. Once paired, the speaker will provide an audible confirmation, and the blue light will become solid.
5. The speaker will automatically reconnect to the last paired device when powered on, if within range.

3.2 AUX Mode

To use the speaker with a 3.5mm audio cable (included):

1. Connect one end of the 3.5mm audio cable to the AUX input port on the speaker.
2. Connect the other end to the audio output jack of your device (e.g., PC, turntable, projector, TV).
3. The speaker will automatically switch to AUX mode.

3.3 TF Card Mode

To play music directly from a TF (MicroSD) card:

1. Insert a TF card (not included) with MP3 audio files into the TF card slot on the speaker.
2. The speaker will automatically detect the card and begin playing music.

3.4 USB Mode

To play music directly from a USB flash drive:

1. Insert a USB flash drive with MP3 audio files into the USB port on the speaker.
2. The speaker will automatically detect the drive and begin playing music.

3.5 Hands-free Calling

When connected via Bluetooth to a smartphone, the speaker can be used for hands-free calls:

- **Answer Call:** Press the Play/Pause button (often marked with a phone icon) once to answer an incoming call.
- **End Call:** Press the Play/Pause button once during a call to end it.
- **Reject Call:** Press and hold the Play/Pause button to reject an incoming call.

3.6 Volume Control and Track Navigation

- **Volume:** Rotate the main knob to increase or decrease the volume.
- **Next Track:** Press the "Next Song" button (often marked with >>|).
- **Previous Track:** Press the "Last Song" button (often marked with |<<).
- **Play/Pause:** Press the Play/Pause button to play or pause audio.

Product Video Demonstration

Your browser does not support the video tag.

Video 1: This video demonstrates the features and portability of the BGJOY Retro Music Speaker, including its wireless capabilities and built-in microphone for hands-free calls. It showcases the speaker's design and ease of use.

4. MAINTENANCE

4.1 Cleaning

- Wipe the speaker with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.
- Avoid exposing the speaker to excessive moisture.

4.2 Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

5. TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker is not in pairing mode or too far from device.	Ensure speaker is in Bluetooth mode (flashing blue light). Move device closer to speaker (within 33 feet). Turn off and on Bluetooth on your device.
No sound.	Volume too low, incorrect mode, or connection issue.	Increase volume on speaker and connected device. Ensure correct mode (Bluetooth, AUX, TF, USB) is selected. Check cable connections for AUX/USB.
Poor sound quality.	Interference or low audio source quality.	Move speaker away from other electronic devices. Ensure audio source quality is high.

6. SPECIFICATIONS

Feature	Detail
Brand	BGJOY
Model Name	Retro Music Speaker
Connectivity Technology	Bluetooth, Auxiliary, USB
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters (33 feet)
Speaker Type	Bookshelf
Speaker Maximum Output Power	5 Watts
Audio Output Mode	Stereo

Feature	Detail
Battery Life	6 Hours
Charging Time	2 Hours
Power Source	Corded Electric (for charging)
Item Weight	0.41 Kilograms (14.4 ounces)
Package Dimensions	7.1 x 4.3 x 4.3 inches
Color	wood
Is Waterproof	FALSE
Manufacturer	Joystar.LTD
Date First Available	March 27, 2019

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact the manufacturer, Joystar.LTD, directly through their official channels. Keep your proof of purchase for any warranty claims.

For additional assistance, you may also visit the [BGJOY Store on Amazon](#).