

Tefal GV9567

Tefal Pro Express Ultimate GV9567 Steam Generator Iron User Manual

Model: GV9567 | Brand: Tefal

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always plug the appliance into an earthed socket.
- Do not leave the iron unattended while it is connected to the mains supply.
- Do not immerse the iron or the base unit in water or any other liquid.
- Keep the iron and its cord out of reach of children.
- Do not touch hot metal parts, hot water, or steam.
- Unplug the appliance before filling the water tank, cleaning, or performing any maintenance.
- Use only tap water. Do not use scented water, water from tumble dryers, or distilled water.
- Ensure the iron is placed on a stable, heat-resistant surface.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

2. PRODUCT OVERVIEW

The Tefal Pro Express Ultimate GV9567 is a high-pressure steam generator iron designed for efficient and professional garment care. It features advanced steam technology and a durable soleplate for optimal ironing results.



Image: The Tefal Pro Express Ultimate GV9567 steam generator iron, showcasing its compact design with the iron resting on its base unit. The water tank is visible on the side.

Key Features:

- **High Steam Output:** Continuous steam up to 155 g/minute for effective ironing.
- **Powerful Steam Boost:** Up to 500 g/minute steam boost for stubborn creases and thick fabrics.
- **Double Protection System:** Anti-drip system prevents stains, and an anti-calc collector ensures long-lasting steam performance.
- **Durilium AirGlide Autoclean Soleplate:** Provides excellent glide and remains clean over time.
- **Intuitive Control Panel:** 5 preset settings for optimal steam and temperature combinations for various fabrics.
- **Lock System:** Securely locks the iron to the base for safe transport and storage.
- **Innovative Steam Cord Storage:** For enhanced convenience and tidy storage.



Image: A side view of the Tefal Pro Express Ultimate GV9567, highlighting the transparent water tank on the base unit, indicating its capacity.

3. SETUP

1. **Unpacking:** Carefully remove the appliance from its packaging. Retain the packaging for future storage or transport.
2. **Positioning:** Place the steam generator on a stable, flat, and heat-resistant surface, such as an ironing board designed for steam generators.
3. **Filling the Water Tank:**
 - Ensure the appliance is unplugged.
 - Remove the water tank from the base unit.
 - Fill the tank with tap water up to the "MAX" level indicator. Do not overfill.
 - Reinsert the water tank securely into the base unit.

4. **Connecting to Power:** Unwind the power cord completely and plug it into an earthed electrical outlet.

4. OPERATING INSTRUCTIONS

1. **Power On:** Press the On/Off button. The indicator light will illuminate, and the appliance will begin to heat up. This usually takes a few minutes.
2. **Selecting Temperature/Steam Mode:** Use the intuitive control panel to select the appropriate setting for your fabric type. The 5 preset settings automatically adjust steam and temperature.

SMART STEAM TECHNOLOGIE



Image: The iron in use, demonstrating the "Smart Steam Technology" with steam emanating from the soleplate, effectively smoothing a dark shirt.

3. **Ironing:**
 - Once the iron is ready (indicator light stops flashing or turns solid), press the steam trigger under the handle to release steam.

- For stubborn creases, use the steam boost function by pressing the steam trigger fully or a dedicated boost button if available.
- Iron garments by gliding the iron smoothly over the fabric.
- For vertical steaming, hold the iron a few centimeters away from the fabric and press the steam trigger.

BESONDERS LEISTUNGSSTARK



Image: A close-up of the iron's soleplate emitting a powerful burst of steam, illustrating its high performance for efficient wrinkle removal.

4. **Refilling Water During Use:** If the water tank runs empty, the appliance will alert you. Unplug the iron, remove and refill the water tank as described in the Setup section, then re-plug and wait for it to reheat.
5. **After Use:**
 - Press the On/Off button to switch off the appliance.
 - Unplug the power cord from the wall socket.
 - Allow the iron to cool down completely before storing.
 - Secure the iron to its base using the lock system for safe transport and storage.
 - Store the steam cord in its dedicated storage compartment.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your Tefal Pro Express Ultimate GV9567.

5.1. Anti-Calc Collector Cleaning

The appliance is equipped with an anti-calc collector to capture limescale deposits. Regular cleaning of this collector is crucial.

1. Ensure the appliance is completely cool and unplugged.
2. Locate the anti-calc collector on the side of the base unit (usually marked with "CALC COLLECTOR").
3. Unscrew and remove the collector.
4. Rinse the collector thoroughly under running water to remove any limescale.
5. Reinsert and screw the collector back into place securely.

ANTI-KALK-KOLLEKTOR



Image: A hand demonstrating the removal of the red anti-calc collector from the side of the steam generator base unit for cleaning.

5.2. Soleplate Cleaning

The Durilium AirGlide Autoclean soleplate is designed to stay clean. If cleaning is necessary:

- Ensure the iron is cool and unplugged.
- Wipe the soleplate with a damp, non-abrasive cloth.
- Do not use abrasive pads, metal scouring pads, or chemical cleaners as these can damage the soleplate coating.

5.3. Exterior Cleaning

Wipe the exterior of the base unit and iron handle with a soft, damp cloth. Dry thoroughly.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam is produced.	Water tank is empty. Appliance not heated up. Steam trigger not pressed.	Refill the water tank. Wait for the appliance to reach operating temperature. Press the steam trigger.
Water drips from the soleplate.	Iron temperature is too low for steam.	Increase the temperature setting. Wait for the iron to heat up sufficiently before using steam.
Limescale particles appear on clothes.	Anti-calc collector needs cleaning.	Clean the anti-calc collector as described in the Maintenance section.
Iron is not heating.	Appliance not plugged in or not switched on.	Check power connection. Press the On/Off button.

7. SPECIFICATIONS

Feature	Detail
Brand	Tefal
Model Number	GV9567
Power	2600 Watts
Voltage	240 Volts
Continuous Steam Output	Up to 155 g/minute
Steam Boost	Up to 500 g/minute
Special Feature	High Pressure
Soleplate Type	Durilium AirGlide Autoclean
Product Dimensions	42.3L x 24.5W centimeters
Item Weight	500 Grams
Model Year	2019

12.5 CMS



24.5 CMS

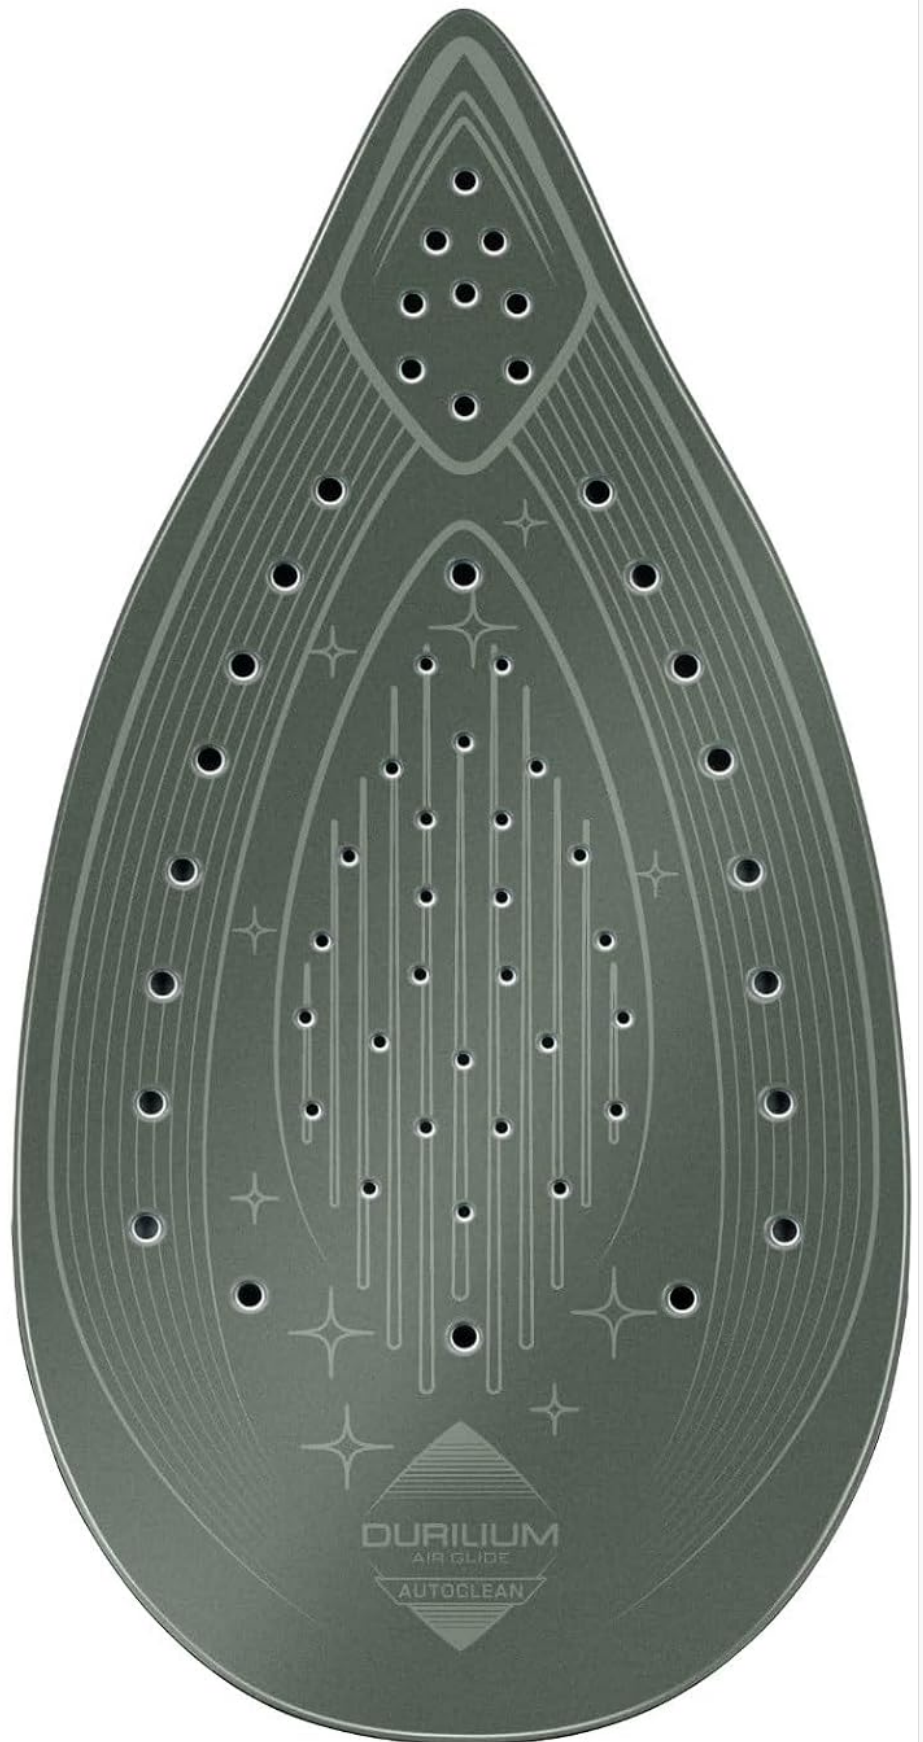


Image: A diagram showing the dimensions of the iron's soleplate, indicating its length and width in centimeters.

8. WARRANTY AND SUPPORT

Tefal products are designed for durability and performance. For any issues or support, please refer to the official Tefal website or contact their customer service.

While specific spare parts availability information is not provided, Tefal is committed to product longevity and repairability. For service or spare parts inquiries, please contact an authorized Tefal service center.

For further assistance, visit the official [Tefal Brand Store](#).

© 2023 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question