

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bravo](#) /
- › [Bravo Wall Shelf User Manual](#)

Bravo 8681285913548

Bravo Wall Shelf User Manual

Model: 8681285913548

1. INTRODUCTION

Thank you for choosing the Bravo Wall Shelf. This manual provides essential information for the safe and proper assembly, installation, operation, and maintenance of your new wall shelf. Please read this manual thoroughly before beginning assembly or installation and retain it for future reference.



Image 1.1: The Bravo Wall Shelf, shown here with various decorative items, transforming an empty wall into a functional and aesthetic storage and display area.

2. SAFETY INFORMATION

To ensure safe use of the Bravo Wall Shelf, please observe the following precautions:

- Always follow the assembly and installation instructions carefully.
- Ensure the wall material is suitable for wall-mounted shelving and can support the weight of the shelf and its contents. Use appropriate wall anchors and screws for your specific wall type (e.g., drywall, concrete, wood studs).
- Do not overload the shelf. Refer to the specifications section for maximum weight capacity.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Regularly check all fittings and connections to ensure they remain tight and secure.
- Avoid placing the shelf in areas with high humidity or direct sunlight, which may damage the wood and melamine

finish.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Wall Shelf Unit (Pre-drilled sections)
- Mounting Hardware (Screws, wall anchors)
- Assembly Instructions (This manual)

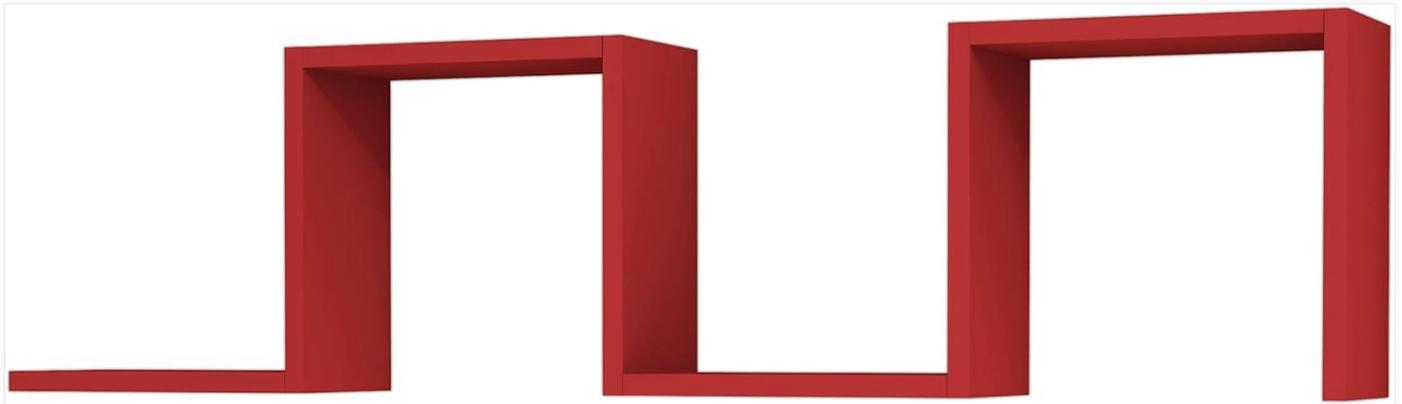


Image 3.1: Components of the Bravo Wall Shelf before assembly. The shelf is designed to be assembled from pre-cut wooden sections.

4. SPECIFICATIONS

Feature	Detail
Brand	Bravo
Model Number	8681285913548
Color	Red
Material	Wood (Main), Melamine (Top/Surface)
Product Dimensions (D x W x H)	16 cm x 42 cm x 21.4 cm
Item Weight	5 kg
Shipping Weight	4.75 kg
Assembly Required	Yes
Mounting Type	Wall Mount
Shelf Type	Solid Shelf / Compartment Shelf

5. SETUP (ASSEMBLY)

The Bravo Wall Shelf requires assembly. Please follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.

2. **Identify Parts:** Refer to the included diagram (if any, or use Image 3.1) to identify each section of the shelf.
3. **Connect Sections:** Align the pre-drilled holes of the shelf sections. Use the provided screws to securely fasten the sections together. Ensure all connections are tight but do not overtighten to avoid damaging the material.
4. **Verify Stability:** Once assembled, gently shake the shelf to ensure it is stable and all connections are firm.

Note: Assembly may require a screwdriver (not included).

6. INSTALLATION (MOUNTING)

Proper installation is crucial for the safety and stability of your wall shelf. We recommend having two people for installation.

1. **Choose Location:** Select a suitable wall location, considering aesthetics and structural integrity. Avoid areas with electrical wires or plumbing behind the wall.
2. **Mark Drilling Points:** Hold the assembled shelf against the wall at the desired height. Use a pencil to mark the positions for drilling through the pre-drilled mounting holes on the shelf. Use a level to ensure the marks are perfectly horizontal.
3. **Drill Holes:** Using an appropriate drill bit for your wall type, drill holes at the marked positions. The depth and diameter of the holes should match the provided wall anchors.
4. **Insert Wall Anchors:** Insert the wall anchors into the drilled holes. Tap them gently with a hammer until they are flush with the wall surface.
5. **Mount Shelf:** Align the shelf's mounting holes with the installed wall anchors. Insert the provided screws through the shelf and into the anchors. Tighten the screws securely until the shelf is firmly attached to the wall. Do not overtighten.
6. **Test Stability:** Gently pull on the shelf to ensure it is securely mounted and does not wobble.



Image 6.1: The Bravo Wall Shelf securely installed on a wall, ready for use. Ensure proper mounting for stability.

Note: Always use appropriate safety gear, such as eye protection, when drilling. If unsure about wall types or mounting procedures, consult a professional.

7. USAGE

The Bravo Wall Shelf is designed for displaying and storing various items such as books, decorative objects, small plants, and other household items. To maximize its utility and lifespan:

- Distribute weight evenly across the shelf surface.
- Do not exceed the maximum weight capacity specified in the Specifications section.
- Avoid placing hot or wet items directly on the melamine surface without protection to prevent damage.
- Keep sharp objects away from the surface to prevent scratches.

8. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your Bravo Wall Shelf:

- **Cleaning:** Wipe the surface with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner. Dry immediately with a clean cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or strong chemicals, as these can damage the finish.
- **Check Fittings:** Periodically check all screws and mounting hardware to ensure they are still tight. Retighten if necessary.
- **Environmental Conditions:** Protect the shelf from extreme temperature changes and prolonged exposure to direct sunlight or high humidity.

9. TROUBLESHOOTING

If you encounter any issues with your Bravo Wall Shelf, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Shelf feels wobbly after installation.	Loose mounting screws or improper wall anchors.	Ensure all mounting screws are tightened. Verify that appropriate wall anchors were used for your wall type. If necessary, remove, use stronger anchors, and re-mount.
Shelf is not level.	Mounting holes were not marked level.	Remove the shelf, re-mark the drilling points using a spirit level, and re-install.
Surface is scratched or damaged.	Sharp objects or abrasive cleaning.	Minor scratches may be concealed with furniture repair markers. For significant damage, replacement may be necessary. Prevent future damage by using protective pads under items.

10. WARRANTY AND SUPPORT

Bravo products are manufactured with quality and durability in mind. While specific warranty details are not provided in this manual, most products come with a standard manufacturer's warranty against defects in materials and workmanship. For warranty claims, technical support, or to inquire about replacement parts, please contact your retailer or the manufacturer directly using the contact information provided at the point of purchase or on the product packaging. Please have your model number (8681285913548) and ASIN (B07PFPJZQP) ready when contacting support.

