

PHILIPS HC3505/15

Philips Series 3000 Corded Hair Clipper HC3505/15 User Manual

Model: HC3505/15

1. INTRODUCTION

Welcome to your Philips Series 3000 Corded Hair Clipper. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your HC3505/15 hair clipper. Please read these instructions carefully before first use and retain them for future reference.

2. IMPORTANT SAFETY INFORMATION

Warning: To reduce the risk of electric shock or injury, always follow basic safety precautions when using electrical appliances.

- Avoid contact with eyes and skin during operation.
- Do not immerse the main clipper body in water.
- Always follow the cleaning and maintenance instructions provided in this manual.
- This appliance is designed for hair clipping purposes only.

3. PRODUCT OVERVIEW

The Philips Series 3000 Hair Clipper HC3505/15 is engineered for a fast, sharp cut, time after time. It features an innovative cutting element, durable stainless steel blades, and an adjustable hair comb.

Components

- Hair Clipper Unit
- Adjustable Hair Comb (0.5mm to 23mm settings)
- Power Cord



Figure 3.1: Philips Series 3000 Hair Clipper HC3505/15 with its adjustable comb attachment.







Figure 3.2: Front view of the Philips Series 3000 Hair Clipper, highlighting the length setting dial and power button.

4. SETUP

Follow these steps to prepare your hair clipper for first use:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Inspect:** Check the clipper and all accessories for any signs of damage. Do not use the appliance if it appears damaged.
3. **Attach Comb:** Ensure the adjustable hair comb is securely attached to the clipper head. It should click into place.
4. **Connect Power:** Plug the power cord into the clipper's power inlet, then plug the other end into a suitable electrical outlet. This clipper is designed for corded use only.

5. OPERATING INSTRUCTIONS

5.1 Adjusting Length Settings

The clipper offers 13 adjustable length settings, ranging from 0.5mm (without comb) to 23mm, allowing for a variety of hairstyles.



Figure 5.1: A hand adjusting the length setting dial on the Philips Series 3000 Hair Clipper. The dial allows selection of cutting lengths from 0.5mm to 23mm.

1. With the comb attached, locate the length setting dial on the clipper body.
2. Slide the dial up or down to select your desired hair length. The selected length will be clearly displayed on the clipper.
3. For a 0.5mm trim, remove the comb attachment and use the clipper directly.

5.2 Hair Clipping

For best results, ensure hair is clean and dry before clipping.

1. Turn on the clipper by pressing the power button.
2. Start clipping from the nape of the neck, moving upwards against the direction of hair growth.
3. Use smooth, even strokes. For an even cut, ensure the flat part of the comb is always in contact with the scalp.
4. Regularly clear hair from the comb and blades to maintain optimal performance and prevent clogging.



Figure 5.2: The Philips Series 3000 Hair Clipper being used to trim hair, demonstrating proper technique.

5.3 Trim-n-Flow Technology

This clipper incorporates Trim-n-Flow technology, which is specifically designed to prevent cut hairs from getting stuck within the comb. This ensures a continuous, uninterrupted, and efficient cutting experience, allowing you to complete your haircut without frequent pauses to clear the comb.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your clipper.

6.1 Cleaning the Blades

The quick-release blades are designed to be washable for easy and hygienic cleaning.



Figure 6.1: A hand rinsing the detachable blades of the Philips Series 3000 Hair Clipper under running water for easy cleaning.

1. Turn off and unplug the clipper from the electrical outlet.
2. Gently detach the cutting element (blades) from the clipper body.
3. Rinse the blades thoroughly under running water to remove all hair clippings.
4. Allow the blades to air dry completely before reattaching them to the clipper body. Ensure they are fully dry to prevent rust.

6.2 Cleaning the Clipper Body and Comb

- Wipe the clipper body with a dry or slightly damp cloth. Do not submerge the clipper body in water.
- The comb attachment can be rinsed under running water. Ensure it is dry before reattaching.

7. TROUBLESHOOTING

If you encounter any issues with your Philips Series 3000 Hair Clipper, refer to the following common problems and solutions:

7.1 Clipper Not Turning On

- Ensure the power cord is securely plugged into both the clipper and a functional electrical outlet.
- Check if the power outlet is working correctly by plugging in another appliance.

7.2 Poor Cutting Performance

- Ensure the blades are clean and free of hair clippings. Accumulated hair can hinder performance.
- Check if the comb attachment is correctly secured to the clipper head.
- While the blades are self-sharpening, inspect them for any visible damage or dullness. If damaged, contact support for replacement.

7.3 Clipper Overheating

- Discontinue use immediately and allow the clipper to cool down for at least 15-20 minutes.

- Ensure the blades and motor area are free from any obstructions or excessive hair buildup.
- Avoid prolonged continuous use without breaks.

8. SPECIFICATIONS

- **Model:** HC3505/15
- **Brand:** PHILIPS
- **Power Source:** Corded
- **Blade Material:** Stainless Steel
- **Length Settings:** 13 (0.5mm to 23mm)
- **Special Features:** Trim-n-Flow Technology, Quick-Release Washable Blades, Automatic Worldwide Voltage
- **Product Dimensions:** 7 x 14 x 22.4 cm
- **Product Weight:** 18 g

9. WARRANTY AND SUPPORT

Your Philips Series 3000 Corded Hair Clipper HC3505/15 comes with a manufacturer's warranty. For detailed warranty information, technical support, or to inquire about replacement parts and accessories, please visit the official Philips website or contact Philips customer service in your region.

You can find more information and support at: [Philips Official Support](#)