

UBay RM-ED054

UBay RM-ED054 Remote Control Instruction Manual

For Sony LED HDTV Smart TV Models

1. INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your UBay RM-ED054 replacement remote control. This remote is designed to function as a direct replacement for the original Sony RM-ED054 remote, requiring no programming for compatible Sony LED HDTV Smart TV models.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back view of the UBay RM-ED054 remote control, illustrating the battery compartment location.

Note: Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.

3. OPERATING THE REMOTE CONTROL

The UBay RM-ED054 remote control is designed for immediate use with compatible Sony LED HDTV Smart TVs without any additional programming. Simply point the remote towards your TV and press the desired button.





Image: Front view of the UBay RM-ED054 remote control, displaying all functional buttons.

3.1 Key Functions

Below is a general overview of the main buttons and their functions:

- **Power (Green button):** Turns the TV on or off.
- **Number Pad (0-9):** Direct channel selection.
- **Volume (+/-):** Adjusts the TV volume.
- **Channel (PROG +/-):** Changes TV channels.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used for menu navigation and selection.
- **HOME:** Accesses the TV's main menu or Smart TV interface.
- **RETURN:** Goes back to the previous screen or menu.
- **OPTIONS:** Displays context-sensitive options for the current screen.
- **GUIDE:** Opens the electronic program guide.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV model and current application.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.

4. MAINTENANCE

4.1 Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Refer to section 2.1 for battery installation instructions. Always dispose of used batteries responsibly according to local regulations.

4.3 Storage

If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent leakage, which could damage the device.

5. TROUBLESHOOTING

If you experience issues with your UBay RM-ED054 remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective operating range and pointing the remote directly at the TV.
- **Specific buttons not working:**
 - Clean the remote control, especially around the problematic buttons, to remove any dirt or debris that might be causing them to stick or malfunction.
 - If only certain advanced functions are not working, ensure your TV model supports those specific functions with the original remote.

If the problem persists after trying these steps, please contact your retailer for further assistance.

6. SPECIFICATIONS

- **Model:** RM-ED054
- **Brand:** UBay
- **Power Supply:** 2 x AA Batteries (Not Included)
- **Compatible Devices:** Television
- **Dimensions:** 6.3 x 1.8 x 0.6 inches (approximately)
- **Weight:** 2.18 ounces (approximately, without batteries)
- **Special Feature:** Ergonomic design
- **Color:** Black

7. COMPATIBLE SONY TV MODELS

This UBay RM-ED054 remote control is compatible with the following Sony LED HDTV Smart TV models:

- B1FK

- KDL32R400A
- KDL-32R420A
- KDL-32R421A
- KDL32R423A
- KDL-32R424A
- KDL40R450A
- KDL-40R470A
- KDL-40R471A
- KDL-40R473A
- KDL-40R474A
- KDL-46R470A
- KDL-46R473A

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided by your retailer or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

© 2026 UBay. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

