

[Manuals.plus](#) /

› [Edillas](#) /

› Edillas Kids Analog Watch 8817 Instruction Manual

Edillas 8817

Edillas Kids Analog Watch Instruction Manual

Model: **8817** | Brand: **Edillas**

INTRODUCTION

This manual provides essential information for the proper use and care of your Edillas Kids Analog Watch. Designed for children aged 5-15, this watch features a Japanese-Quartz Movement for precise timekeeping, a comfortable silicone strap, and 30-meter water resistance suitable for daily activities.





Image: Front view of the Edillas Kids Analog Watch in black, showcasing its easy-to-read dial with clear white numbers.

SETUP

1. **Unboxing:** Carefully remove the watch from its packaging. Ensure all protective films, especially on the watch face and case back, are removed before first use.
2. **Strap Adjustment:** The soft silicone strap is designed for comfort. Adjust the buckle to fit snugly but comfortably on the child's wrist.



Image: A diagram illustrating the dimensions of the watch face and strap, including minimum and maximum wrist circumference for proper fit.

OPERATING INSTRUCTIONS

To set the time on your Edillas Kids Analog Watch:

1. **Pull the Crown:** Locate the small knob (crown) on the right side of the watch case. Gently pull the crown outwards until you feel a click. The second hand will stop moving.
2. **Adjust the Time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
3. **Push the Crown Back:** Once the time is set, push the crown back into its original position. The second hand will resume movement, indicating the watch is running.



Image: A visual guide showing the three steps to set the watch time: pulling out the crown, rotating it to adjust hands, and pushing it back in.

MAINTENANCE

- **Cleaning:** Wipe the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- **Water Resistance:** The watch is water resistant to 30 meters (3 ATM), suitable for daily use such as hand washing, rain, and splashes. **Important: Do not press buttons or operate the crown underwater. Do not wear the watch while swimming, bathing, or diving.**
- **Battery Replacement:** The watch uses 1 C battery (note: this is likely a button cell battery, not a standard C battery, please consult a professional for replacement). When the watch stops running, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure water resistance is maintained.
- **Storage:** When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.

30M waterproof

Note: Do not press buttons or swim or bathe underwater!



Hand Wash



Raining



Splash



Sweat

Image: An illustration highlighting the 30M water resistance of the watch, indicating suitability for hand washing, rain, splashes, and sweat, but cautioning against pressing buttons or swimming underwater.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch is not running	Battery is depleted or crown is not fully pushed in.	Ensure the crown is fully pushed in. If it still doesn't run, the battery may need replacement by a professional.
Time is incorrect	Time was not set correctly or crown was accidentally pulled out.	Reset the time following the 'Operating Instructions' section. Ensure the crown is fully pushed in after setting.
Condensation inside watch face	Exposure to extreme temperature changes or water ingress beyond specified limits.	Place the watch in a dry, warm place to allow condensation to evaporate. If it persists, seek professional repair as water resistance may be compromised.

SPECIFICATIONS

- **Model Number:** 8817
- **Movement:** Japanese-Quartz Movement
- **Water Resistance:** 30 Meters (3 ATM)
- **Case Material:** Stainless Steel Case Back
- **Strap Material:** Soft TPU Raw Material (Silicone)
- **Product Dimensions:** 9.25 x 0.59 x 0.31 inches
- **Item Weight:** 0.71 ounces
- **Battery:** 1 C battery required (typically a button cell, professional replacement recommended)
- **Manufacturer:** Yadelai
- **Department:** Boys (suitable for both boys and girls)



Easy to Read Dial



304 Stainless Steel Caseback



Japan Imported Movement



Soft Silicone Strap



Anti-wear Protective Film



Personality pointer

Image: An exploded view showing key features and components of the Edillas Kids Analog Watch, such as the Japanese movement, stainless steel case back, and soft silicone strap.

WARRANTY AND SUPPORT

Edillas is committed to providing quality products and excellent customer service. If you encounter any problems with your Edillas Kids Analog Watch, please do not hesitate to contact us. We are dedicated to assisting you and resolving any issues you may have.

For support, please refer to the contact information provided with your purchase or visit the official Edillas store page on Amazon: [Edillas Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07PFV5RBD>

More documents and user manuals: <https://manuals.plus/>