

## Clikon CK605

# Clikon Full Automatic Washing Machine CK605

User Manual

## 1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the appliance. Keep this manual for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, or injury to persons when using your washing machine.

- Ensure the power supply (AC220-240V~50Hz) matches the machine's requirements.
- Do not operate the machine if the power cord is damaged.
- Keep children away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Always unplug the machine before cleaning or performing any maintenance.
- Do not open the lid during the spin cycle.

## 2. PRODUCT OVERVIEW

The Clikon CK605 is a 7kg top-load full automatic washing machine designed for efficient and convenient laundry care. It features a durable stainless steel inner tub and a transparent top lid for easy viewing.





Image 1: Top view of the Clikon CK605 washing machine with the transparent lid open, showing the control panel, detergent box, and stainless steel inner tub.

- **Capacity:** 7kg wash/spin
- **Inner Tub:** Stainless Steel
- **Motor:** Copper Motor
- **Lid:** Transparent Top Lid
- **Mobility:** Small wheels attached for easy movement
- **Stability:** Adjustable feet

## 3. SETUP AND INSTALLATION

---

### 3.1 Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage during transit. Keep packaging materials away from children.

### 3.2 Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and access. The small wheels allow for easy repositioning. Use the adjustable feet to level the machine and prevent vibration during operation.

### 3.3 Water Connection

Connect the water inlet hose to a cold water tap and securely attach the other end to the water inlet valve on the back of the washing machine. Ensure all connections are tight to prevent leaks.

### 3.4 Drain Hose Installation

Position the drain hose into a suitable drain pipe or sink, ensuring it is securely fixed to prevent it from dislodging during the drain cycle.

### 3.5 Power Connection

Plug the power cord into a grounded electrical outlet (AC220-240V~50Hz). Do not use extension cords or adapters.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Loading Laundry

Open the transparent top lid. Load clothes loosely into the stainless steel inner tub, ensuring not to exceed the 7kg capacity. Overloading can affect washing performance.

### 4.2 Adding Detergent

Add the appropriate amount of detergent to the detergent box, located on the top panel. Refer to your detergent's instructions for dosage.



Image 2: Close-up view of the Clikon CK605 washing machine's control panel and detergent box, illustrating where to add detergent.

### 4.3 Selecting a Program

The machine offers 8 programs. Use the control panel to select the desired washing program based on your laundry type. Common programs include:

- **Normal:** For everyday cottons and mixed fabrics.
- **Delicate:** For fragile items requiring gentle care.
- **Heavy Duty:** For heavily soiled items.
- **Quick Wash:** For lightly soiled items needing a fast cycle.
- **Storm Wash:** A powerful wash cycle for strong and clean results.

## 4.4 Water Level Adjustment

The machine features 8 water levels. The machine will automatically detect the optimal water level for the load, or you can manually adjust it if desired.

## 4.5 Starting the Wash Cycle

After selecting the program and water level, press the 'Start/Pause' button to begin the wash cycle. The machine will automatically proceed through the wash, rinse, and spin phases.

## 4.6 Cycle Options

Additional cycle options available include:

- **Rinse:** For an extra rinse cycle.
- **Spin:** For draining water and spinning clothes.
- **Drain:** To drain water from the tub without spinning.

# 5. MAINTENANCE AND CARE

---

## 5.1 Cleaning the Exterior

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 5.2 Cleaning the Inner Tub

The stainless steel inner tub is resistant to rust. For general cleaning, run an empty wash cycle with a washing machine cleaner or a cup of white vinegar.

## 5.3 Detergent Box Cleaning

Regularly clean the detergent box to prevent residue buildup. Remove the box and rinse it under running water.

## 5.4 Lint Filter Cleaning

Locate and clean the lint filter after every few washes to ensure efficient operation and prevent lint transfer to clothes.

## 5.5 Care for Transparent Top Lid

Wipe the transparent top lid with a soft cloth to keep it clear. Avoid harsh chemicals that could scratch or cloud the surface.

# 6. TROUBLESHOOTING GUIDE

---

Before contacting service, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; Power outage	Check power connection; Ensure lid is fully closed; Check household power supply
No water filling	Water tap closed; Water inlet hose kinked; Water supply cut off	Open water tap; Straighten hose; Check water supply

Problem	Possible Cause	Solution
Machine vibrates excessively	Machine not level; Load unbalanced	Adjust feet to level machine; Redistribute laundry evenly
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged	Check and clear drain hose; Clean drain pump filter

## 7. SPECIFICATIONS

Feature	Detail
Brand	Clikon
Model Number	CK605
Type	Full Automatic Top Load
Capacity (Wash/Spin)	7 kg / 7 kg
Inner Tub Material	Stainless Steel
Motor Type	Copper Motor
Power (Wash/Spin)	400W / 300W
Voltage/Frequency	AC220-240V~50Hz
Water Levels	8
Programs	8
Color	Silver
Dimensions (Package)	96 x 60 x 60 cm
Item Weight	30 kg
Special Features	Transparent Top Lid, Small Wheels for Movement, Adjustable Foot

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

This product comes with a manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for warranty claims. Specific warranty terms and duration may vary by region. Refer to your purchase documentation for detailed warranty information.

### 8.2 Customer Support

For installation, service support, or any inquiries regarding your Clikon washing machine, please contact our customer service team:

**Phone:** [+966 503568714](tel:+966503568714)

**Phone:** [+966 500535652](tel:+966500535652)

Our support team is available to assist you with any operational or technical issues.