

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT RMT-13 Replacement Remote Control User Manual for Westinghouse TVs

USARMT RMT-13

USARMT RMT-13 Replacement Remote Control User Manual

For Westinghouse TVs

INTRODUCTION

This manual provides instructions for the USARMT RMT-13 replacement remote control, designed for use with various Westinghouse television models. This remote control is pre-programmed and ready for immediate use upon battery installation, requiring no additional setup.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or outwards to open.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

Note: This remote control is pre-programmed. No additional programming or pairing steps are required. Once batteries are installed, the remote is ready to operate your compatible Westinghouse TV.

OPERATING INSTRUCTIONS

The USARMT RMT-13 remote control features standard buttons for TV operation. Refer to the image below for button identification and their functions.





Image: Front view of the USARMT RMT-13 replacement remote control. It is a black remote with gray buttons. Key buttons include

Power (red), Mute, Number Pad (0-9), Volume Up/Down, Channel Up/Down, Menu, Exit, OK/Enter, directional arrows, Sleep, Source, CC (Closed Caption), FAV (Favorites), LIST, and MTS (Multi-channel Television Sound).

Button Functions

- **POWER (Red Button):** Turns the television on or off.
- **MUTE:** Mutes or unmutes the television audio.
- **Number Pad (0-9):** Used to directly enter channel numbers.
- **'-' (Dash):** Used for entering sub-channels (e.g., 7-1).
- **VOL (+/-):** Increases or decreases the television volume.
- **CH (+/-):** Changes the television channel up or down.
- **DISPLAY:** Shows on-screen information about the current program or channel.
- **ASPECT:** Adjusts the screen aspect ratio.
- **MENU:** Accesses the television's main menu.
- **EXIT:** Exits the current menu or on-screen display.
- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **OK / ENTER:** Confirms selections within menus.
- **SLEEP:** Sets a timer for the television to automatically turn off.
- **SOURCE:** Selects the input source (e.g., HDMI, AV, Component).
- **CC (Closed Caption):** Toggles closed captions on or off.
- **FAV (Favorites):** Accesses favorite channels list.
- **LIST:** Displays a list of channels or programs.
- **MTS (Multi-channel Television Sound):** Selects audio modes (e.g., Stereo, SAP).

COMPATIBILITY

The USARMT RMT-13 remote control is compatible with numerous Westinghouse TV models. A partial list of compatible models includes:

- VR-3250DF, VR-3225, VR-3225TW, VR-4085DF, VR-3250D, 24SL415U
- TH37PH10, TH37PH10UK, TH42PE77U, TH42PH10, TH42PH10UK, TH42PZ77U
- TH50PE77U, TH50PH10, TH50PH10UK, TH50PZ77U, TH58PH10, TH58PH10UK
- Additional models: 300, 3800, 3900, 40S51U, 4500, 5800, 942, A328820, AV16N8, AV20121, AV20920, AV20921, AV20D304, AV21DMG3, AV27050, AV27115, AV27430, AV27432, AV27920, AV27D104, AV27D201, AV27D501, AV32015, AV32020, AV32430, AV32432, AV32980, AV32985A, AV32D201, AV32D501, AV35850, AV35955, AV36020, AV36050, AV36D501, AV60D501, C13110, C13111, C13911, C20110, DISH322, DISH921, DVP3560K/F8, EW32S3PW, HCDEC70, HD56G787, HDZ56RX5, HDZ70RX5, KD32FS170, KLVS15G10, KLVS20G10, KV32FS120, KV32FV300, KV32XBR48, KV34XBR48, KV35XBR88, KV36FV300, KV37XBR48M, LC37GP1U, LD4655VX, LT19D210, LT19D210/AAR, LT19D610, LT19D610/AAR, LT32D200, LT32DV20, LT32E710, LT32P510, LT32X887, LT42P510, LT42PM51, LT46P510, LTV27W6, LTV27W6HD, LTV32W3, LTV32W3HD, PV2912, PV4010, PV4020, PV4070, PV4761, PV4800, TU3922DU, TUDP322.

SPECIFICATIONS

Product Dimensions	7 x 1.5 x 0.5 inches
Item Weight	3 ounces

Connectivity Technology	Infrared
Max Number of Supported Devices	1
Compatible Devices	Television
Special Feature	Ergonomic design

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh batteries are correctly installed with proper polarity.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Point the remote directly at the TV.
 - Try replacing the batteries with a new set.
- **Certain functions not working:**
 - Verify that your specific Westinghouse TV model is listed as compatible. While the remote is designed for broad compatibility, some advanced or unique TV features may not be supported by a replacement remote.
 - Ensure the TV's firmware is up to date, if applicable.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your USARMT RMT-13 replacement remote control, please contact the seller or manufacturer directly. Specific warranty terms and support procedures are typically provided at the point of purchase or on the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07PHB5BYK>

More documents and user manuals: <https://manuals.plus/>