

DICKIE TOYS 203818000

Dickie Toys Fendt Happy House Farm Set Instruction Manual

Model: 203818000

1. INTRODUCTION

The Dickie Toys Fendt Happy House Farm Set is an interactive playset designed for children aged 12 months and older. This set allows children to immerse themselves in farm life with a detailed farm house, a Fendt tractor, and farm animals. It features light and sound functions to enhance the play experience.

Key features include:

- A 38 cm farm house with a rooster on the roof and a rotating picture carousel.
- Integrated tractor garage, hay floor, and stable.
- Movable curtains, a hay bale ramp, and feeding troughs.
- A sound module with music, animal, and vehicle sounds.
- An included Fendt tractor with an animal trailer for transporting the cow and horse figures.
- A practical folding function for easy storage of accessories and the tractor.



Figure 1.1: Overview of the Dickie Toys Fendt Happy House Farm Set, including the farm house, barn, tractor, cow, and horse.

2. SETUP

2.1 Unpacking and Initial Assembly

1. Carefully remove all components from the packaging.
2. Ensure all parts are present: farm house, barn, Fendt tractor, animal trailer, cow figure, horse figure, and any small accessories.
3. Connect the farm house and barn sections if they are separate. The set is designed to be foldable for storage, so ensure it is unfolded and securely connected for play.



Figure 2.1: The Fendt Happy House Farm Set fully assembled and ready for play, showing the tractor with a hay bale and animal figures.

2.2 Battery Installation

The farm set requires 2 AA batteries for its light and sound functions. These batteries are included with the product.

1. Locate the battery compartment, typically on the underside or rear of the main farm house unit.
2. Using a small screwdriver (not included), open the battery compartment cover.
3. Insert 2 AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Warning: Always ensure the battery compartment is securely closed to prevent access by young children. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

3. OPERATING THE FARM SET

3.1 Farm House Features

- **Rooster and Rotating Picture Carousel:** The rooster on the roof is connected to a rotating picture carousel. Turning the rooster will change the scene in the window, depicting different times of day or farm activities.
- **Movable Curtains:** The windows on the farm house feature movable curtains that can be opened and closed.

- **Sound Module:** Activate the sound module to hear various farm-related sounds, including animal noises, vehicle sounds, and music. The activation point is typically a button or lever on the farm house.



Figure 3.1: Detail of the farm house roof, showing the rooster and the rotating picture carousel in the window.

3.2 Barn and Tractor Operation

- **Tractor Garage:** The barn features a garage area where the Fendt tractor can be parked.
- **Hay Bale Ramp:** Utilize the hay bale ramp to simulate moving hay bales. The set includes a hay bale accessory.
- **Fendt Tractor:** The tractor is free-wheeling and can be pushed around. It may have movable parts such as a front loader or scoop.
- **Animal Trailer:** Attach the animal trailer to the Fendt tractor. Place the cow and horse figures into the trailer for transport around the farm.



Figure 3.2: The barn section of the playset, demonstrating the hay bale launching mechanism.



Figure 3.3: The farm set positioned on a bed of hay, with the Fendt tractor partially visible inside the barn's garage area.

4. MAINTENANCE

4.1 Cleaning Instructions

- To clean the farm set, wipe surfaces with a damp cloth.
- Do not immerse the electronic components (farm house with sound module) in water.
- Avoid using harsh chemicals or abrasive cleaners, as these may damage the plastic.
- Ensure the toy is completely dry before storing or allowing children to play with it again.

4.2 Storage

The farm set features a practical folding function for compact storage. Fold the farm house and barn sections together, and store the tractor and accessories inside the designated compartments or alongside the folded unit.

5. TROUBLESHOOTING

• No Sound/Lights:

- Check if the batteries are correctly installed with the proper polarity.
- Replace the batteries with new AA batteries.
- Ensure the battery compartment cover is securely closed.

• Parts Not Connecting Properly:

- Verify that the sections are aligned correctly before attempting to connect them.
- Do not force parts together. If a part seems stuck, re-check the instructions or contact customer support.

6. SPECIFICATIONS

Feature	Detail
Model Number	203818000
Brand	DICKIE TOYS
Item Weight	4.07 pounds
Dimensions	Approximately 38 cm (15 inches) in length (farm set)
Recommended Age	10 months and up (Manufacturer recommended)
Batteries Required	2 AA batteries (included)
Release Date	September 1, 2019
Manufacturer	Dickie Toys

7. SAFETY INFORMATION

Please read and adhere to the following safety guidelines:

- **Warning:** Contains small parts. Not suitable for children under 12 months due to potential choking hazards.
- To be used under the direct supervision of an adult.
- Keep packaging materials away from children to prevent suffocation.
- Regularly inspect the toy for any damage or loose parts. Discontinue use if any damage is found.
- Ensure batteries are installed correctly and the compartment is secured to prevent ingestion.

