

## vidaXL 45104

# vidaXL Party Tent 3x9 m Anthracite Black Instruction Manual

Model: 45104

Brand: vidaXL

## 1. SAFETY INFORMATION

Please read all safety warnings and instructions carefully before assembling and using this product. Failure to follow these instructions may result in product damage or personal injury.

- This product is designed for temporary outdoor use. It is not intended as a permanent structure.
- **Never use this product in adverse weather conditions** such as strong winds, heavy rain, snow, or storms. Such conditions can cause the tent to collapse, leading to damage or injury.
- Ensure the tent is securely anchored to the ground using all provided ropes and stakes.
- Keep all flame and heat sources away from the tent fabric. The fabric is not fireproof.
- Do not hang heavy objects from the tent frame.
- Supervise children around the tent.

For additional safety details, refer to the official Safety Information PDF: [Safety Information \(PDF\)](#)

## 2. PRODUCT OVERVIEW

The vidaXL Party Tent provides a versatile outdoor shelter for various events and gatherings. It features a robust steel frame and a durable polyethylene cover designed to be UV and water-resistant.

### Key Features:

- UV and water-resistant polyethylene roof and side panels.
- Rust-resistant alloy steel frame for stability.
- Side panels with decorative windows.
- One zippered door panel for easy access.

### Dimensions:

- Overall dimensions (L x W x H): 9 x 3 x 2.55 meters (approximately 29.5 x 9.8 x 8.4 feet).

- Eave height from ground: 1.80 meters (approximately 5.9 feet).



Image 2.1: The vidaXL Party Tent 3x9 m in anthracite black, shown fully assembled in a garden. The tent features multiple side windows and a main entrance.

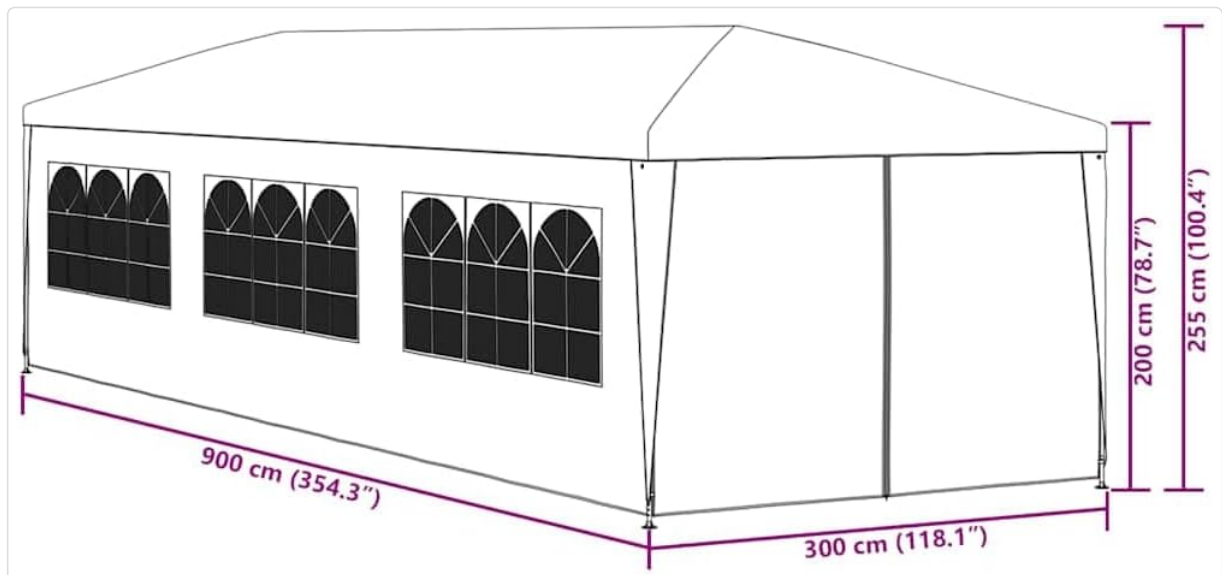


Image 2.2: A technical diagram illustrating the overall dimensions of the party tent, including length (900 cm), width (300 cm), total height (255 cm), and eave height (200 cm).

### 3. SETUP INSTRUCTIONS

Assembly of the party tent requires careful attention to detail. It is recommended that at least two people assist with the setup. Ensure you have enough space and all components are present before starting.

#### Components Checklist:

- Steel poles (various lengths)
- Connectors (plastic or metal joints)
- Roof cover (polyethylene)
- Side panels (polyethylene, with windows and zippered door)
- Ground stakes and ropes for anchoring

#### Assembly Steps:

1. **Unpack and Sort:** Carefully unpack all components and lay them out. Identify and sort poles by

length and connectors by type.

2. **Assemble the Base Frame:** Connect the shortest poles with the appropriate corner and side connectors to form the rectangular base of the tent.
3. **Install Vertical Poles:** Insert the vertical poles into the base frame connectors. Ensure they are fully seated.
4. **Assemble the Roof Frame:** Connect the remaining poles and connectors to form the roof structure. This typically involves creating a peak or a slightly sloped design.
5. **Attach Roof Cover:** Carefully drape the polyethylene roof cover over the assembled frame. Ensure it is centered and all edges align with the frame. Secure it using any integrated ties or fasteners.
6. **Attach Side Panels:** Hang the side panels around the perimeter of the tent. The panels with windows should be placed as desired, and the door panel should be positioned for easy access. Secure them to the frame using the provided fasteners (e.g., Velcro straps, hooks).
7. **Secure the Tent:** Use the provided ground stakes and ropes to firmly anchor the tent to the ground. This is crucial for stability, even in light breezes. Ensure all anchor points are taut.



Image 3.1: Detail of the frame connection points, showing how the alloy steel poles fit into the plastic connectors.



Image 3.2: Detail of the tent's foot base, showing how the fabric is secured to the vertical pole and base for stability.

#### **4. OPERATING INSTRUCTIONS**

Once assembled, the vidaXL Party Tent is ready for use as an outdoor shelter.

##### **Access and Ventilation:**

- The tent features a zippered door panel. Use the zipper to open and close the entrance as needed.
- The side panels can be partially or fully opened (if designed with roll-up features) to allow for ventilation.



Image 4.1: Detail of the zipper closure on the tent's door panel.



Image 4.2: The party tent with an open entrance, showing the interior space and a chair with a small table.

### **Weather Considerations:**

- Despite being water-resistant, the tent is not designed for heavy rain. Prolonged exposure to rain may lead to leaks or water accumulation.
- In anticipation of strong winds, heavy rain, or snow, **disassemble the tent immediately** to prevent damage to the product and potential hazards.

## **5. MAINTENANCE**

Proper maintenance will extend the lifespan of your vidaXL Party Tent.

### **Cleaning:**

- Clean the polyethylene fabric with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners, as these can damage the material.
- Rinse thoroughly with clean water and allow the fabric to air dry completely before storage.
- Wipe down steel poles with a damp cloth to remove dirt and debris. Ensure they are dry to prevent rust.

### **Storage:**

- When not in use, especially during off-seasons or periods of expected bad weather, disassemble the tent.
- Ensure all fabric components are completely dry before folding and storing to prevent mold and mildew.
- Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.

### Inspection:

- Periodically inspect the frame for any signs of damage, bending, or rust.
- Check the fabric for tears, holes, or weakened seams. Small tears can often be repaired with a suitable patch kit.
- Ensure all connectors are intact and not cracked.

## 6. TROUBLESHOOTING

This section addresses common issues you might encounter with your party tent.

### Issue: Tent is unstable or sways in light wind.

- **Solution:** Ensure all ground stakes are fully inserted and ropes are taut. Check that all frame connections are secure and poles are properly seated in their connectors. If winds are stronger than a light breeze, disassemble the tent.

### Issue: Water leakage during rain.

- **Solution:** While the tent is water-resistant, it is not fully waterproof for heavy or prolonged rain. Check for any visible tears or gaps in the fabric. Ensure the roof cover is stretched tightly to prevent water pooling. For persistent leaks, consider applying a seam sealer or waterproof spray to the fabric.

### Issue: Poles bending or connectors breaking.

- **Solution:** This typically occurs due to excessive stress from wind, snow accumulation, or improper assembly. Immediately disassemble the tent if poles or connectors show signs of damage. Replace damaged parts before re-assembly. Always adhere to the safety warning regarding bad weather conditions.

## 7. SPECIFICATIONS

Feature	Detail
Brand	vidaXL
Model Number	45104
Material	Alloy Steel (frame), Polyethylene (PE) (cover)
Color	Anthracite Black
Product Dimensions (L x W x H)	9L x 3W x 2.55H Meters
Eave Height	1.80 Meters
Item Weight	17.52 Kilograms
UV Protection	UV-resistant

Feature	Detail
Water Resistance	Water-resistant
Closure Type	Zipper (for door panel)
Assembly Required	Yes
Recommended Use	Outdoor Parties

## 8. WARRANTY INFORMATION

Specific warranty details for the vidaXL Party Tent are not provided in the product information. Please refer to the retailer or manufacturer's official website for current warranty terms and conditions, or contact their customer service directly for assistance.

## 9. SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact:

- **Your Retailer:** For purchase-related inquiries, returns, or initial troubleshooting.
- **vidaXL Customer Service:** Visit the official vidaXL website for contact information and support resources.