

bonsai L409-A

Bonsai L409-A A4 Laminator Instruction Manual

Model: L409-A

[Safety Instructions](#)

[Setup](#)

[Operation](#)

[Maintenance
& Support](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

1. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the Bonsai L409-A laminator to ensure safe and proper operation. Keep this manual for future reference.

- Do not laminate empty film pouches.
- Always insert the closed end of the film pouch into the machine first.
- Insert the film pouch straight and horizontally.
- Ensure the document is centered within the film pouch, leaving a margin on all four sides.
- Do not connect multiple film pouches together.
- Do not cut the film pouch before lamination.
- Do not use deformed film pouches.
- Do not laminate two film pouches simultaneously.
- Always turn off the power switch after use.
- Allow the machine to rest for 30 minutes after 2 hours of continuous use to prevent overheating.
- Keep out of reach of children. Adult supervision is recommended if children are present during operation.



★ 日本語対応・国内サポートの安心保証

ご購入後も万全のアフターサービスをご提供します。お問い合わせは日本語で専任スタッフが日本国内から迅速に対応いたしますので、ご安心ください。

★ 保証と修理に関するご案内

製品保証期間は1年間です。万が一不具合が生じた場合、日本国内のサービスセンターにて迅速な修理・交換に対応させていただきます。



Image: Safety warnings illustrating common mistakes such as laminating empty pouches, inserting film incorrectly, or using damaged pouches.

2. SETUP

Follow these steps to set up your Bonsaii L409-A laminator:

1. **Unpacking:** Carefully remove the laminator from its packaging. Ensure all packing materials are removed.
2. **Placement:** Place the laminator on a stable, flat surface with adequate ventilation. Ensure there is enough space around the machine for proper air circulation and for documents to pass through.
3. **Power Connection:** Plug the power cord into a standard electrical outlet.
4. **Power On:** Locate the main power switch (usually on the side or back) and switch it to the "ON" position.

IDカードからA4まで 使いやすいラミネーター



①電源を入れて、電源ONにする



②予熱時間を待っている



③フィルムに原稿を挟む



④ラミネート完了

Image: Close-up of the laminator showing the power switch in the "ON" position and the "Ready" lamp.

5. **Warm-up:** The power lamp will illuminate (often red) to indicate the machine is warming up. The warm-up time is approximately 3 minutes and 30 seconds at a room temperature of 25°C. Wait until the "Ready" lamp illuminates (often green) before proceeding with lamination.

3. OPERATION

Once the laminator is set up and warmed up, follow these steps to laminate your documents:

1. **Prepare Document:** Place your document inside a laminating pouch. Ensure the document is centered and there is an even margin of film around all edges. The Bonsai L409-A supports A4 size and smaller, including business cards and card-sized materials.
2. **Insert Pouch:** With the "Ready" lamp illuminated, carefully insert the closed end of the laminating pouch into the laminator's entry slot. Insert it straight and horizontally.

水平にフィルムを入れて、 フラットな仕上がり



Image: A document being inserted into the laminator's entry slot, demonstrating correct horizontal insertion.

- Lamination Process:** The machine will automatically feed the pouch through. Do not pull or push the pouch during lamination. The lamination speed is approximately 400mm per minute.
- Retrieve Laminated Document:** Once the pouch exits the machine, the lamination process is complete. Allow the laminated document to cool on a flat surface for a few moments to ensure optimal results.
- Power Off:** After completing your lamination tasks, switch the main power button to the "OFF" position and unplug the machine from the power outlet.

Stopping Lamination / Jam Release

If you need to stop lamination midway or if a film pouch gets jammed, press the "Laminate Stop Button" (often a lever or button on the side/back). While holding this button, gently pull the film pouch out of the machine.

A4 まで対応



Image: A hand pressing the laminate stop button to release a jammed film pouch.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your laminator:

- **Cleaning:** Ensure the laminator is unplugged and completely cool before cleaning. Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Roller Cleaning:** Periodically run a laminator cleaning sheet (not included) through the machine to remove any adhesive residue from the rollers.
- **Storage:** Store the laminator in a dry, dust-free environment when not in use. Its compact design (approx. W360 x D147 x H58mm) allows for easy storage.



Image: The compact Bonsai L409-A laminator stored neatly on a shelf, highlighting its small footprint.

- **Cool-down Period:** After approximately 2 hours of continuous operation, allow the laminator to rest for at least 30 minutes to prevent overheating and extend its lifespan.

5. TROUBLESHOOTING

This section addresses common issues you might encounter:

Problem	Possible Cause	Solution
Laminator does not turn on.	No power, power switch off.	Check power cord connection. Ensure power switch is "ON".
"Ready" lamp does not light up.	Still warming up, machine malfunction.	Wait for approximately 3 minutes 30 seconds. If it still doesn't light up, contact support.
Film pouch jams.	Incorrect insertion, deformed pouch, multiple pouches.	Press the "Laminate Stop Button" and gently pull out the pouch. Ensure correct insertion and use proper pouches.

Problem	Possible Cause	Solution
Lamination has bubbles or waves.	Incorrect film thickness, uneven insertion, old film.	Ensure film is 100µm. Insert pouch straight. Use fresh, high-quality film.
Laminated document is cloudy.	Rollers are dirty.	Clean the rollers using a laminator cleaning sheet.

6. SPECIFICATIONS

- **Model:** L409-A
- **Brand:** Bonsaii
- **Warm-up Time:** Approximately 3 minutes 30 seconds (at 25°C room temperature)
- **Compatible Film Thickness:** 100µm
- **Maximum Lamination Thickness:** 0.5mm (total of film and paper)
- **Maximum Lamination Width:** Approximately 240mm (A4 compatible)
- **Lamination Speed:** Approximately 400mm/minute (50/60Hz)
- **Number of Rollers:** 2
- **Dimensions (W x D x H):** Approximately 360mm x 147mm x 58mm
- **Power Supply:** AC 100V, 50/60Hz (PSE certified)
- **Continuous Use Recommendation:** 2 hours continuous use, then 30 minutes rest.
- **GTIN (UPC):** 765756170024

7. WARRANTY AND SUPPORT

The Bonsaii L409-A laminator comes with a **1-year warranty** from the date of purchase. If any malfunction occurs during the warranty period, please contact our customer support.

Customer Support

Bonsaii offers reliable customer support with Japanese language assistance and domestic repair services. For inquiries or issues, please contact our dedicated staff.

- **Support Contact:** Refer to the contact information provided in your product packaging or on the official Bonsaii website.
- **Repair Service:** In case of a defect, our domestic service center will promptly handle repairs or replacements.

A3 まで対応



Image: A customer support representative wearing a headset, symbolizing available assistance.