

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Easytry123](#) /

› [Easytry123 Remote Control Instruction Manual for Proscan and RCA HDTVs](#)

Easytry123 PLEDV2488A-E, RLDED3205A, RLDEDV3255-A, RLDED4215A, RLDED4897A, RLDED5005A

Easytry123 Replacement Remote Control Instruction Manual

For Proscan PLEDV2488A-E & RCA RLDED3205A, RLDEDV3255-A, RLDED4215A, RLDED4897A, RLDED5005A LCD LED HDTV TVs

IMPORTANT COMPATIBILITY INFORMATION

This remote control is designed as a replacement for specific Proscan and RCA TV models. It is crucial to verify that the suffix of your TV model exactly matches those listed in the product title. Mismatched suffixes may result in the remote not functioning correctly or at all.

Example: A TV model PLED5068A-S requires a remote specifically designed for that suffix, even if a remote for PLED5068A exists.



Image Description: An image illustrating different remote controls for various PLED1960A series models (PLED1960A-E, PLED1960A-K, PLED1960A-LD, PLED1960AB-LD) and stating that they are not compatible with a generic PLED1960A remote. This highlights the importance of matching the exact model suffix.

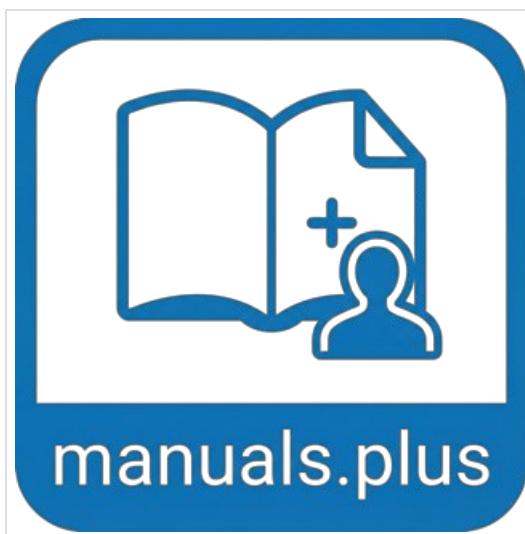


Image Description: An image illustrating different remote controls for various RLEDV2488A series models (RLEDV2488A-B, RLEDV2488A-C, RLEDV2488A-D) and stating that they are not compatible with a generic RLEDV2488A remote. This further emphasizes the need for precise model suffix matching.

PRODUCT OVERVIEW

This is a replacement infrared remote control. It provides basic functionality for compatible Proscan and RCA LCD LED HDTV televisions. Please note that a replacement item may not work with all functions of the original remote.

PDED1960A



They are not Compatible !



PLED1960A-E



PLED1960A-K



PLED1960A-LD



PLED1960AB-LD

Make sure the suffix of your TV model is exactly the same as the one in our title !

Such as PLDED5068A PLDED5068A-S,PLDED5068A-C ,PLDED5068A-D,

4 models with 4 different remotes!

Image Description: A front view of the Easytry123 replacement remote control, showing its button layout.

SETUP

Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. **Batteries are not included.**
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

RLEDV2488A



They are not Compatible !



RLEDV2488A-B



RLEDV2488A-C



RLEDV2488A-D

Make sure the suffix of your TV model is exactly the same as the one in our title !

Such as PLDED5068A PLDED5068A-S,PLDED5068A-C ,PLDED5068A-D,

4 models with 4 different remotes!

Image Description: A rear view of the remote control with the battery compartment open, showing the slots for two AAA batteries.

First Use

Once batteries are installed, the remote control is generally ready for use with compatible TV models. No programming is typically required for this replacement remote. Point the remote directly at your television's infrared receiver.

OPERATING INSTRUCTIONS

The remote control features standard buttons for TV operation.

- **Power Button:** Turns the TV on or off.
- **Channel Up/Down:** Changes the TV channel.
- **Volume Up/Down:** Adjusts the TV volume.
- **Mute Button:** Silences the TV audio.
- **Number Buttons (0-9):** Directly input channel numbers.
- **Input/Source Button:** Selects different input sources (e.g., HDMI, AV).
- **Menu Button:** Accesses the TV's on-screen menu.
- **Navigation Buttons (Up, Down, Left, Right, OK/Enter):** Navigate through TV menus.

Refer to your television's original user manual for specific functions and menu navigation details.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures.

Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with fresh AAA batteries.
- **Line of Sight:** Make sure there are no obstructions between the remote and the TV's infrared sensor.
- **TV Compatibility:** Double-check that your TV model's suffix exactly matches the compatible models listed for this remote.
- **Infrared Sensor:** Ensure the TV's infrared sensor is clean and not blocked.

Some Functions Do Not Work

- This is a replacement remote and may not support all advanced or specific functions of your original TV remote. Basic functions (power, volume, channel) should operate.
- Consult your TV's original manual for functions specific to your TV model.

Remote Works Intermittently

- This often indicates low battery power. Replace the batteries.
- Ensure you are within the effective range of the TV's infrared receiver.

If issues persist after following these steps, the remote may not be fully compatible with your specific TV unit, or there may be an issue with the TV's infrared receiver.

SPECIFICATIONS

Feature	Detail
Brand	Easytry123
Connectivity Technology	Infrared
Controller Type	Button Control
Compatible Devices	Proscan PLEDV2488A-E, RCA RLDED3205A, RLDEDV3255-A, RLDED4215A, RLDED4897A, RLDED5005A LCD LED HDTV TVs
Power Source	2 x AAA Batteries (not included)

Feature	Detail
Date First Available	March 6, 2019

WARRANTY AND SUPPORT

For information regarding warranty or customer support, please refer to the seller's policies or contact the seller directly through your purchase platform. This product is provided by Easytry123.

Easytry123 Replacement Remote Control Manual. All rights reserved.