

[manuals.plus](#) /› [NEWCOOK](#) /› [NEWCOOK Delicious Programmable Electric Pressure Cooker User Manual](#)

NEWCOOK Newcook Delicious

NEWCOOK Delicious Programmable Electric Pressure Cooker User Manual

Model: Newcook Delicious

Brand: NEWCOOK

1. INTRODUCTION

Thank you for choosing the NEWCOOK Delicious Programmable Electric Pressure Cooker. This appliance is designed to simplify your cooking process, offering a wide range of functions and safety features. Please read this manual carefully before first use to ensure safe and optimal operation of your new cooker.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always ensure the pressure release valve is clear before use.
- Do not open the lid until the internal pressure has been completely released.
- The cooker features 12 safety systems, including a larger, easy-to-operate pressure valve, power interruption memory, and fault auto-detection.

3. PRODUCT COMPONENTS

Your NEWCOOK Delicious Pressure Cooker comes with the following components:

- Main Unit with Control Panel
- Lid with Pressure Release Valve
- Ceramic-coated Non-stick Inner Pot
- Frying Accessory
- Measuring Cup
- Ladle
- Base



OLLA PROGRAMABLE AUTOMÁTICA MULTIFUNCIÓN

17 menús preconfigurados | 4 niveles de presión | 1000 W

Image: NEWCOOK Delicious Pressure Cooker with included accessories.



CUBETA CON RECUBRIMIENTO CERÁMICO

Cubeta 100% antiadherente | 12 sist. de seguridad

Image: Close-up view of the 100% non-stick ceramic inner pot.

4. SETUP

- Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
- Initial Cleaning:** Before first use, wash the inner pot, lid, and all accessories with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- Placement:** Place the cooker on a stable, level, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate space around the cooker for ventilation.
- Power Connection:** Ensure the voltage of your power outlet matches the voltage specified on the cooker's rating label (240V). Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview



Image: Front view of the NEWCOOK Delicious Pressure Cooker showing the control panel. The control panel features an intuitive display and various buttons for selecting cooking functions, adjusting time and temperature, and managing settings.

5.2 Cooking Modes and Functions

The NEWCOOK Delicious offers 15 different cooking menus and 4 pressure levels, allowing for versatile meal preparation. These include:

- Baking
- Steaming
- Stewing
- Frying
- Desserts
- Rice
- Pasta
- Reheating
- And more...

You can also manually program the cooking time (1-990 minutes), temperature (90-200°C), and pressure.

5.3 24-Hour Programmable Timer

Utilize the 24-hour programmable timer to set your meal to be ready at a specific time. Simply add ingredients, select the cooking menu, and set the desired serving time. The cooker will automatically start and finish cooking, keeping the food warm for up to 24 hours until ready to serve.

5.4 Voice Guide Feature

The cooker includes a voice guide in Spanish that assists you through each step of the cooking process. A MUTE function is also available if you prefer to disable the voice prompts.



Image: Various cooking scenarios and components of the NEWCOOK Delicious Pressure Cooker.



INSPIRÁTE CON NUESTRA APP DE RECETAS

APP Newlux Recipes

Image: Accessing recipes via the NEWCOOK app on a smartphone.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your pressure cooker.

- **Inner Pot:** The ceramic-coated inner pot is 100% non-stick and easy to clean. Wash with warm, soapy water and a soft sponge. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
- **Lid and Sealing Ring:** Remove the sealing ring from the lid after each use and wash it thoroughly. Clean the lid, including the pressure release valve and anti-block shield, to prevent food residue buildup. Ensure all parts are dry before reassembling.
- **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not use harsh chemicals or immerse the unit in water.
- **Storage:** Store the cooker in a dry place. You may place the lid upside down on the inner pot to allow air circulation and prevent odors.

7. TROUBLESHOOTING

If you encounter any issues with your NEWCOOK Delicious Pressure Cooker, please refer to the following common solutions:

| Problem | Possible Cause | Solution |
|------------------------------------|---|--|
| Cooker does not turn on | Not plugged in; power outage; faulty outlet. | Check power cord connection; check circuit breaker; try a different outlet. |
| Pressure not building | Lid not properly sealed; sealing ring damaged; insufficient liquid. | Ensure lid is locked correctly; check sealing ring for damage and proper placement; add more liquid as per recipe. |
| Food not cooking properly | Incorrect program selected; insufficient cooking time/temperature. | Verify selected program and adjust time/temperature if using manual settings. |
| Voice guide is off/on unexpectedly | Mute function activated/deactivated. | Press the MUTE button on the control panel to toggle the voice guide. Note: The voice guide may reset to default upon power cycle. |
| Error code displayed | Internal fault detected. | Unplug the cooker, wait a few minutes, then plug it back in. If the error persists, contact customer support. |

The cooker features an auto-detection system for faults or errors. In case of a power interruption, the cooker has a memory system to resume cooking if the interruption is brief.

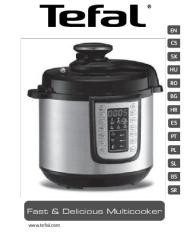
8. SPECIFICATIONS

- **Model:** Newcook Delicious
- **Capacity:** 6 Liters
- **Power:** 1000 Watts
- **Voltage:** 240 Volts
- **Dimensions (L x W x H):** 33.8 x 33.8 x 29 cm
- **Weight:** 6.6 kg
- **Material:** Stainless Steel (exterior), Ceramic (inner pot)
- **Special Features:** Programmable, Compact, Portable, Voice Guide, 15 Cooking Functions, 4 Pressure Levels, 12 Safety Systems.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your

Related Documents - Newcook Delicious

| | |
|---|--|
|  | <p><u>Manual de Usuario Olla Programable Newcook Delicious</u></p> <p>Manual completo para la Olla Programable Newcook Delicious, detallando características, funciones e instrucciones de cocción para diversos modos como cocción a presión, vapor y cocción lenta.</p> |
|  | <p><u>Robot de Cocina Newcook Silver: Manual de Instrucciones y Guía de Uso</u></p> <p>Descubre todas las funciones de tu Robot de Cocina Newcook Silver. Esta guía completa te ofrece instrucciones detalladas, consejos de seguridad, menús de cocción y mantenimiento para sacar el máximo partido a tu electrodoméstico.</p> |
|  | <p><u>Tefal Fast & Delicious Multicooker User Manual</u></p> <p>Comprehensive guide to using the Tefal Fast & Delicious Multicooker, covering safety instructions, operation, and maintenance for optimal cooking results.</p> |
|  | <p><u>Tefal Fast & Delicious Multicooker User Manual</u></p> <p>User manual for the Tefal Fast & Delicious Multicooker, providing comprehensive guidance on its operation, featuring a range of cooking functions including pressure cooking, steaming, baking, and more. Discover how to prepare delicious meals efficiently with this innovative multicooker from Tefal.</p> |