

[Manuals.plus](#) /

> [vidaXL](#) /

> vidaXL Hot Dog Machine 4 Rods Stainless Steel 550W - Instruction Manual Model 50769

vidaXL 50769

vidaXL Hot Dog Machine 4 Rods Stainless Steel 550W

Model: 50769 - Instruction Manual

1. PRODUCT OVERVIEW

The vidaXL Hot Dog Machine, Model 50769, is a professional-grade appliance designed for heating sausages and buns efficiently. Constructed from durable stainless steel, it features a borosilicate glass cylinder for warming sausages and four heating rods for buns. The machine offers adjustable temperature control up to 100°C, ensuring optimal serving conditions. Its compact design, removable lid, thermally insulated handle, and stable rubber feet make it suitable for various settings.



Figure 1: The vidaXL Hot Dog Machine with 4 heating rods and a glass cylinder for sausages.

2. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is placed on a stable, level, and heat-resistant surface.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and pets.
- Always unplug the appliance from the power outlet when not in use, before cleaning, or before moving.
- Exercise extreme caution when handling hot surfaces. The glass cylinder and heating rods become very hot during operation. Use the insulated handle and appropriate utensils.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only manufacturer-recommended accessories.
- Ensure the power supply matches the specifications of the appliance (220-240V~, 50-60Hz).

3. COMPONENTS

Familiarize yourself with the main components of your hot dog machine:

- **Main Unit:** Stainless steel base housing controls and heating elements.
- **Glass Cylinder:** Borosilicate glass container for heating and holding sausages.
- **Sausage Basket:** Metal basket placed inside the glass cylinder to hold sausages.
- **Heating Rods (4):** Stainless steel rods for warming hot dog buns.
- **Lid:** Removable lid for the glass cylinder.
- **Temperature Control Knob:** Adjusts the heating temperature.
- **Power Switches:** Separate ON/OFF switches for the sausage warmer and bun rods.



Figure 2: Front view of the hot dog machine, highlighting the stainless steel construction and controls.



Figure 3: Components of the hot dog machine, including the main unit, glass cylinder, sausage basket, and lid.

4. SETUP

1. **Unpack:** Carefully remove all packaging materials and ensure all components are present and undamaged.
2. **Placement:** Place the hot dog machine on a clean, dry, stable, and heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
3. **Initial Cleaning:** Before first use, clean all removable parts (glass cylinder, sausage basket, lid) with warm soapy water. Wipe the main unit with a damp cloth. Dry all parts thoroughly.
4. **Assemble:** Place the sausage basket inside the glass cylinder, then position the glass cylinder onto the designated heating plate on the main unit.
5. **Fill Water:** Pour approximately 0.5 to 1 liter of clean water into the base of the glass cylinder, ensuring the water level is below the bottom of the sausage basket. This water creates steam to heat the sausages.

5. OPERATING INSTRUCTIONS

1. **Connect Power:** Plug the appliance into a grounded 220-240V~, 50-60Hz power outlet.
2. **Load Sausages:** Place the desired number of sausages into the sausage basket within the glass cylinder. Cover with the lid.
3. **Load Buns:** Impale hot dog buns onto the four heating rods.
4. **Set Temperature:** Turn the temperature control knob to your desired setting. The thermostat can be adjusted between 35°C and 100°C. For quick heating, set to a higher temperature; for keeping warm, a lower setting is sufficient.
5. **Power On:** Flip the power switch for the sausage warmer (usually labeled 'ON/OFF' or with a light indicator) to the 'ON' position. If desired, also turn on the switch for the bun heating rods. The 'HEAT' indicator light will illuminate when heating.
6. **Heat:** Allow sufficient time for sausages to heat through and buns to warm. Heating times will vary depending on the initial temperature of the food and the selected temperature setting. Typically, sausages may take 10-20 minutes to heat thoroughly.
7. **Serve:** Once heated, carefully remove sausages and buns using appropriate tongs or gloves.
8. **Power Off:** After use, turn both power switches to the 'OFF' position and unplug the appliance.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your hot dog machine.

1. **Disconnect Power:** Always ensure the appliance is unplugged from the power outlet and completely cooled down before cleaning.
2. **Disassemble:** Carefully remove the glass cylinder, sausage basket, and lid.
3. **Clean Removable Parts:** Wash the glass cylinder, sausage basket, and lid in warm, soapy water. Rinse thoroughly and dry completely before reassembling or storing.
4. **Clean Main Unit:** Wipe the exterior of the main unit with a damp cloth. For stubborn stains, use a mild detergent. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the stainless steel finish.
5. **Descaling (Glass Cylinder):** If mineral deposits build up in the water reservoir of the glass cylinder, descale it periodically using a solution of water and white vinegar or a commercial descaling agent, following the product instructions.
6. **Storage:** Store the clean and dry appliance in a cool, dry place.

7. TROUBLESHOOTING

- **Appliance does not heat:**

- Check if the power cord is securely plugged into a working outlet.
- Ensure both the main power switch and the individual heating switches are in the 'ON' position.
- Verify the temperature control knob is set to a heating temperature, not 'OFF' or minimum.

- **Sausages not heating evenly or quickly:**

- Ensure there is sufficient water in the glass cylinder for steam generation.
- Check that the temperature setting is appropriate for heating, not just warming.
- Avoid overcrowding the sausage basket.

- **Buns not warming:**

- Ensure the power switch for the bun heating rods is in the 'ON' position.

8. SPECIFICATIONS



Figure 4: Diagram showing the dimensions of the hot dog machine.

Feature	Specification
Model Number	50769

Material	Stainless steel casing, Borosilicate glass cylinder
Color	Silver
Overall Dimensions (L x W x H)	480 x 280 x 410 mm
Glass Cylinder Dimensions (Diameter x H)	20 x 24 cm
Heating Rod Dimensions (Diameter x H)	22 x 195 mm
Power Supply	220 - 240 V~, 50 - 60 Hz
Heating Power	550 W
Temperature Range	35°C to 100°C
Number of Heating Rods	4
Item Weight	9.35 kg