

[Manuals.plus](#) /

> [Easytry123](#) /

> Easytry123 Replacement Remote Control for Sony Mini Hi-Fi Component Systems (MHC-GNX880, GNX700, LBT-ZX9, LBT-ZX8, LBT-ZX6, HCD-GNX800, FST-ZX8, CMT-HPX7W, MHC-RG575S) User Manual

Easytry123 Easytry5915

Easytry123 Replacement Remote Control User Manual

Model: Easytry5915

INTRODUCTION

This manual provides instructions for the Easytry123 replacement remote control, designed for use with various Sony Mini Hi-Fi Component Systems. Please refer to the compatible models list to ensure this remote is suitable for your device.

Compatible Sony Mini Hi-Fi Component System Models:

- MHC-GNX880
- GNX700
- LBT-ZX9
- LBT-ZX8
- LBT-ZX6
- HCD-GNX800
- FST-ZX8
- CMT-HPX7W
- MHC-RG575S

Note: This replacement remote may not support all functions of the original remote control.

SETUP

1. Installing Batteries

The remote control requires two (2) AA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.

2. Press down on the tab and slide the cover off.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Back view of the remote control, highlighting the battery compartment cover. The cover is located on the lower half of the remote's back, designed to slide open for battery insertion.

Important: Ensure correct battery polarity to prevent damage to the remote control. Do not mix old and new batteries, or different types of batteries.

OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology. Point the remote directly at the IR receiver on your Sony Mini Hi-Fi Component System for optimal performance.

Basic Functions:

- **Power On/Off:** Press the **POWER** button to turn the system on or off.
- **Volume Control:** Use the **VOL +** and **VOL -** buttons to adjust the volume level.
- **Channel/Track Selection:** Use the **CH +** and **CH -** buttons for radio tuning or track navigation.
- **Mute:** Press the **MUTE** button to temporarily silence the audio. Press again to restore sound.
- **Source Selection:** Use the **FUNCTION** or dedicated input buttons (e.g., CD, TUNER, TAPE) to switch between audio sources.

Note: Specific button layouts and functions may vary slightly depending on the original remote it replaces. Refer to your Sony system's original manual for detailed function descriptions.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface and buttons.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote to extreme temperatures, direct sunlight, high humidity, or liquids.

TROUBLESHOOTING

If you experience issues with your remote control, consult the following table:

Problem	Possible Cause	Solution
Remote is not working.	<ul style="list-style-type: none">• Batteries are dead or incorrectly installed.• Obstruction between remote and system.• Remote is out of range.	<ul style="list-style-type: none">• Replace batteries, ensuring correct polarity.• Remove any objects blocking the signal path.• Move closer to the component system (within 10 meters).
Some functions do not work.	<ul style="list-style-type: none">• This is a replacement remote.• Specific function not supported.	<ul style="list-style-type: none">• Verify if the function was supported by the original remote.• Understand that replacement remotes may have limited functionality compared to OEM.

SPECIFICATIONS

- **Brand:** Easytry123
- **Model Name:** Easytry5915 (Replacement Remote)
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Maximum Range:** 10 Meters (33 feet)
- **Power Source:** 2 x AA Batteries (not included)
- **Color:** Grey
- **Special Feature:** Ergonomic design
- **Compatible Devices:** Sony Mini Hi-Fi Component Systems (MHC-GNX880, GNX700, LBT-ZX9, LBT-ZX8, LBT-ZX6, HCD-GNX800, FST-ZX8, CMT-HPX7W, MHC-RG575S)

WARRANTY AND SUPPORT

For warranty information or technical support, please contact your retailer or the manufacturer, Easytry123. Refer to your purchase documentation for specific contact details.

Note: This product is a replacement remote control and is not manufactured by Sony.

