

[Manuals.plus](#) /

› [Daewoo](#) /

› Daewoo DWC-EHD1433 Front Load Washer Dryer User Manual

Daewoo DWC-EHD1433

Daewoo DWC-EHD1433 Front Load Washer Dryer User Manual

Model: DWC-EHD1433

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Daewoo DWC-EHD1433 front-load washer dryer. It covers installation, daily use, maintenance, and troubleshooting. Please read these instructions thoroughly before using the appliance and retain them for future reference.

The Daewoo DWC-EHD1433 is a versatile appliance designed for washing up to 9 kg of laundry and drying up to 7 kg, featuring a maximum spin speed of 1400 RPM.



Image 1.1: Front view of the Daewoo DWC-EHD1433 Front Load Washer Dryer. This image displays the control panel, detergent drawer, and main loading door.

2. SAFETY INFORMATION

Important Safety Instructions:

- Read all instructions before using the appliance.
- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.
- Keep flammable materials and vapors away from the appliance.

3. INSTALLATION

Proper installation is crucial for the safe and efficient operation of your washer dryer. It is recommended that installation be performed by a qualified technician.

3.1 Unpacking

- Remove all packaging materials, including the polystyrene base and any protective film.
- Remove the transit bolts from the rear of the machine. These bolts secure the drum during transport and must be removed before use to prevent damage. Keep them for future transport.

3.2 Location Requirements

- Place the appliance on a firm, level floor. Uneven surfaces can cause vibration and noise.
- Ensure adequate ventilation around the machine.
- Avoid direct sunlight or extreme temperatures.
- The appliance requires access to a cold water supply, a drain, and a grounded electrical outlet.

3.3 Connecting Water Hoses

- Connect the cold water inlet hose to the cold water tap and the corresponding inlet on the back of the machine.
- Ensure all connections are tight to prevent leaks.

3.4 Drain Hose Setup

- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during operation.
- The drain hose should not be kinked or obstructed.

3.5 Leveling the Machine

- Adjust the leveling feet at the bottom of the machine until it is perfectly stable and level. Use a spirit level to verify.
- Tighten the lock nuts on the leveling feet to secure them in position.

3.6 Power Connection

- Plug the power cord into a grounded electrical outlet.
- Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

Follow these steps for effective washing and drying.

4.1 Loading Laundry

- Open the loading door and place laundry loosely into the drum. Do not overload the machine; refer to the capacity limits (9 kg wash, 7 kg dry).
- Close the door firmly until it clicks.

4.2 Adding Detergent and Softener

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment.
- Add fabric softener to the designated compartment (if desired).
- Close the dispenser drawer gently.

4.3 Selecting a Program

- Turn the program selector dial to choose the desired wash cycle. Available cycle options include: **Normal**, **Heavy Duty**, and **Delicate**.
- Additional options like temperature, spin speed (up to 1400 RPM), or extra rinse can be selected using the corresponding buttons on the control panel.

4.4 Starting a Cycle

- Press the 'Start/Pause' button to begin the selected program.
- The machine will automatically proceed through the wash, rinse, and spin phases.

4.5 Drying Function

- After a wash cycle, you can select a drying program if your laundry is suitable for machine drying.
- Ensure the load size for drying does not exceed 7 kg.
- Select the desired drying level or time using the control panel.
- Press 'Start/Pause' to begin the drying cycle.

4.6 End of Cycle

- The machine will signal the end of the cycle.
- Wait for the door lock indicator to turn off before opening the door.
- Remove laundry promptly to prevent wrinkles.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

5.1 Cleaning the Detergent Dispenser

- Pull out the detergent dispenser drawer completely.
- Rinse it under running water to remove any detergent residue.
- Clean the housing of the dispenser drawer with a brush.
- Reinsert the drawer.

5.2 Cleaning the Drum

- The drum is made of stainless steel. To prevent odors and maintain cleanliness, run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) periodically.
- Leave the door slightly ajar after use to allow the drum to air dry.

5.3 Cleaning the Filter

- Locate the drain pump filter, usually at the bottom front of the machine.
- Place a shallow container beneath the filter to catch any residual water.
- Carefully unscrew and remove the filter.
- Clean the filter of any lint, coins, or debris.
- Screw the filter back in securely.

5.4 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed; Program not selected	Check power plug; Close door firmly; Select a program and press Start
Water not filling	Water tap closed; Inlet hose kinked; Water supply cut off	Open water tap; Straighten hose; Check water supply
Water not draining	Drain hose kinked or blocked; Drain pump filter blocked	Straighten hose; Clean drain pump filter (refer to Maintenance section)
Excessive vibration/noise	Transit bolts not removed; Machine not level; Overloaded drum	Remove transit bolts; Adjust leveling feet; Reduce load size
Poor washing results	Incorrect detergent dosage; Overloading; Wrong program selection	Use correct detergent amount; Do not overload; Select appropriate program
Poor drying results	Overloaded dryer; Lint filter blocked; Incorrect drying program	Reduce load size; Clean lint filter; Select appropriate drying program

7. SPECIFICATIONS

Feature	Detail
Brand	Daewoo Electronics
Model	DWC-EHD1433
Type	Front Load Washer Dryer
Wash Capacity	9 Kilograms
Dry Capacity	7 Kilograms
Maximum Spin Speed	1400 RPM
Color	Silver
Material Type	Metal
Drum Material	Stainless Steel
Operating Mode	Automatic
Cycle Options	Normal, Heavy Duty, Delicate
Item Weight	51 Kilograms
Shipping Dimensions (L x W x H)	88.01 x 66.01 x 65.01 cm
Batteries Required	No

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or contact your local Daewoo service center. Keep your proof of purchase for warranty claims.

© 2024 Daewoo Electronics. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question