

Midea WQP147605V-W

Midea Freestanding Dishwasher WQP147605V-W User Manual

Model: WQP147605V-W

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Midea Freestanding Dishwasher, model WQP147605V-W. Please read these instructions thoroughly before using the appliance and retain them for future reference.

The Midea WQP147605V-W is a freestanding dishwasher designed for residential use, offering 14 place settings and a range of features for effective dish cleaning. Key features include 6 auto programs, silent operation, high energy efficiency (A++), a half-load function, rapid wash, child lock, off-peak wash option, and a 70° intensive wash program.

2. SAFETY INFORMATION

Important Safety Instructions:

- Read all instructions before using the dishwasher to reduce the risk of fire, electric shock, or injury.
- This appliance is intended for household use only.
- Do not allow children to play with, on, or inside the dishwasher. The appliance features a**Child Lock** to prevent accidental operation and access to the interior, which can be hot and contain sharp objects or hot steam.
- Always disconnect the appliance from the power supply before cleaning or performing maintenance.
- Do not operate the dishwasher if it is damaged or malfunctioning. Contact authorized service personnel.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Sharp items should be loaded with handles up to reduce the risk of cuts.
- Do not touch the heating element during or immediately after use.
- Ensure the dishwasher is properly grounded according to local codes and ordinances.

3. PRODUCT OVERVIEW

The Midea WQP147605V-W dishwasher is designed for efficient and quiet operation, featuring a stainless steel interior and a white exterior finish. It includes a **FlexiRack System** for versatile loading and a **Sliding Detergent Lid Dispenser** for convenience.



Figure 1: Front view of the Midea WQP147605V-W Freestanding Dishwasher with the door open, revealing the interior racks, cutlery basket, and detergent dispenser.

Key Components:

- **Upper Rack:** Adjustable for various dish sizes.
- **Lower Rack:** Designed for larger plates and pots.

- **Cutlery Basket:** For forks, spoons, and knives.
- **Detergent Dispenser:** Located on the inner door, with a sliding lid.
- **Rinse Aid Dispenser:** Adjacent to the detergent dispenser.
- **Salt Container:** Typically located at the bottom of the wash tub.
- **Control Panel:** Features an LCD display and buttons for program selection and functions.

4. SETUP AND INSTALLATION

The Midea WQP147605V-W is a freestanding dishwasher, meaning it can be placed independently and does not require integration into cabinetry. Proper installation is crucial for optimal performance and safety.

Installation Steps:

1. **Unpacking:** Carefully remove all packaging materials. Inspect the dishwasher for any shipping damage.
2. **Positioning:** Place the dishwasher on a level, stable surface. Ensure adequate space for door opening and connections. Product dimensions are approximately 59.8D x 60W x 84.5H centimeters.
3. **Water Supply Connection:** Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa. Ensure connections are tight to prevent leaks.
4. **Drain Hose Connection:** Connect the drain hose to a suitable drain pipe or sink trap. Ensure the hose is not kinked and is properly secured to prevent backflow.
5. **Electrical Connection:** Connect the dishwasher to a grounded electrical outlet. The appliance operates on 220-240 Volts. Do not use extension cords.
6. **Leveling:** Adjust the leveling feet to ensure the dishwasher is perfectly level.

Note: A detailed user manual is included with the product for comprehensive installation instructions. It is recommended to consult a qualified technician for installation if you are unsure.

5. OPERATING INSTRUCTIONS

Your Midea dishwasher offers various programs and functions to suit different washing needs. The control panel features an LCD display for easy program selection and monitoring.

Loading the Dishwasher:

- Scrape off large food particles from dishes before loading.
- Place larger, heavily soiled items in the lower rack.
- Place glasses, cups, and smaller items in the upper rack.
- Load cutlery into the cutlery basket, ensuring items are separated to allow water to reach all surfaces.
- Utilize the **FlexiRack System** to adjust racks for optimal loading of various dish sizes.

Adding Detergent and Rinse Aid:

- Open the **Sliding Detergent Lid Dispenser** on the inner door.
- Add the recommended amount of dishwasher detergent. Close the dispenser lid firmly.
- Check the rinse aid indicator. If low, refill the rinse aid dispenser to ensure streak-free drying. The dishwasher has an **LED rinse aid refill indicator**.

Selecting a Program:

The dishwasher features 6 auto programs and additional functions:

- **70° Intensive Wash:** Ideal for heavily soiled dishes and utensils, effectively eliminating 99.99% of bacteria.
- **Rapid Wash:** A 30-minute ultra-rapid cycle for lightly soiled items or when a quick wash is needed.
- **Half Load Function:** Saves energy and water when the dishwasher is not fully loaded.
- **Off-Peak Wash:** Allows you to preset the start of a cycle for 3, 6, or 9 hours later, useful for off-peak electricity rates.
- **Other Auto Programs:** Refer to the control panel and the full user manual for details on other available programs (e.g., Eco, Normal).

To start a program:

1. Close the dishwasher door securely.
2. Select the desired program using the control panel buttons.
3. Press the Start button.

*Note: The **Child Lock** function can be activated to prevent accidental changes to settings or opening of the door during operation. Consult the full user manual for activation instructions.*

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

Cleaning the Dishwasher:

- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- **Interior:** Periodically clean the interior with a dishwasher cleaner or a mixture of vinegar and baking soda.
- **Filters:** Regularly check and clean the filters located at the bottom of the wash tub to remove food debris.
- **Spray Arms:** Ensure the spray arm nozzles are not clogged. Remove and clean if necessary.

Rinse Aid and Salt Refill:

- The dishwasher is equipped with an **LED rinse aid refill indicator**. Refill the rinse aid dispenser when the indicator lights up.
- An **LED salt refill indicator** will alert you when dishwasher salt needs to be added to the salt container. This helps soften hard water and improve cleaning results.

7. TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start.	Power cord not plugged in; door not closed properly; circuit breaker tripped.	Ensure power cord is secure; close door firmly; reset circuit breaker.

Problem	Possible Cause	Solution
Dishes are not clean.	Improper loading; clogged spray arms; insufficient detergent; incorrect program selection; dirty filters.	Reload dishes correctly; clean spray arms; use appropriate detergent amount; select suitable program (e.g., 70° Intensive Wash); clean filters.
White streaks on dishes.	Insufficient rinse aid; hard water.	Refill rinse aid dispenser; check salt level and refill if necessary.
Dishwasher is noisy.	Items interfering with spray arms; foreign object in pump; improper installation.	Rearrange dishes; check for foreign objects; ensure dishwasher is level.
Water not draining.	Clogged drain hose or filter; drain pump malfunction.	Clean drain hose and filters; if problem persists, contact service.

If the problem persists after attempting these solutions, please contact Midea customer service or an authorized service technician.

8. SPECIFICATIONS

Feature	Specification
Model Name	WQP147605V-W
Brand	Midea
Installation Type	Freestanding
Place Settings	14
Number of Programs	6 Auto Programs (including 70° Intensive Wash, Rapid Wash)
Special Functions	Half Load Function, Off-Peak Wash, Child Lock
Energy Efficiency	A++
Noise Level	49 Decibels
Water Consumption (Economy Program)	11 Liters
Energy Consumption (Economy Program)	0.93 kWh
Annual Energy Consumption	262.36 kWh per year
Voltage	220-240 Volts
Product Dimensions (D x W x H)	59.8 x 60 x 84.5 cm
Item Weight	41 Kilograms
Finish Type	Enamelled coating
Material Type	Stainless Steel (interior)
Display Type	LCD

Feature	Specification
Included Components	User Manual

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your Midea WQP147605V-W dishwasher or consult the full user manual. The product includes a user manual with detailed information on warranty terms and conditions.

For technical support, service requests, or inquiries regarding your appliance, please contact Midea customer service through their official channels. Ensure you have your model number (WQP147605V-W) and purchase details available when contacting support.

© 2023 Midea. All rights reserved.