

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Geepas](#) /
- › [Geepas GHB5468 700W Stainless Steel Hand Blender User Manual](#)

Geepas GHB5468

Geepas GHB5468 700W Stainless Steel Hand Blender User Manual

Model: GHB5468 | Brand: Geepas

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Incorrect operation can cause damage to the appliance and injury to the user.

- Always ensure the voltage on the rating label corresponds to your mains voltage.
- Do not immerse the motor unit in water or any other liquid.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury and damage to the appliance.
- Blades are sharp. Handle with extreme care when cleaning.
- Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- For household use only. Do not use outdoors.

2. PRODUCT OVERVIEW

The Geepas GHB5468 Hand Blender is designed for efficient blending with its powerful motor and durable stainless steel components.

Components:

- **Motor Unit:** Contains the 700W DC motor and control buttons.
- **Blending Shaft:** Detachable stainless steel shaft with ultra-sharp blades.

- **Speed Control Buttons:** Two speed options, including a Turbo function.



Figure 2.1: Geepas GHB5468 Hand Blender - Full View



Figure 2.2: Speed Control Buttons (Normal and Turbo)

3. SETUP AND ASSEMBLY

Before first use, ensure all packaging materials are removed and clean the blending shaft as described in the 'Cleaning and Maintenance' section.

1. Align the blending shaft with the motor unit.
2. Twist the blending shaft clockwise until it locks securely into place. You should hear a click.
3. Ensure the blending shaft is firmly attached before plugging the appliance into a power outlet.



Figure 3.1: Attaching/Detaching the Blending Shaft

4. OPERATING INSTRUCTIONS

The Geepas GHB5468 Hand Blender offers two speed settings for versatile blending.

1. Ensure the blending shaft is securely attached to the motor unit.
2. Plug the appliance into a 240V power outlet.
3. Immerse the blending shaft into the ingredients you wish to blend. Ensure the liquid level is below the maximum fill line if using a container.
4. Press the **Normal Speed** button for regular blending tasks.
5. For tougher ingredients or faster blending, press the **Turbo Speed** button.
6. Move the blender up and down gently to ensure all ingredients are blended evenly.
7. Release the button to stop the appliance.
8. After use, unplug the blender from the power outlet before detaching the blending shaft.

Blending Tips:

- For best results, cut large ingredients into smaller pieces before blending.
- Do not operate the blender continuously for more than 1 minute. Allow it to cool down for a few minutes between cycles.
- Use a tall container to prevent splashing.



Figure 4.1: Blending Ingredients

Video 4.1: Demonstration of Geepas GHB5468 Hand Blender Assembly and Operation

5. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your hand blender.

1. Always unplug the appliance before cleaning.

2. Detach the blending shaft from the motor unit by twisting it counter-clockwise.
3. The blending shaft is dishwasher safe. Alternatively, wash it with warm soapy water and rinse thoroughly. Handle blades with extreme care.
4. Wipe the motor unit with a damp cloth. Never immerse the motor unit in water or any other liquid.
5. Dry all parts thoroughly before reassembling or storing.

6. TROUBLESHOOTING

If you encounter any issues with your Geepas GHB5468 Hand Blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet not working; blending shaft not properly attached.	Check power connection; test outlet with another appliance; ensure blending shaft is securely locked.
Motor runs but blades do not spin.	Blending shaft not properly attached.	Reattach the blending shaft, ensuring it locks into place.
Blender stops during operation.	Overheating due to continuous use; ingredients too tough.	Unplug and let cool for 10-15 minutes; cut ingredients into smaller pieces; use Turbo speed for tough items.
Splashing during blending.	Container too wide; too much liquid.	Use a taller, narrower container; reduce liquid volume.

If the problem persists, please contact customer support.

7. SPECIFICATIONS

- **Model:** GHB5468
- **Brand:** Geepas
- **Power:** 700 Watts
- **Voltage:** 240 Volts
- **Material:** Stainless Steel (Body and Blades)
- **Number of Speeds:** 2 (Normal, Turbo)
- **Special Feature:** Lightweight design
- **Dishwasher Safe:** Blending shaft only
- **Recommended Use:** Blending
- **Included Components:** User Manual
- **Country of Origin:** China

8. WARRANTY AND SUPPORT

Your Geepas GHB5468 Hand Blender comes with a standard manufacturer's warranty. For details regarding the warranty period and terms, please refer to the warranty card included in your product packaging.

Extended warranty plans may be available for purchase. For example, a 2-year extended warranty plan for kitchen appliances (SAR 0 - SAR 499.99) is offered, delivered via email. Please check with your retailer for availability.

For technical support, service, or spare parts, please contact Geepas customer service through their official website or the contact information provided in your product documentation.