

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Easytry123](#) /

› [Easytry123 Remote Control User Manual for ProScan TV Models](#)

**Easytry123 PLDED6535A-UHD, PLED6515-C-UHD, PLED4897A, PLED1526A-CAR, PLED2329A-B, PLDED6535A**

# Easytry123 Remote Control User Manual

For ProScan LCD LED HDTV TV Models: PLDED6535A-UHD, PLED6515-C-UHD, PLED4897A, PLED1526A-CAR, PLED2329A-B, PLDED6535A

## 1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Easytry123 replacement remote control. This remote is designed to be compatible with specific ProScan LCD LED HDTV TV models. Please read this manual thoroughly before use to ensure optimal performance and longevity of your remote control.

## 2. SETUP: BATTERY INSTALLATION

The remote control requires two AA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two new AA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Image: Back of the remote control with the battery cover removed, illustrating the correct orientation for AA battery insertion.

Once batteries are installed, the remote control is ready for use with your compatible ProScan TV.

## 3. OPERATING THE REMOTE CONTROL

This remote control is a direct replacement and requires no programming for the specified ProScan TV models. Simply point the remote control towards your television and press the desired function buttons.

- **Power Button:** Turns the TV on or off.

- **Channel Buttons:** Changes TV channels.
- **Volume Buttons:** Adjusts the TV volume.
- **Input/Source Button:** Selects different input sources (e.g., HDMI, AV).
- **Navigation Buttons:** Used to navigate menus and select options.

For specific functions and menu navigation, refer to your ProScan TV's original user manual.

## 4. IMPORTANT COMPATIBILITY INFORMATION

This remote control is designed to work with a range of ProScan TV models. It is crucial to verify that your TV model number is listed as compatible. Please note that some ProScan TV models may have similar names but require different remote controls due to variations in their internal systems.

Always ensure the suffix of your TV model exactly matches the compatible models listed for this remote. For example, models like PLDED5068A, PLDED5068A-S, PLDED5068A-C, and PLDED5068A-D may require different remotes despite their similar base model number.

Image: Visual guide illustrating that different remote models, even with similar numbering (e.g., PDDED1960A vs. PLED1960A-E), are not cross-compatible.

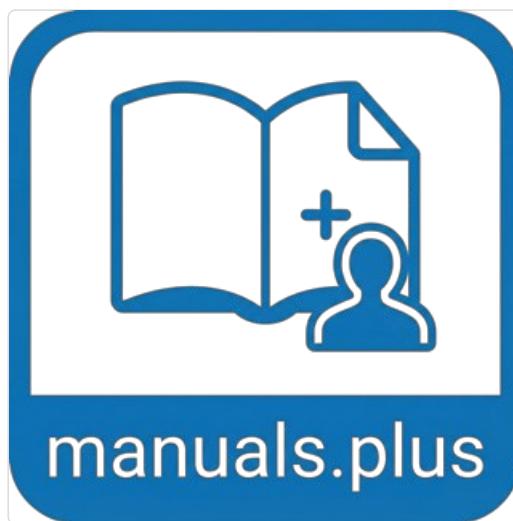


Image: Another visual guide emphasizing that specific suffixes (e.g., RLEDV2488A-B) denote different remote types and are not interchangeable with a base model (RLEDV2488A).

## 5. CARE AND MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote control to extreme temperatures, direct sunlight, moisture, or dust.

## 6. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new AA batteries.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Make sure you are pointing the remote directly at the TV.

- **Some buttons not working:**

- This may indicate low battery power. Try replacing the batteries.
- Ensure the remote is clean and free from debris that might obstruct button presses.

- **Remote works intermittently:**

- This is often a sign of weak batteries. Replace them.
- Ensure consistent line of sight to the TV's IR receiver.

If these steps do not resolve the issue, please contact customer support for further assistance.

## 7. SPECIFICATIONS

<b>Brand</b>	Easytry123
<b>Compatible Devices</b>	Television (ProScan LCD LED HDTV)
<b>Max Number of Supported Devices</b>	1
<b>Color</b>	Black
<b>Special Feature</b>	Ergonomic design
<b>Battery Type</b>	2 x AA (not included)

## 8. WARRANTY AND SUPPORT

This product is a replacement remote control. For any questions, concerns, or troubleshooting assistance not covered in this manual, please contact the seller directly. They can provide specific guidance related to your purchase and compatibility.

Please retain your purchase receipt for any potential support inquiries.