

Amazon Basics SH07-0100-005-SG-A05

Amazon Basics Children's Multi-Functional 3 Shelf Bookcase and Toy Storage Bin

User Manual

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Amazon Basics Children's Multi-Functional 3 Shelf Bookcase and Toy Storage Bin. Please read all instructions carefully before assembly and use, and retain this manual for future reference.

The Amazon Basics Children's Multi-Functional Bookcase and Toy Storage Bin is designed to help organize toys, books, and collectibles in children's playrooms, bedrooms, or family rooms. Its kid-friendly height and design make it easy for children to access and put away their belongings, fostering organizational skills from an early age.



Image: The Amazon Basics Children's Multi-Functional Bookcase and Toy Storage Bin shown in a room setting, demonstrating its use for storing books and various toys.

2. SAFETY INFORMATION

Always prioritize safety when assembling and using this product. Failure to follow these safety guidelines could result in injury or damage to the product.

- **Adult Assembly Required:** This product requires adult assembly. Keep small parts and assembly hardware away from children during assembly.
- **Anti-Tip Device:** If an anti-tip device is included, it is strongly recommended to install it to prevent the unit from tipping over, especially in households with children. Secure the unit to a wall stud using the provided hardware.
- **Weight Limits:** Do not overload shelves or bins. Distribute weight evenly. Exceeding weight limits can cause the unit to become unstable or collapse.
- **Placement:** Place the unit on a flat, level surface. Avoid placing it near heat sources, direct sunlight, or in damp environments.

- **Regular Inspection:** Periodically check all fasteners to ensure they remain tight. Retighten as necessary.
- **Supervision:** Always supervise children when they are interacting with the storage unit to ensure safe use.

3. SETUP AND ASSEMBLY

The Amazon Basics Children's Multi-Functional Bookcase and Toy Storage Bin is designed for quick and easy assembly. Detailed, step-by-step assembly instructions and all necessary hardware are included within the product packaging.

- **Unpack:** Carefully unpack all components and hardware from the box. Lay them out on a clean, soft surface to prevent scratches.
- **Identify Parts:** Refer to the parts list in the included assembly guide to identify each component.
- **Follow Instructions:** Assemble the unit by following the numbered steps in the provided assembly manual. Ensure all screws and fasteners are securely tightened.
- **Tools:** Basic household tools (e.g., screwdriver, hammer) may be required for assembly.



Image: An assembled view of the Amazon Basics Children's Multi-Functional Bookcase and Toy Storage Bin, showcasing its three shelves and lower toy bin.

4. OPERATING INSTRUCTIONS

This multi-functional storage unit offers versatile options for organizing children's items.

- **Top Flat Shelf:** Ideal for displaying decorative items, small toys, or frequently accessed books.
- **Rectangular Cubbyhole Shelves:** Two open shelves provide space for organizing books, board games, or larger toys.
- **Angled Toy Bins:** The two lower angled bins are perfect for quick storage of various toys, allowing children easy access and encouraging them to put items away.

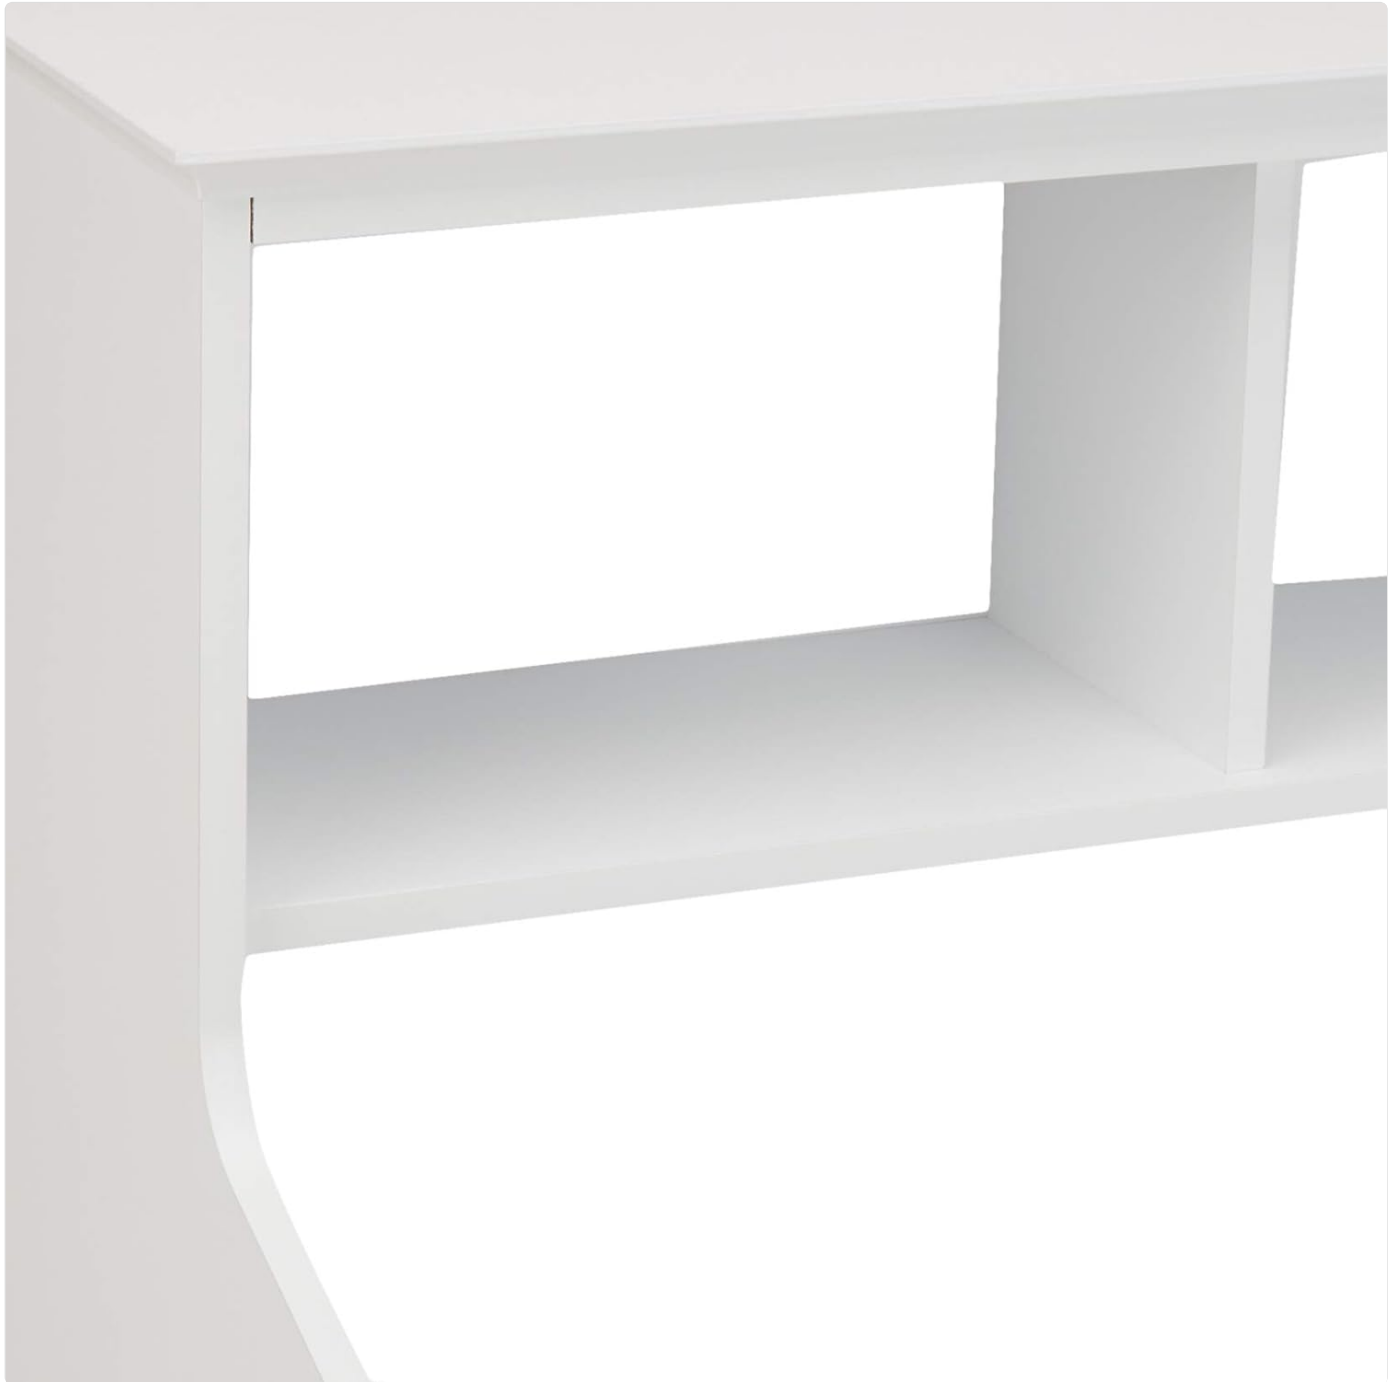


Image: A detailed view highlighting the different storage compartments: the top flat shelf, the two rectangular cubbyhole shelves, and the lower angled toy bin.

5. MAINTENANCE

To ensure the longevity and appearance of your storage unit, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the unit with a dry, soft cloth. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the finish.
- **Avoid Moisture:** Do not expose the unit to excessive moisture or humidity, which can cause warping or damage.
- **Sunlight:** Prolonged exposure to direct sunlight may cause fading or discoloration over time.

6. TROUBLESHOOTING

If you encounter any issues with your storage unit, consider the following common solutions:

- **Unit is Wobbly:**
 - Ensure the unit is placed on a flat, level surface.
 - Check all assembly fasteners and tighten any that are loose.
- **Scratches or Dents:**
 - The unit features a resilient finish designed to resist scratches and dents. Minor imperfections may be touched up with furniture repair pens matching the white finish.
- **Missing Parts:**
 - If any parts or hardware are missing from the original packaging, contact Amazon Basics customer support for assistance.

7. SPECIFICATIONS

Brand	Amazon Basics
Model Number	SH07-0100-005-SG-A05
Product Dimensions (L x D x H)	79.38 x 37.69 x 62.38 cm (31.25 x 14.84 x 24.56 inches)
Weight	14.97 kg (33 lbs)
Mounting Type	Floor Mount
Room Type	Bedroom, Playroom, Family Room
Shelf Type	Cubby Shelf, Angled Bin
Shape	Rectangular
Age Range (Description)	Toddler
Finish Type	White
Product Care Instructions	Wipe with Dry Cloth
Assembly Required	Yes

8. WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the documentation included with your purchase or visit the

official Amazon Basics website. Amazon Basics products typically come with a limited warranty covering defects in materials and workmanship.

If you require further assistance, have questions about assembly, or need to report a missing part, please contact Amazon customer support. You can usually find contact information on the Amazon website under the 'Help' or 'Customer Service' sections, or by visiting the [Amazon Basics Store](#) page.