

Omax M283

Omax M283 Digital Stainless Steel Watch User Manual

Model: M283 | Brand: Omax

INTRODUCTION

This manual provides comprehensive instructions for the Omax M283 Digital Stainless Steel Watch. Please read this manual carefully to understand the functions and proper operation of your watch. Keep this manual for future reference.

PRODUCT OVERVIEW

The Omax M283 is a digital watch featuring a durable stainless steel case and band, an LCD display, and multiple functions including alarm, chronograph, EL backlight, and date display. It is designed for everyday use with water resistance.

Key Features:

- Digital LCD Display
- Alarm Function
- Chronograph (Stopwatch) Function
- EL Backlight for low-light visibility
- Date Display
- Stainless Steel Case and Band
- Mineral Dial Window Material
- Water Resistant

Watch Components:



Figure 1: Front View of Omax M283 Digital Watch. This image displays the watch face, showing the digital display, the Omax logo, and the labels for the control buttons on the sides.



Figure 2: Side View of Omax M283 Digital Watch. This image highlights the two control buttons located on the right side of the watch case, typically used for mode selection and setting adjustments.

The watch typically features four buttons: MODE, LIGHT, ADVANCE/LAP/RESET, and STOP/DATE. Their exact positions are indicated on the watch case.

SETUP

Setting Time and Date:

1. In normal time display mode, press the **MODE** button repeatedly until the time setting mode is activated (usually indicated by flashing digits).

2. Use the **ADVANCE/LAP/RESET** button to adjust the flashing digit (hours, minutes, seconds).
3. Press the **STOP/DATE** button to move to the next digit or setting (e.g., from hours to minutes, then to date).
4. Once all settings are correct, press the **MODE** button to exit the setting mode and return to normal time display.

Setting the Alarm:

1. From normal time display, press the **MODE** button until the alarm time is displayed.
2. Press the **ADVANCE/LAP/RESET** button to adjust the alarm hours.
3. Press the **STOP/DATE** button to switch to alarm minutes, then use **ADVANCE/LAP/RESET** to adjust.
4. Press **MODE** to confirm and exit.
5. To activate/deactivate the alarm, typically press **ADVANCE/LAP/RESET** while in alarm display mode. An alarm icon will appear/disappear.

OPERATING INSTRUCTIONS

Mode Navigation:

Press the **MODE** button to cycle through the different functions: Time Display → Alarm Setting → Chronograph → Time Setting (if applicable) → Back to Time Display.

Using the Chronograph (Stopwatch):

1. Navigate to the Chronograph mode using the **MODE** button. The display will show "00:00:00".
2. Press **ADVANCE/LAP/RESET** (or START button) to start the stopwatch.
3. Press **ADVANCE/LAP/RESET** again to pause/resume.
4. To record a lap time, press **STOP/DATE** (or LAP button) while the stopwatch is running. The lap time will display briefly.
5. To stop the stopwatch, press **ADVANCE/LAP/RESET** (or STOP button).
6. To reset the stopwatch to zero, press **STOP/DATE** (or RESET button) after stopping it.

EL Backlight:

Press the **LIGHT** button (usually located on the top left side of the watch) to illuminate the display for a few seconds, improving visibility in dark conditions.

Date Display:

In normal time display mode, pressing the **STOP/DATE** button (usually on the bottom right) will momentarily display the current date.

MAINTENANCE

Cleaning:

Wipe the watch regularly with a soft, dry cloth to remove dust and dirt. For stainless steel parts, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive

materials.

Water Resistance:

The Omax M283 watch is water resistant. This means it can withstand splashes, rain, and brief immersion in water. However, it is not suitable for swimming, diving, or hot water activities (e.g., showering, sauna) as steam and temperature changes can compromise the seals. Do not operate buttons while the watch is wet or submerged.

Battery Replacement:

When the display becomes dim or functions become erratic, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance integrity.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Time is incorrect:** Re-set the time following the "Setting Time and Date" instructions. Ensure you are in the correct AM/PM setting if applicable.
- **Alarm does not sound:** Ensure the alarm function is activated (check for the alarm icon on the display). Verify the alarm time is set correctly.
- **Buttons are unresponsive:** Ensure the watch is not wet. If the issue persists, a reset might be needed (consult a technician) or the battery might be very low.

SPECIFICATIONS

Feature	Detail
Brand	Omax
Model Number	M283 (also 2724314724640.0)
Display Type	Digital
Case Material	Stainless Steel
Case Dimension	35 mm
Band Material	Stainless Steel
Band Width	18 mm
Dial Window Material	Mineral
Clasp Type	Fold over
Movement	Japanese digital quartz
Water Resistance	Yes (suitable for splashes/rain, not swimming/diving)
Department	Unisex
Package Dimensions	10.01 x 7.39 x 6.6 cm

Item Weight	100 g
-------------	-------

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Omax website or contact your retailer. Keep your purchase receipt as proof of purchase.